



CYLINDER, CYLINDER HEAD 汽缸、汽缸頭

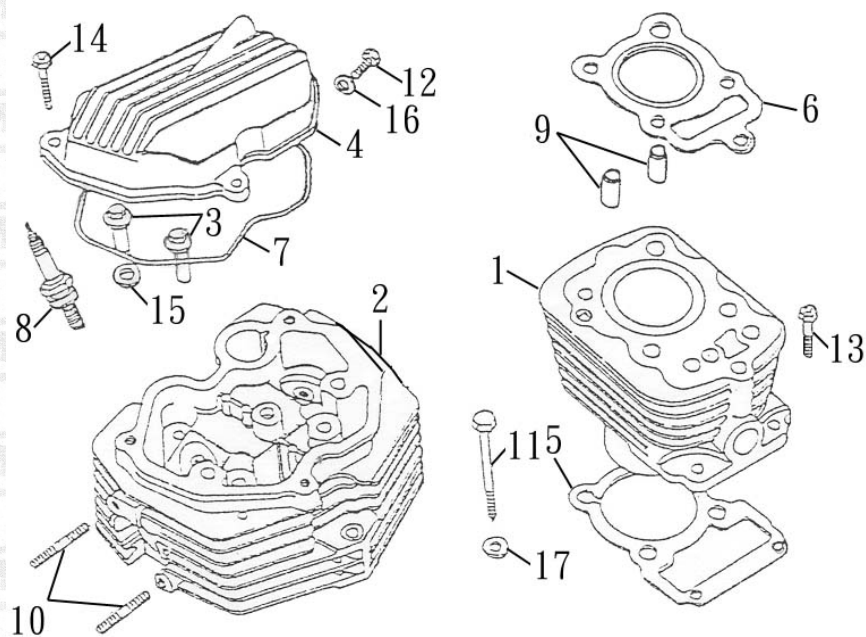


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	11111-CHH-00	CYLINDER COMP	汽缸	1	
2	11121-STG-01	HEAD COMP, CYLINDER	汽缸頭	1	
3	11127-CHP-00	NUT, CYLINDER HEAD	汽缸頭螺帽	4	
4	11141-ROA-00	COVER, CYLINDER HEAD	汽缸頭蓋	1	
5	11151-CHI-00	GASKET, CYLINDER	汽缸墊片	1	
6	11181-STG-00	GASKET, CYLINDER HEAD	汽缸頭墊片	1	
7	11191-CHP-00	GASKET, HEAD COVER	汽缸頭蓋墊圈	1	
8	62210-CHP-00	PLUG, SPARK (DR8EA NGK)	火星塞	1	
9	94410-10020	PIN, DOWEL 10*20	定位銷	3	
10	94717-07037-B	BOLT, STUD 7*37	雙頭螺栓	2	
11	96210-08087-B	BOLT, HEXAGON 8*79	六角螺栓	1	
12	96414-06012-B	BOLT, FLANGE 6*12	凸緣螺栓	1	
13	96414-06022-B	BOLT, FLANGE 6*22	凸緣螺栓	2	
14	96414-06028-B	BOLT, FLANGE 6*28	凸緣螺栓	3	
15	97201-122223-B	WASHER, PLANE 12.6*22*2.3	平面墊圈	2	
16	97230-061212	WASHER, COPPER 6.4*12*1.2	銅墊圈	1	
17	97230-081823	WASHER, COPPER 8.6*18*2.3	銅墊圈	1	

CRANKSHAFT, PISTON 曲軸、活塞

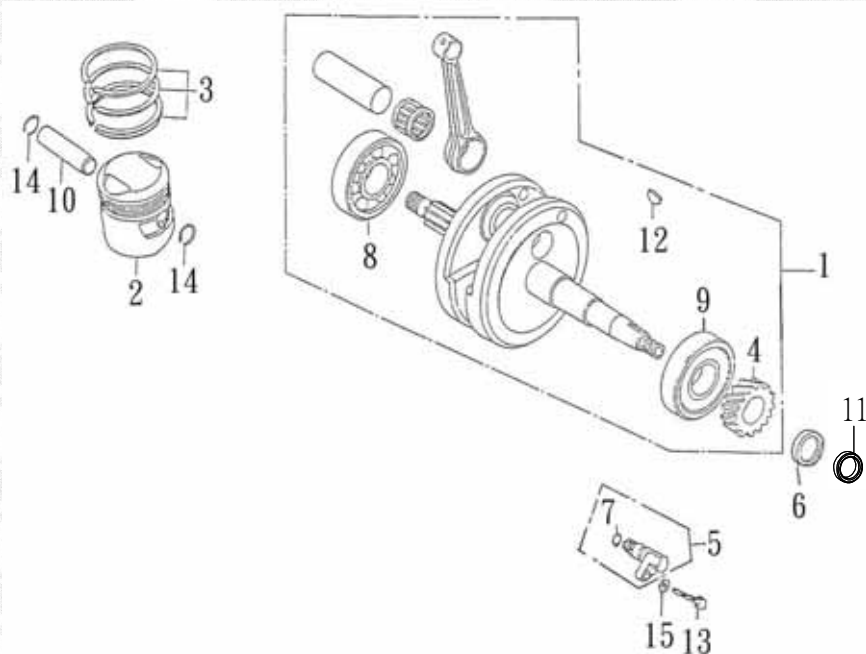

NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	11400-CHH-00	CRANKSHAFT COMP	曲軸總成	1	
2	11631-CHH-00	PISTON	活塞	1	
3	11636-STG-00	RING SET, PISTON	活塞環組	1	
4	14311-CHP-00	GEAR, TIMING DRIVE (22T)	正時齒輪	1	
5	15120-CHP-00	PLUG ASS'Y, BEARING PUSH	軸承推栓總成	1	
6	93110-34507	OIL SEAL 34*50*7	油封	1	
7	93210-25130	O-RING 2.5*13.0	護油圈	1	
8	93320-286818JU	BALL BEARING 6328JR2LUA	滾珠軸承	1	
9	93320-286818V	BALL BEARING 6328V4	滾珠軸承	1	
10	93510-091553	PIN, PISTON	活塞銷	1	
11	93510-202809-B	COLLAR	濾油網轉子隔管	1	
12	94420-04025	KEY, WOODRUFF 25*14*4	半圓鍵	1	
13	96414-06025-B	BOLT, FLANGE 6*25	凸緣螺栓	1	
14	97050-10017	CIRCLIP, PISTON PIN 15MM	活塞銷止動環	2	
15	97201-061415-B	WASHER, PLANE 6.2*14*1.5	平面墊圈	1	

OIL PUMP 機油泵

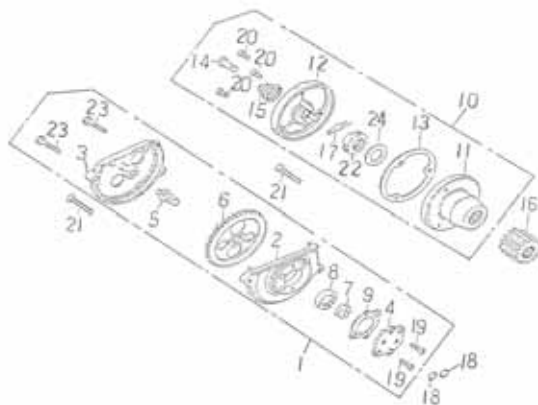


NO.	PARTS NO.	PARTS NAME	QTY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	13100-CHI-00	PUMP ASS'Y, OIL	1	機油泵總成
2	13111-CHI-00	BODY, OIL PUMP	1	機油泵本體
3	13112-CHP-00	COVER, OIL PUMP GEAR	1	機油泵齒輪蓋
4	13116-CHP-00	PLATE, OIL PUMP	1	機油泵平板
5	13121-CHP-00	SHAFT, OIL PUMP	1	機油泵齒輪軸
6	13124-CHI-00	GEAR, OIL PUMP	1	機油泵齒輪
7	13141-CHI-00	ROTOR, OIL PUMP INNER	1	機油泵內轉子
8	13142-CHI-00	ROTOR, OIL PUMP OUTER	1	機油泵外轉子
9	13151-CHP-00	GASKET, OIL PUMP	1	機油泵墊片
10	13301-CHP-00	OIL FILTER ROTOR ASS'Y	1	濾油網轉子總成
11	13310-CHP-00	ROTOR, OIL FILTER	1	濾油網轉子
12	13311-CHP-00	CAP, OIL FILTER ROTOR	1	濾油網轉子蓋
13	13316-CHP-00	WASHER, OIL FILTER ROTOR	1	濾油網轉子蓋墊片
14	13321-CHP-00	THROUGH OIL	1	通油器
15	13324-CHP-00	SPRING, OIL THROUGH	1	通油器彈簧
16	25641-CHP-00	GEAR, PRIMARY DRIVE (18T)	1	第一驅動齒輪
17	90230-12008	COTTER PIN 1.2*8	1	開尾銷
18	93210-24094	O-RING 2.4*9.4	2	護油圈
19	94712-04012-K	SCREW, FLAT HEAD 4*12	2	十字孔埋頭螺絲
20	94712-05012-C	SCREW, FLAT HEAD 5*12	3	十字孔埋頭螺絲
21	94712-06030-B	SCREW, FLAT HEAD 6*30	2	十字孔埋頭螺絲
22	95601-162810	NUT, RING 16MM	1	環形螺帽

2004.05.07

13100-CHI-00A

OIL PUMP 機油泵

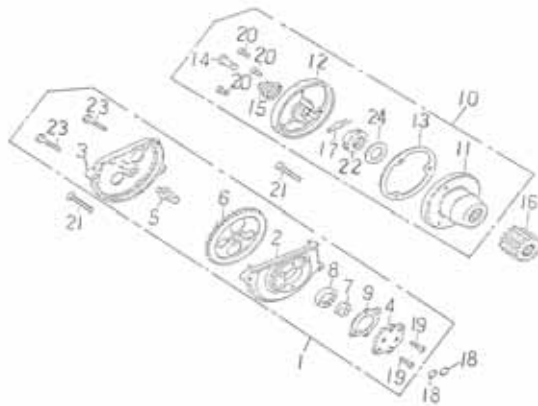


NO.	PARTS NO.	PARTS NAME	QTY	NOTE
項目	零件號碼	零件名稱	用量	備註
23	96210-05020-C	BOLT, HEXAGON 5*20	2	六角螺栓
24	97310-162720	WASHER, CONICAL SPRING 16.4*26.8*2	1	錐形彈簧墊圈

2004.05.07


13100-CHI-00A

CARBURETOR 化油器

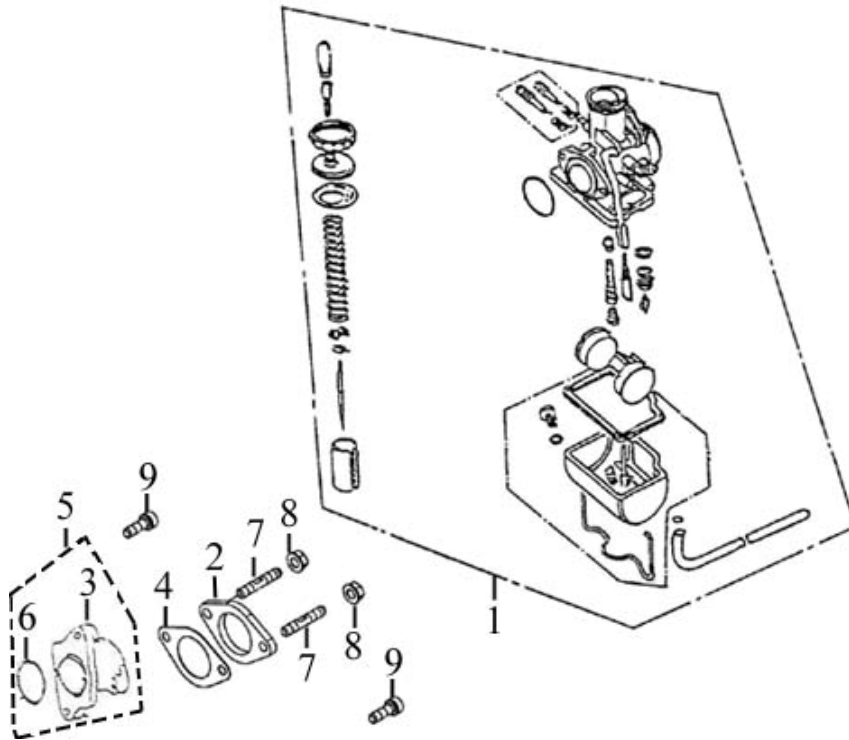

NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	13201-CHH-00	CARBURETOR ASS'Y	化油器總成	1	
2	13620-CHH-00	INSULATOR, CARBURETOR	化油器隔熱板	1	
3	13620-ROA-00	INSULATOR, CARB COMP	汽化器絕緣管	1	
4	13621-CBT-00	GASKET, CARBURETOR INSULATOR	隔熱板墊片	1	
5	13626-ROA-00	INSULATOR ASS'Y, CARB COMP	汽化器絕緣管組	1	
6	93210-30335	O-RING 3*33.5	護油圈	1	
7	94717-06037-B	BOLT, STUD 6*37	雙頭螺栓	2	
8	95401-061006-B	NUT, FLANGE 6MM	凸緣螺帽	2	
9	96414-06020-B	BOLT, FLANGE 6*20	凸緣螺栓	2	
10	13240-STG-01	MAIN-JET (#112)	主噴嘴	1	

VALVE 閥門

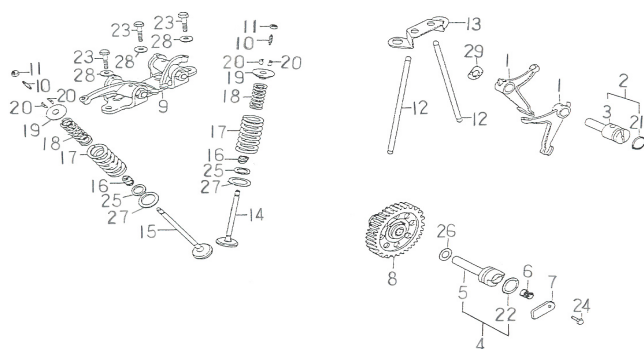


NO.	PARTS NO.	PARTS NAME	QTY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	14111-CHP-00	FOLLOWER, CAM	2	從動凸輪
2	14120-CHI-00	SHAFT COMP, CAM FOLLOWER	1	從動凸輪軸組
3	14121-CHI-00	SHAFT, CAM FOLLOWER	1	從動凸輪軸
4	14130-CHI-00	SHAFT COMP, CAM GEAR	1	凸輪齒輪軸組
5	14131-CHI-00	SHAFT, CAM GEAR	1	凸輪齒輪軸
6	14133-CHP-00	SPRING, CAM SHAFT	1	凸輪軸彈簧
7	14134-CHP-00	PLATE, SPG STOPPER	1	制止器板
8	14136-CHP-00	CAMSHAFT COMP	1	凸輪軸
9	14431-CHP-00	HOLDER COMP, ROCKER ARM	1	搖臂座組
10	14436-CHP-00	SCREW, TAPPET ADJUSTING	2	挺桿調整螺絲
11	14437-CHP-00	NUT, TAPPET ADJUSTING	2	挺桿調整螺帽
12	14501-CHH-00	ROD PUSH	2	推桿
13	14560-CHP-00	GUIDE PUSH ROD	1	推桿導板
14	14711-CHI-00	VALVE, IN	1	進氣閥門
15	14721-CHI-00	VALVE, EX	1	排氣閥門
16	14731-CHP-00	SEAL, VALVE STEM	2	閥門徑封
17	14751-CHP-00	SPRING, VALVE OUTER	2	閥門外彈簧
18	14761-CHP-00	SPRING, VALVE INNER	2	閥門內彈簧
19	14771-CHP-00	RETAINER, VALVE SPRING	2	閥門彈簧承盤
20	14781-CHP-00	COTTER, VALVE	4	閥門鎖扣
21	93210-25170	O-RING 2.5*17	1	護油圈
22	93210-25200	O-RING 2.5*20	1	護油圈

2004.09.11

14111-CHH-00A

VALVE 閥門

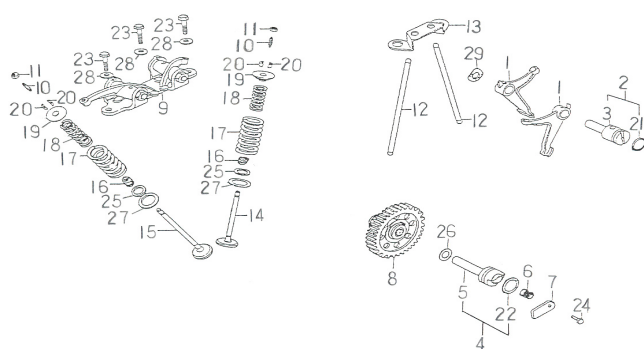


NO.	PARTS NO.	PARTS NAME	QTY	NOTE
項目	零件號碼	零件名稱	用量	備註
23	96210-08028-B	BOLT, HEXAGON 8*28	3	六角螺栓
24	96411-06012-B	BOLT, FLANGE 6*12	1	凸緣螺栓
25	97201-121805	SEAT, VALVE SPRING INNER 12.7*17.6*0.5	2	閥門內彈簧座
26	97201-142410	WASHER, PLANE 14.3*23.8*1	1	平面墊圈
27	97201-182610	SEAT, VALVE SPRING OUTER 18.9*26.2*1	2	閥門外彈簧座
28	97230-081823	WASHER, COPPER 8.6*18*2.3	3	銅墊圈
29	97311-122102	WASHER, WAVE 12.3*21*0.2	1	波浪墊圈

2004.09.11


14111-CHH-00A

CRANKCASE 曲軸箱

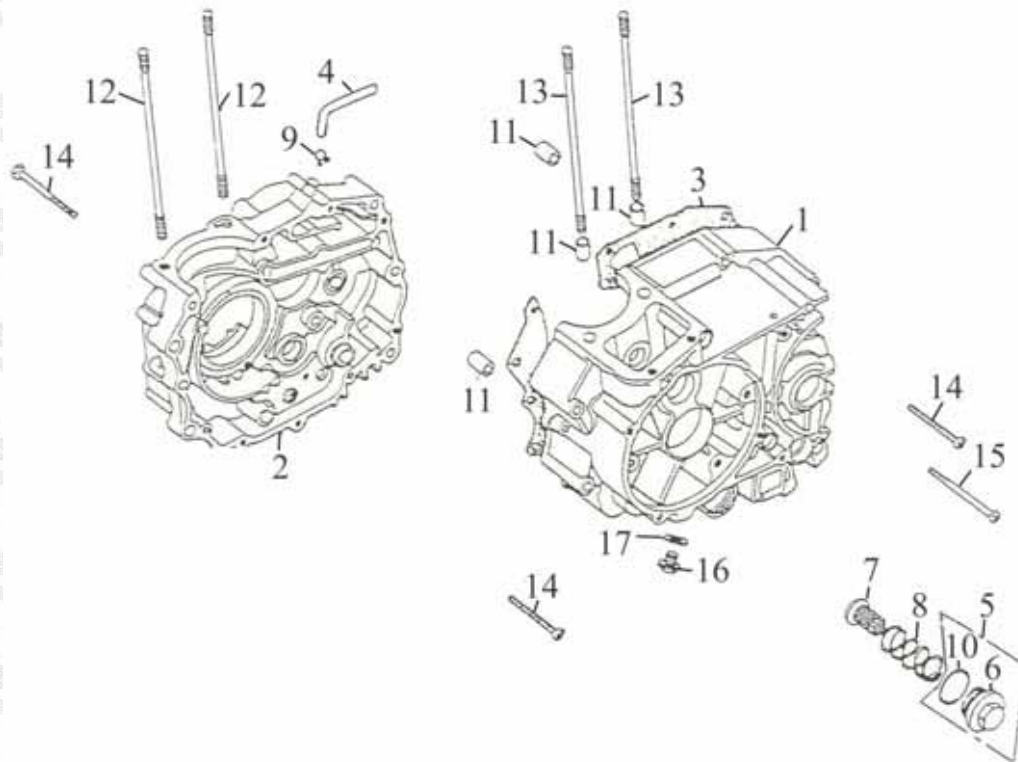


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	15111-CHI-00	CRANKCASE, LEFT	1	
2	15211-CHH-00	CRANKCASE, RIGHT	1	油冷
3	15251-CHI-00	GASKET, CRANKCASE	1	
4	15276-CHP-00	HOSE	1	
5	15531-CHP-00	CAP ASS'Y, OIL FILTER SCREEN	1	
6	15533-CHP-00	CAP, OIL FILTER SCREEN	1	
7	15536-CHP-00	SCREEN, OIL FILTER	1	
8	15538-CHP-00	SPRING, OIL FILTER SCREEN	1	
9	90210-10015	CLIP 1.0*14.7	1	
10	93210-30350	O-RING 3.0*35	1	
11	94410-10014	PIN, DOWEL 10*14	4	
12	94717-08127-C	BOLT, STUD 8*122	2	
13	94717-08131-C	BOLT, STUD 8*130	2	
14	96411-06050-B	BOLT, FLANGE 6*50	10	
15	96411-06095-B	BOLT, FLANGE 6*95	1	
16	96414-12015-B	BOLT, FLANGE 12*15	1	
17	97231-122020	WASHER, ALUMINUM 12.3*20*2	1	

LEFT CRANKCASE COVER 左曲軸箱蓋

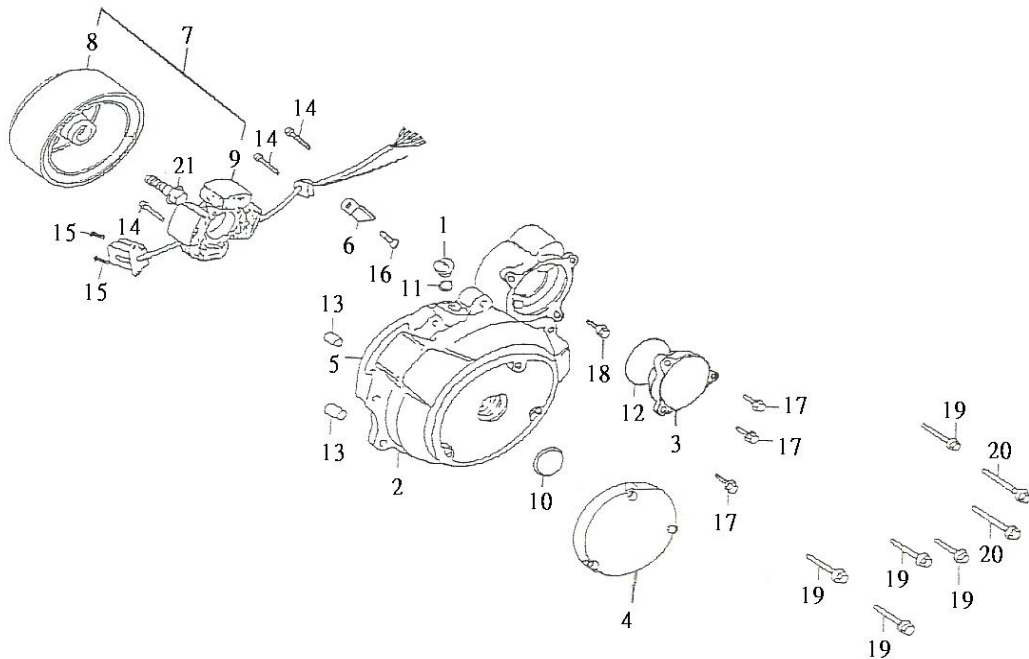


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	12655-ROA-00	CAP, A.C.G	1	A.C.G 蓋
2	15411-CHP-00	COVER, L CRANKCASE	1	左曲軸箱蓋
3	15416-CHP-00	COVER, REDUCTION GEAR	1	減速齒輪蓋
4	15417-CHP-00	CAP, L CRANKCASE COVER	1	左曲軸箱蓋飾蓋
5	15481-CHP-00	GASKET, L CRANKCASE COVER	1	左曲軸箱蓋墊片
6	15541-CHH-00	CLAMPER, WIRE HARNESS	1	配線固定板
7	35500-CHP-00	GENERATOR ASS'Y	1	發電機總成
8	35550-CHP-00	FLYWHEEL COMP	1	轉子總成
9	35560-CHP-00	STATOR COMP	1	發電機座總成
10	93210-24274	O-RING 2.4*27.4	1	護油圈
11	93210-25138	O-RING 2.5*13.8	1	護油圈
12	93210-30630	O-RING 3.0*63	1	護油圈
13	94410-10014	PIN, DOWEL 10*14	2	定位銷
14	96210-05025-B	BOLT, HEXAGON 5*25	3	六角螺栓
15	96310-05016-B	SCREW, PAN HEAD 5*16	2	十字孔頭螺絲
16	96411-06012-B	BOLT, FLANGE 6*12	1	凸緣螺栓
17	96411-06020-B	BOLT, FLANGE 6*20	3	凸緣螺栓
18	96411-06025-B	BOLT, FLANGE 6*25	1	凸緣螺栓
19	96411-06040-B	BOLT, FLANGE 6*40	5	凸緣螺栓
20	96411-06050-B	BOLT, FLANGE 6*50	2	凸緣螺栓
21	96414-10036-B	BOLT, FLANGE 10*36	1	凸緣螺栓

RIGHT CRANKCASE COVER 右曲軸箱蓋

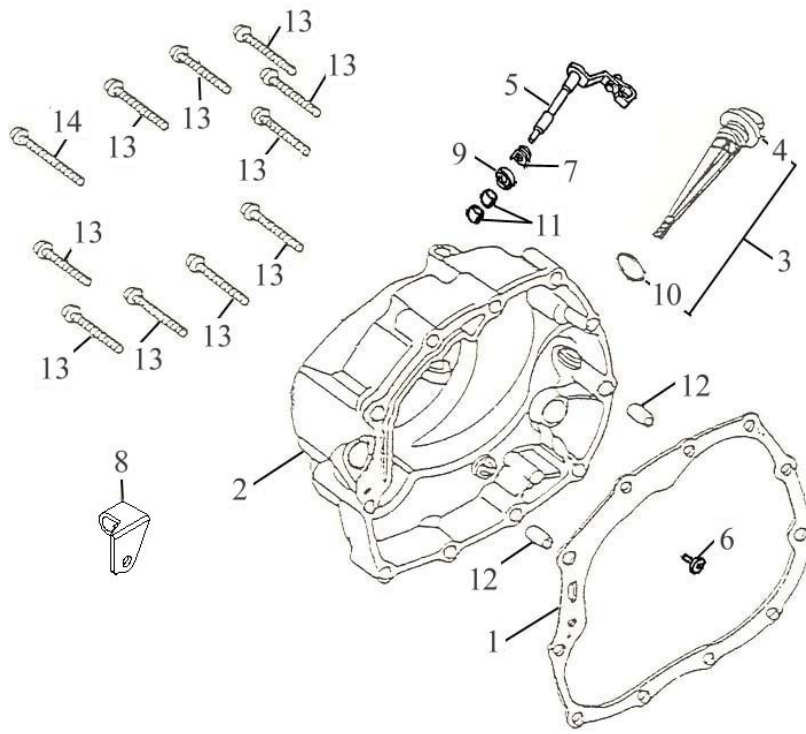

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	15221-CHP-00	GASKET, R CRANKCASE COVER	右曲軸箱蓋墊片	1	
2	15511-CHH-00	COVER, R CRANKCASE COMP	右曲軸箱蓋	1	
3	15561-CHP-00	GAUGE ASS'Y, OIL LEVEL	量油尺組	1	
4	15563-CHP-00	GAUGE, OIL LEVEL	量油尺	1	
5	25723-CBT-00	LEVER, CLUTCH	離合器拉桿	1	
6	25732-CBT-00	PUSHING PLATE	離合器推桿	1	
7	25753-CBT-00	SPRING, CLUTCH LEVER	離合器拉桿彈簧	1	
8	25793-CHH-00	HOLDER, CLUTCH WIRE	離合器導線固定座	1	
9	93110-12185	OIL SEAL KC 12*18*5	油封	1	
10	93210-30180	O-RING 3*18	護油圈	1	
11	93310-1216100	NEEDLE BEARING (HK-121610)	滾針軸承	2	
12	94410-08014	PIN, DOWEL 8*14	定位銷	2	
13	96411-06040-B	BOLT, FLANGE 6*40	凸緣螺栓	10	
14	96411-06050-B	BOLT, FLANGE 6*50	凸緣螺栓	1	

TRANSMISSION, STARTER 傳動系統、起動系統

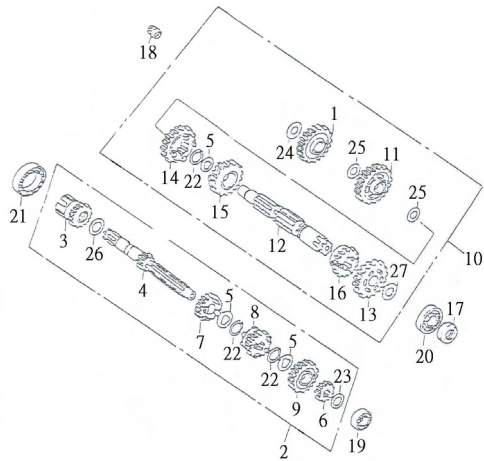


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	QTY 用量	NOTE 備註
1	25757-RAM-00	GEAR, IDLE STARTER	1	起動惰齒輪軸襯
2	26100-RAM-01	MAIN SHAFT ASS'Y	1	主軸總成
3	26110-RAM-00	GEAR, STARTER	1	起動桿齒輪
4	26111-CHP-00	MAIN SHAFT, TRANSMISSION 13T	1	傳動主軸
5	26118-CHP-00	WASHER, SPLINE 2.3*26*1.6	3	齒輪墊圈
6	26120-CHP-00	GEAR, MAIN SHAFT SECOND 17T	1	主軸二速齒輪
7	26130-RAM-00	GEAR, MAIN SHAFT THIRD 20T	1	主軸三速齒輪
8	26140-CHP-00	GEAR, MAIN SHAFT FOURTH 23T	1	主軸四速齒輪
9	26150-CHP-00	GEAR, MAIN SHAFT FIFTH 25T	1	主軸五速齒輪
10	26400-RAM-01	COUNTER SHAFT ASS'Y	1	副軸總成
11	26410-CHP-00	GEAR, COUNTER SHAFT LOW 36T	1	副軸低速齒輪
12	26411-CHP-00	COUNTER SHAFT, TRANSMISSION	1	傳動副軸
13	26420-CHP-00	GEAR, COUNTER SHAFT SECOND 32T	1	副軸二速齒輪
14	26430-RAM-00	GEAR, COUNTER SHAFT THIRD 28T	1	副軸三速齒輪
15	26440-CHP-00	GEAR, COUNTER SHAFT FOURTH 26T	1	副軸四速齒輪
16	26450-CHP-00	GEAR, COUNTER SHAFT FIFTH 24T	1	副軸五速齒輪
17	93110-20347	OIL SEAL 20*34*7	1	油封
18	93310-1521120	NEEDLE BEARING HK1512	1	滾針軸承
19	93320-153511Z	BALL BEARING 6202Z	1	滾珠軸承
20	93320-2047143	BALL BEARING 6204C3	1	滾珠軸承
21	93320-305513M	BALL BEARING 6006CM	1	滾珠軸承
22	97014-20012	CIRCLIP 20MM	3	C形扣環

2004.06.18

26100-RAM-02A

TRANSMISSION, STARTER 傳動系統、起動系統

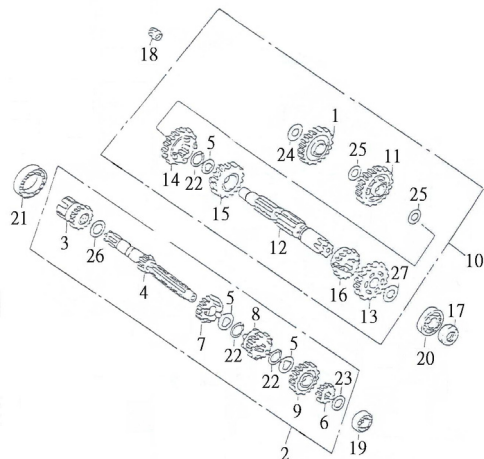


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	QTY 用量	NOTE 備註
23	97201-152510	WASHER, PLATE 15.4*24.8*1	1	平面墊圈
24	97201-153010	WASHER, PLATE 15.2*30*1	1	平面墊圈
25	97201-172405	WASHER, PLATE 16.8*24*0.5	2	平面墊圈
26	97201-202705	WASHER, PLATE 20.4*26.8*0.5	1	平面墊圈
27	97201-202710	WASHER, PLATE 20.4*26.8*1	1	平面墊圈

2004.06.18


26100-RAM-02A

STARTING MOTOR 起動馬達

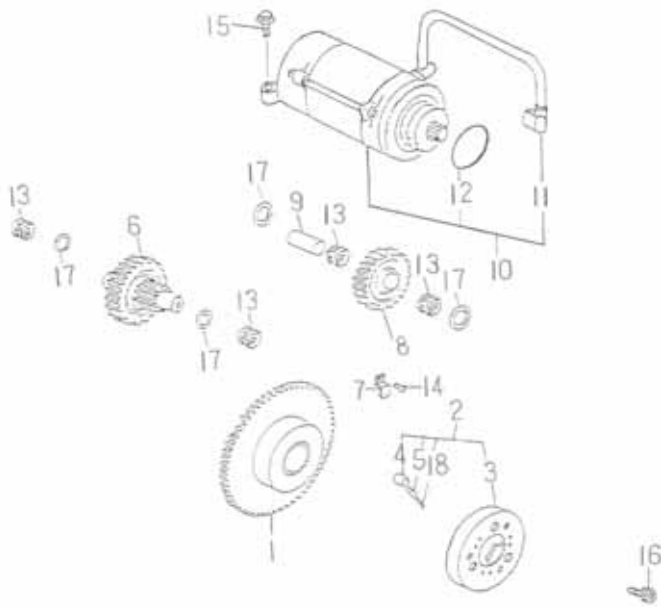

NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	23524-CHP-00	GEAR COMP, STARTING CLUTCH	起動輪	1	
2	23570-CHP-00	STARTING CLUTCH ASS'Y	起動離合器總成	1	
3	23574-CHP-00	OUTER COMP, STARTING CLUTCH	起動離合器座	1	
4	23576-CHP-00	ROLLER 10*12	起動離合器滾珠	3	
5	23578-CHP-00	CAP, STARTING CLUTCH ROLLER SPRING	起動離合器彈簧套	3	
6	23612-CHP-00	SHAFT, STARTER GEAR	起動齒輪軸	1	
7	23632-CHP-00	PLATE, SET GEAR	齒輪固定板	1	
8	23660-CHP-00	GEAR, REDUCTION	減速齒輪	1	
9	23663-CHP-00	SHAFT, REDUCTION GEAR 10*45	減速齒輪軸	1	
10	35800-CHP-00	MOTOR ASS'Y, STARTER	起動馬達總成	1	
11	35831-CHP-00	CABLE, STARTER MOTOR	起動馬達配線	1	
12	93210-31244	O-RING 3.1*24.4	護油圈	1	
13	93310-1014100	NEEDLE BEARING (HK1010)	滾針軸承	4	
14	96411-06012-B	BOLT, FLANGE 6*12	凸緣螺栓	1	
15	96414-06028-B	BOLT, FLANGE 6*28	凸緣螺栓	2	
16	96510-08018-C	BOLT, SOCKET 8*18	六角承窩螺栓	3	
17	97201-101805	WASHER, PLATE 10.5*18*0.5	平面墊圈	4	
18	97501-03025	SPRING, STARTING CLUTCH ROLLER	起動離合器彈簧	3	

GEAR SHIFT 變速機構

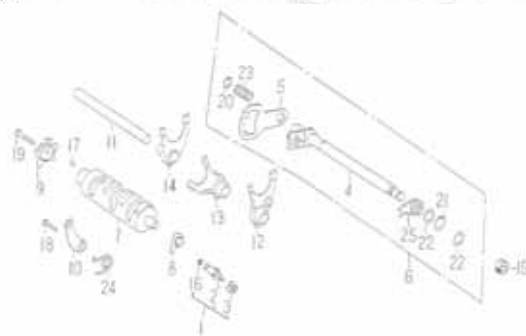


NO.	PARTS NO.	PARTS NAME	QTY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	15126-CHP-00	CONTACT ASS'Y, NEUTRAL SWITCH	1	空檔燈開關組
2	15127-CHP-00	CONTACT, NEUTRAL SWITCH	1	空檔燈接觸開關
3	15128-CHP-00	SPACER, NEUTRAL SWITCH	1	中立開關環
4	24201-CHP-00	SPINDLE, GEAR SHIFT	1	變速踏桿軸
5	24206-CHP-00	PLATE, GEAR SHIFT	1	齒輪變速板
6	24210-CHP-00	SPINDLE COMP, GEAR SHIFT	1	變速踏桿軸組
7	24220-CHP-00	DRUM, GEAR SHIFT	1	齒輪變速筒
8	24223-CHP-00	ROTOR, NEUTRAL SWITCH	1	空檔開關轉子
9	24226-CHP-00	CAM, GEAR SHIFT	1	齒輪變速凸輪
10	24228-CHP-00	STOPPER COMP, GEAR SHIFT	1	變速凸輪制止器
11	24236-CHP-00	SHAFT, GEAR SHIFT FORK	1	變速叉樞軸
12	24237-CHP-00	FORK, L GEAR SHIFT	1	齒輪變速左叉
13	24238-CHP-00	FORK, CENTER GEAR SHIFT	1	齒輪變速中叉
14	24239-CHP-00	FORK, R GEAR SHIFT	1	齒輪變速右叉
15	93110-14287	OIL SEAL, 14*28*7	1	油封
16	93210-19070	O-RING 1.9*7	1	護油圈
17	94510-40010	PIN, DOWEL 4*10	1	滾針
18	96210-06020-B	BOLT, HEXAGON 6*20	1	六角螺栓
19	96210-06025-B	BOLT, HEXAGON 6*25	1	六角螺栓
20	97010-12010	CIRCLIP 12MM	1	C形扣環
21	97010-14010	CIRCLIP 14MM	1	C形扣環
22	97201-142004	WASHER, PLATE 14.3*20*0.4	2	平面墊圈

2004.05.07

24210-CHP-00A

GEAR SHIFT 變速機構

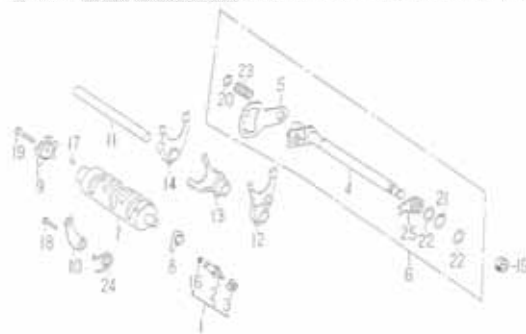


NO.	PARTS NO.	PARTS NAME	QTY	NOTE
項目	零件號碼	零件名稱	用量	備註
23	97501-12013	SPRING, GEAR SHIFT PLATE	1	變速板彈簧
24	97508-22140	SPRING, SHAFT DRUM STOPPER	1	制止器彈簧
25	97510-32080	SPRING, GEAR SHIFT RETURN	1	變速踏桿回位彈簧

2004.05.07

24210-CHP-00A

CLUTCH 離合器

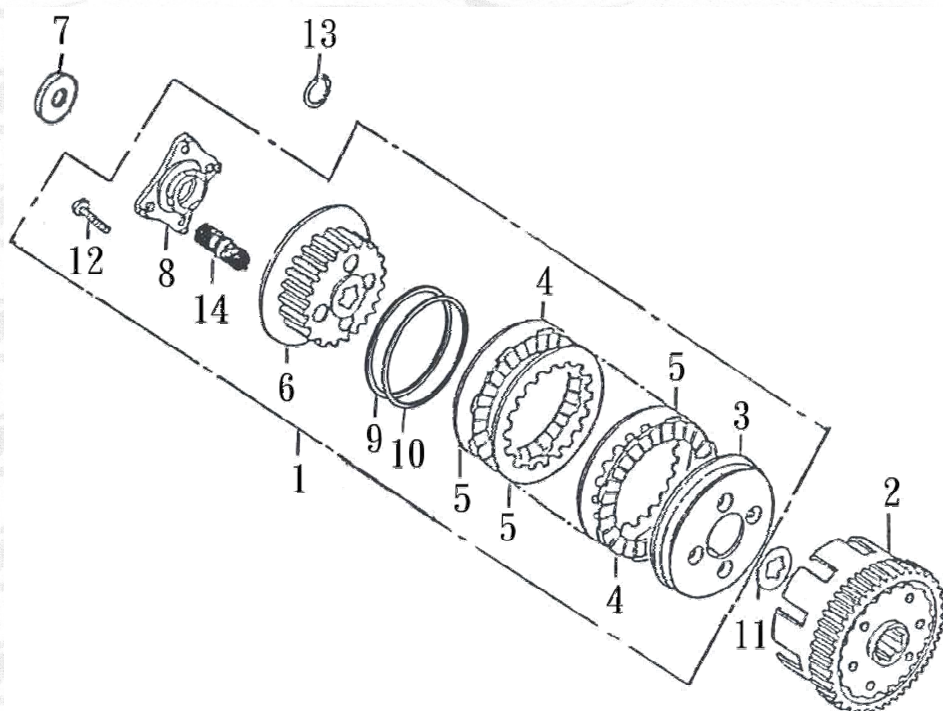

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	25602-CHH-00	CLUTCH COMP	離合器組	1	
2	25611-CHH-00	OUTER COMP, CLUTCH	離合器外套	1	
3	25621-CHH-00	PLATE, CLUTCH PRESSURE	離合器壓力板	1	
4	25622-CHP-00	DISK, CLUTCH FRICTION	離合器摩擦板	6	
5	25623-CHP-00	PLATE, CLUTCH	離合器板	6	
6	25661-CHH-00	CENTER, CLUTCH	離合器中心體	1	
7	25666-CBT-00	NEEDLE BEARING (12*35*8)	滾針軸承	1	
8	25670-CBT-00	PLATE, CLUTCH LIFTER	離合器舉升板	1	
9	25684-RAM-00	WASHER, SPLINE	離合器墊圈	1	
10	25686-RAM-00	WASHER, CONICAL SPRING	錐形彈簧墊圈	1	
11	25688-CHP-00	WASHER, SPLINE	離合器墊圈	1	
12	96414-06024-B	BOLT, FLANGE	凸緣螺栓	4	
13	97010-20012-K	CIRCLIP 20MM	C型扣環	1	
14	97501-26040	SPRING, CLUTCH	離合器彈簧	4	