 
 


EXHAUST MUFFLER 排氣管

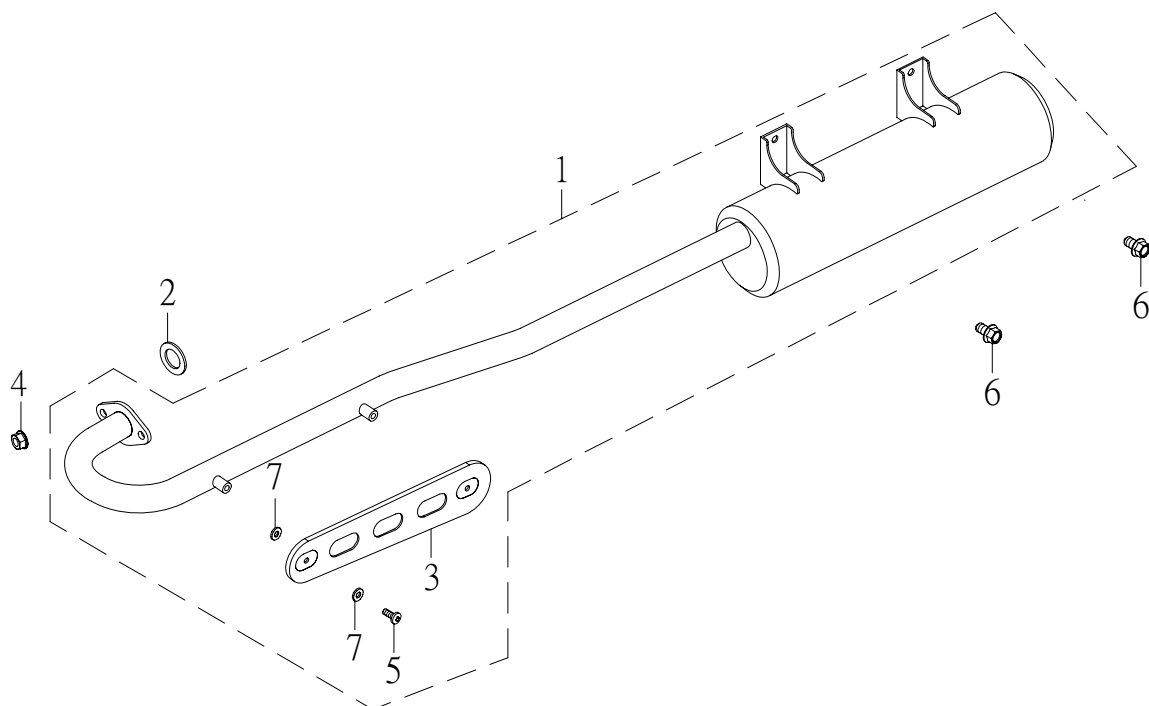


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	31610-JOE-00	EXHAUST MUFFLER ASS'Y	排氣管總成	1	
2	31613-JOW-00	GASKET, EXHAUST PIPE (29*36*4.8)	排氣管墊片	1	
3	31618-RAM-00	PROTECTOR, EXHAUST	排氣管護罩	1	
4	95401-081208-B	NUT, FLANGE	凸緣螺帽	2	
5	96316-06010-K	SCREW, PAN HEAD	十字孔頭螺絲	2	
6	96414-08016-B	BOLT, FLANGE	凸緣螺栓	2	
7	97210-061215	WASHER, PLATE	石棉墊圈	4	

REAR ARM 擺動臂

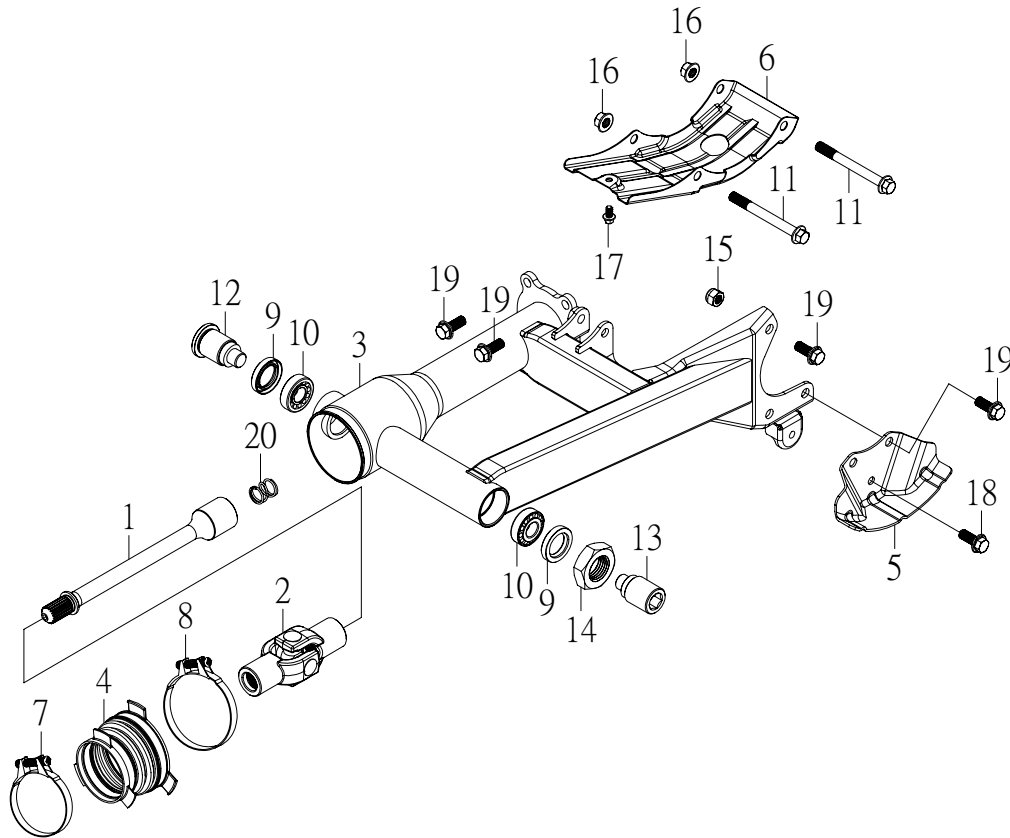


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	26481-JPE-00	DRIVE AXLE	傳動軸	1	
2	26486-JPE-00	JOINT, UNIVERSAL	傳動軸十字萬向接頭組	1	
3	32100-JPE-00	REAR ARM	擺動臂	1	
4	32117-JPE-00	DUCT	擺動臂防塵套	1	
5	32190-JPE-00L	COVER L	左下護蓋	1	
6	32190-JPE-00R	COVER R	右下護蓋	1	
7	90260-85069	CLIP	防塵套管夾	1	
8	90260-85087	CLIP	防塵套管夾	1	
9	93110-26405	OIL SEAL NG 6757	油封	2	
10	93325-174013	NEEDLE BEARING 30203	滾錐軸承	2	
11	94610-10113-B	BOLT, FLANGE	吊架固定軸	2	
12	94706-30027-C	SHAFT, PIVOT	擺動臂固定軸右	1	
13	94706-30040-C	SHAFT, PIVOT	擺動臂固定軸左	1	
14	95201-304611-C	NUT, HEXAGON	六角螺帽	1	
15	95311-101710-B	NUT, NYLON	尼龍螺帽	3	
16	95401-101409-B	NUT, FLANGE	凸緣螺帽	2	
17	96218-06012-B	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	1	
18	96414-08016-C	BOLT, FLANGE	凸緣螺栓	1	
19	96414-10025-C	BOLT, FLANGE	凸緣螺栓	7	
20	97501-1920023	SPRING, COMPRESSION	壓縮彈簧	1	

 REAR SUSPENSION 後懸吊系統

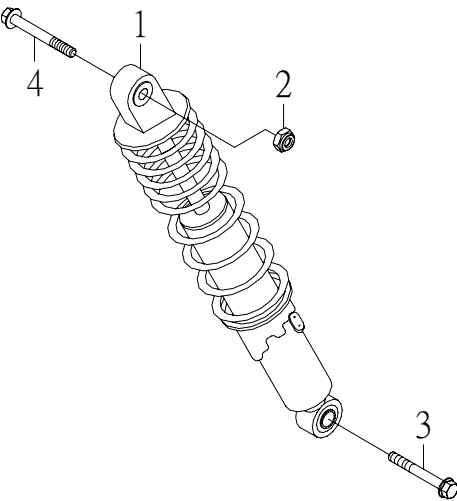


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	32210-JPE-00	SHOCK ABSORBER ASS'Y, REAR	後緩衝器總成	1	
2	95311-101710-B	NUT, NYLON	尼龍螺帽	1	
3	96414-10050-C	BOLT, FLANGE	凸緣螺栓	1	
4	96414-10055-B	BOLT, FLANGE	凸緣螺栓	1	

 FRAME 車架

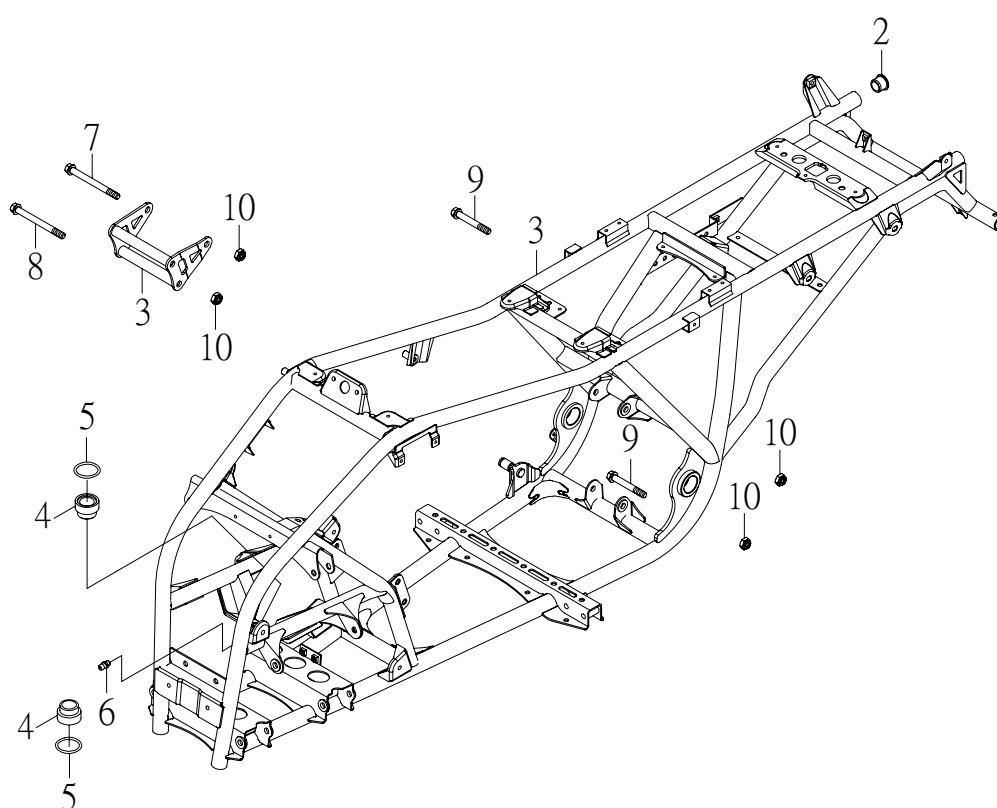


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	41110-JPE-01	FRAME COMP	車架整體	1	
2	41154-RAM-00	PLUG, SPECIAL SHAPE	管塞	2	
3	41181-JOW-00	ENGINE HANGER F	引擎前固定座	1	
4	46412-RAM-00	BUSH, SOLID	轉向桿襯套	2	
5	93210-24148	O-RING 2.4*14.8	護油圈	2	
6	94340-06010-B	NIPPLE, GREASE M6*P1.0	黃油嘴	1	
7	94610-10158-B	BOLT	前輪軸	1	
8	94610-10165-B	BOLT, FLANGE	吊架固定軸	2	
9	96414-10087-B	BOLT, FLANGE	凸緣螺栓	2	
10	95311-101710-B	NUT, NYLON	尼龍螺帽	5	

 CARRIER, FRONT 前架

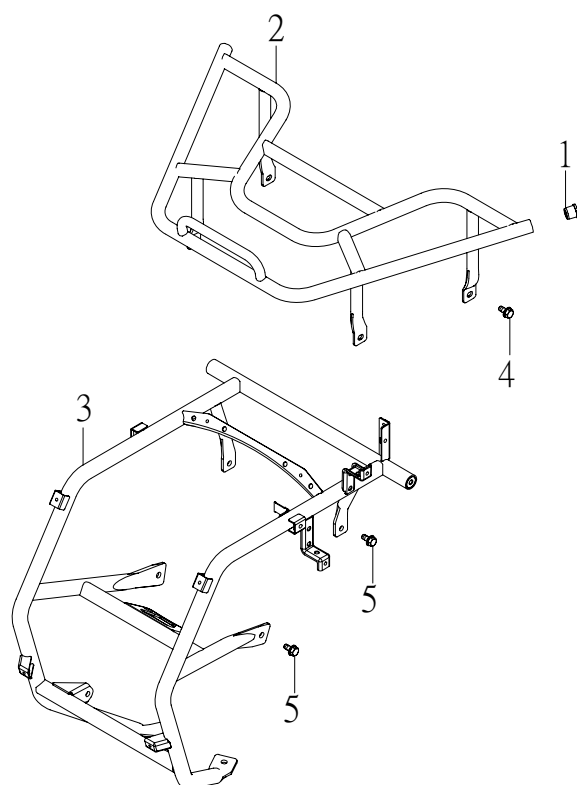


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	41154-JOW-00	PLUG, SPECIAL SHAPE	管塞	2	
2	41606-JOW-00	CARRIER, FRONT	前架	1	
3	41610-JOW-00	CRUTCH, FRONT	前支架	1	
4	96414-08014-B	BOLT, FLANGE	凸緣螺栓	4	
5	96414-08016-B	BOLT, FLANGE	凸緣螺栓	6	

 STEERING 轉向裝置

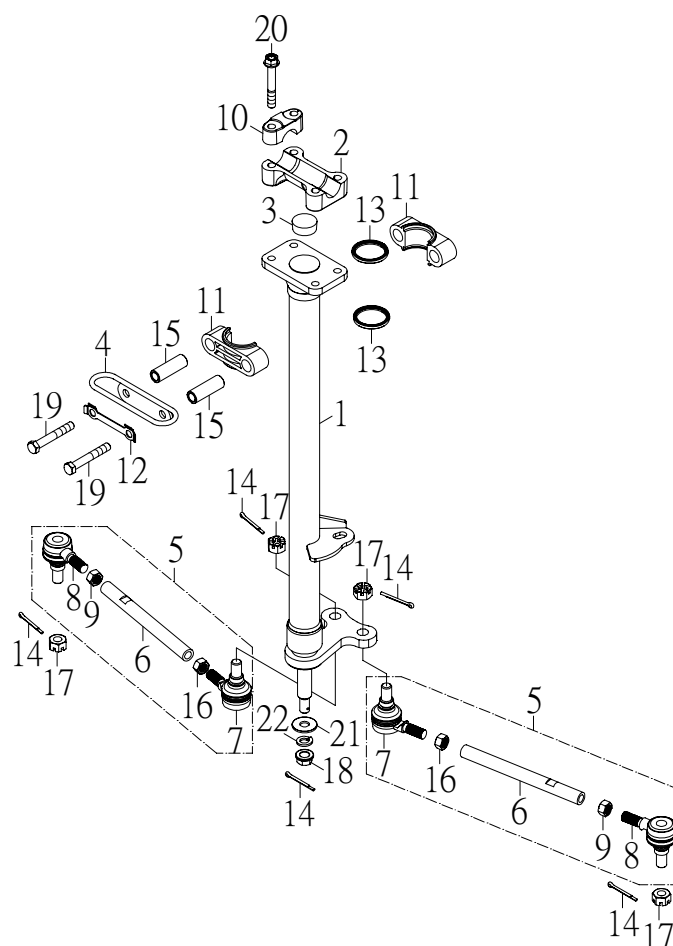


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	42101-JOW-00	COLUMN, STEERING	1	轉向桿
2	42106-SK9-00	BRIDGE, TOP	1	頂樑
3	42111-RAM-00	PLUG, TAPER	1	塞子
4	42118-RAM-00	BRACKET, STRG LOWER	1	導線環
5	42140-JOW-00	ROD, TIE ASS'Y	2	連桿總成
6	42141-JOW-00	ROD, TIE	2	連桿
7	42142-RAM-00	JOINT, UNIVERSAL 1	2	萬向接頭 內
8	42143-RAM-00	JOINT, UNIVERSAL 2	2	萬向接頭 外
9	42146-RAM-00	NUT	2	連桿螺帽
10	46125-RAM-00	HOLDER, HANDLE UPPER	2	把手上固定座
11	46411-RAM-00	BEARING, STEERING	2	轉向桿固定座
12	46416-RAM-00	WASHER, LOCK	1	制止片
13	46417-RAM-00	OIL SEAL	2	轉向桿封圈
14	90240-23020-B	COTTER PIN 2.3*20	5	開口銷
15	93510-081442-C	COLLAR	2	轉向桿座隔管
16	95201-101408-C	NUT, HEXAGON	2	六角螺帽
17	95321-101710-C	NUT, CASTLE	4	有槽螺帽
18	95401-101409-B	NUT, FLANGE	1	凸緣螺帽
19	96210-08060-B	BOLT, HEXAGON	2	六角螺栓
20	96414-08050-B	BOLT, FLANGE	4	凸緣螺栓
21	97201-102620-B	WASHER, PLATE	1	平面墊圈
22	97301-101720-B	WASHER, SPRING	1	彈簧墊圈

 FRONT SUSPENSION 前懸吊系統

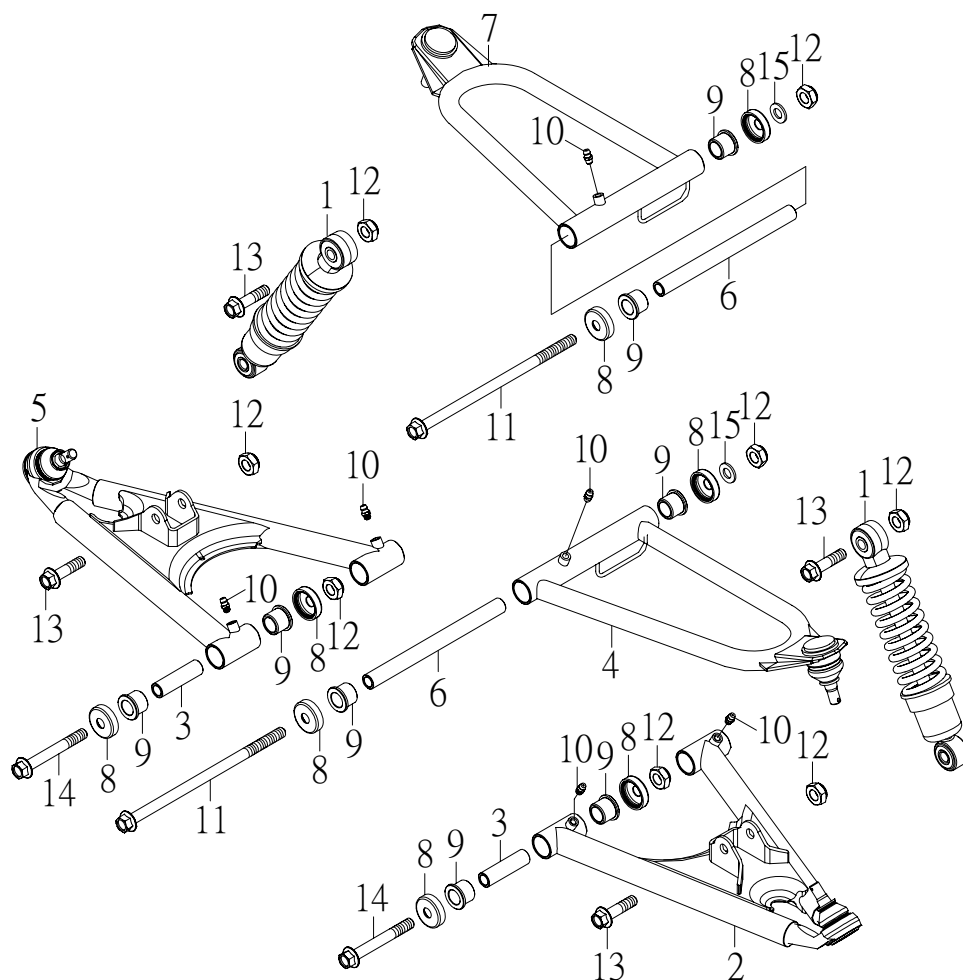


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42126-JPE-00	SHOCK ABSORBER ASS'Y	前緩衝器總成	2	
2	42161-JPE-00	FRT.LWR, ARM LEFT	左前下搖臂	1	
3	42163-RAM-00	COLLAR	下搖臂軸襯	4	
4	42166-JPE-00	FRT.UPPER, ARM LEFT	左前上搖臂	1	
5	42171-JPE-00	FRT.LWR, ARM RIGHT	右前下搖臂	1	
6	42173-RAM-00	COLLAR	上搖臂軸襯	2	
7	42176-JPE-00	FRT.UPPER, ARM RIGHT	右前上搖臂	1	
8	42183-RAM-00	COVER, THRUST	塵封蓋	12	
9	93330-152118	BUSH, SOLID	羅龍滑動軸承	12	
10	94340-06010-B	NIPPLE, GREASE M6*P1.0	黃油嘴	6	
11	94610-10208-B	SHAFT, PIVOT	上搖臂固定軸	2	
12	95311-101710-B	NUT, NYLON	尼龍螺帽	10	
13	96414-10055-B	BOLT, FLANGE	凸緣螺栓	4	
14	96414-10080-B	BOLT, FLANGE	凸緣螺栓	4	
15	97201-102020-B	WASHER, PLATE 10.5*20*2	平面墊圈	2	

 FRONT WHEEL 前輪

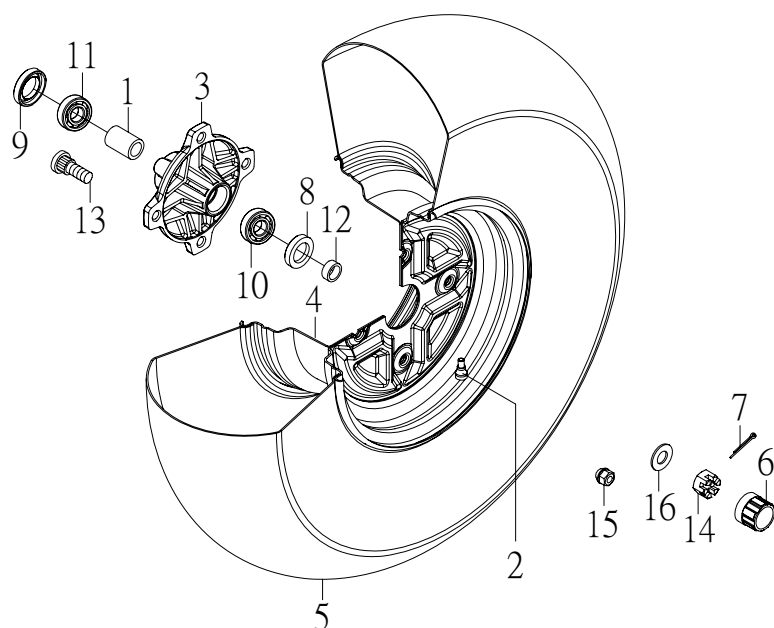


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	42515-RAM-00	SPACER, BEARING	2	
2	42570-RAM-00	VALVE, RIM	2	
	42570-CBW-00	VALVE, RIM	2	alloy
3	42581-JOW-00	HUB, FRONT	2	
4	42582-JOW-00	WHEEL, FRONT AT12*6AT	2	
	42582-JOW-01	WHEEL, FRONT AT12*6AT	2	alloy
5	42590-JOW-00	TIRE, FRONT 25*8-12 DI-2010 38F	2	
	42590-JOW-01	TIRE, FRONT AT25*8-12 K572 38N	2	
6	42595-SK9-00	CAP, WHEEL	2	
7	90240-29025-B	COTTER PIN 2.9*25	2	
8	93110-22357	OIL SEAL TC 22*35*7	2	
9	93110-26427	OIL SEAL TC26*42*7/10	2	
10	93320-153511S	BALL BEARING 6202 CS05/2A	2	
11	93320-204212M	BALL BEARING 6004CM/2A	2	
12	93510-152209-C	COLLAR	2	
13	94710-10037-C	BOLT, RIBBED NECK	8	
14	95321-142215-C	NUT, CASTLE	2	
15	95801-101718-C	LOCK NUT, FLANGE	8	
16	97201-142820-C	WASHER, PLATE 14.2*28.4*2	2	

 HUB, REAR 後輪轂

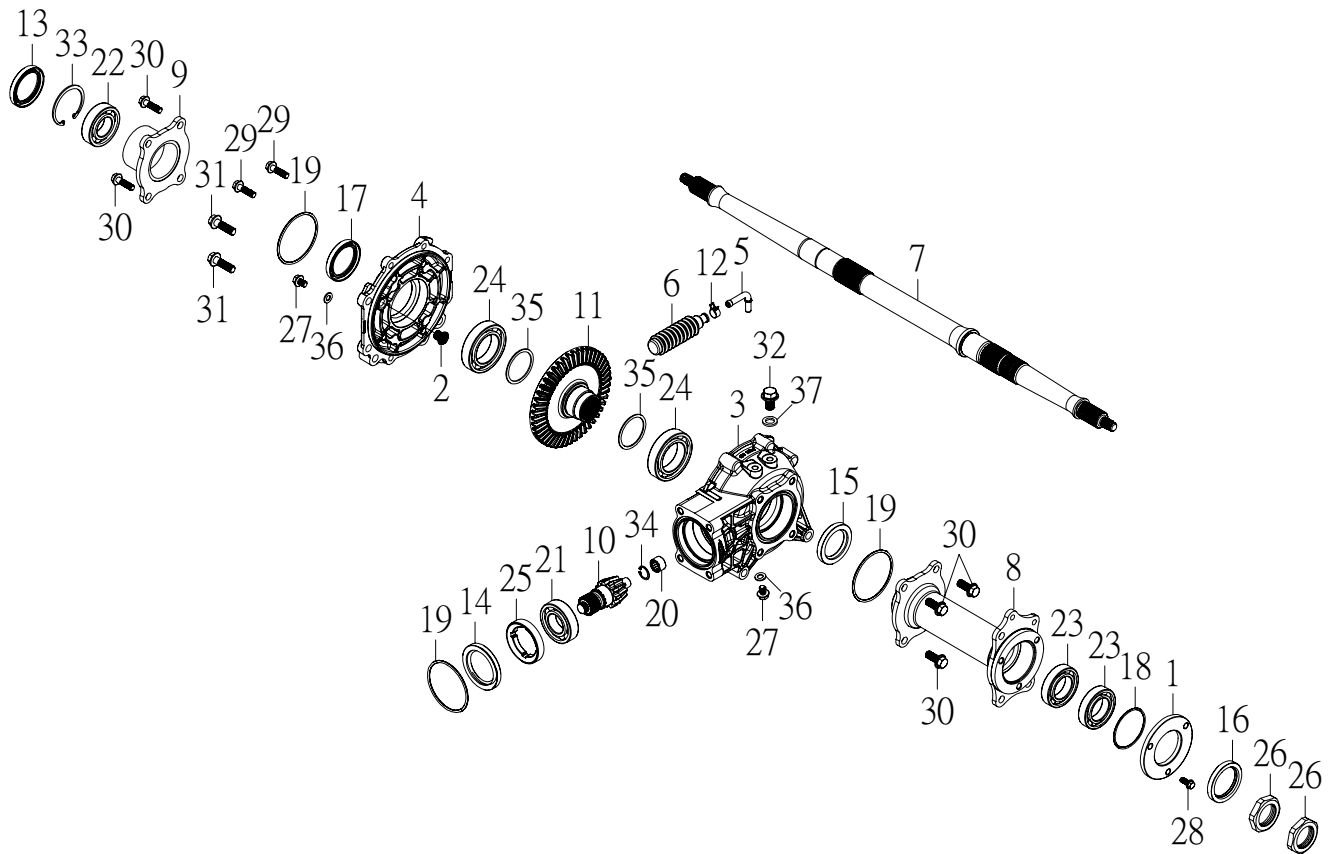


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	42823-JPE-00	PLATE, BEARING	1	軸承固定板
2	42824-JPE-00	PIN	1	齒輪止動銷
3	42826-JPE-00	GEAR BOX	1	後齒輪箱
4	42827-JPE-00	COVER, GEAR BOX	1	後齒輪箱蓋
5	42828-JPE-00	BREATHER JOINT	1	呼吸管接頭
6	42829-JPE-00	BREATHER	1	後齒輪箱呼吸管
7	42835-JPE-00	AXLE, WHEEL	1	後輪軸
8	42836-JPE-00	HUB, REAR L	1	左後輪轂
9	42837-JPE-00	HUB, REAR R	1	右後輪轂
10	42841-JPE-00	DRIVING GEAR	1	後輪驅動斜齒輪
11	42846-JPE-00	DRIVE GEAR	1	後輪傳動斜齒輪
12	90220-08110-B	CLIP 8*11	1	板型管夾
13	93110-32588	OIL SEAL TC 32*58*8	1	油封
14	93110-357010	OIL SEAL TC 35*70*10	1	油封
15	93110-42627	OIL SEAL TC 42*62*7	1	油封
16	93110-44544	OIL SEAL TC 44*54*4.5	1	油封
17	93110-44607	OIL SEAL TC 44*60*7	1	油封
18	93210-20640	O-RING 2.0*64	1	護油圈
19	93210-31744	O-RING 3.1*74.4	3	護油圈
20	93310-1420120	NEEDLE BEARING HK 1412	1	滾針軸承
21	93320-306216	BALL BEARING 6206	1	滾珠軸承
22	93320-325813	BALL BEARING	1	滾珠軸承

 HUB, REAR 後輪轂

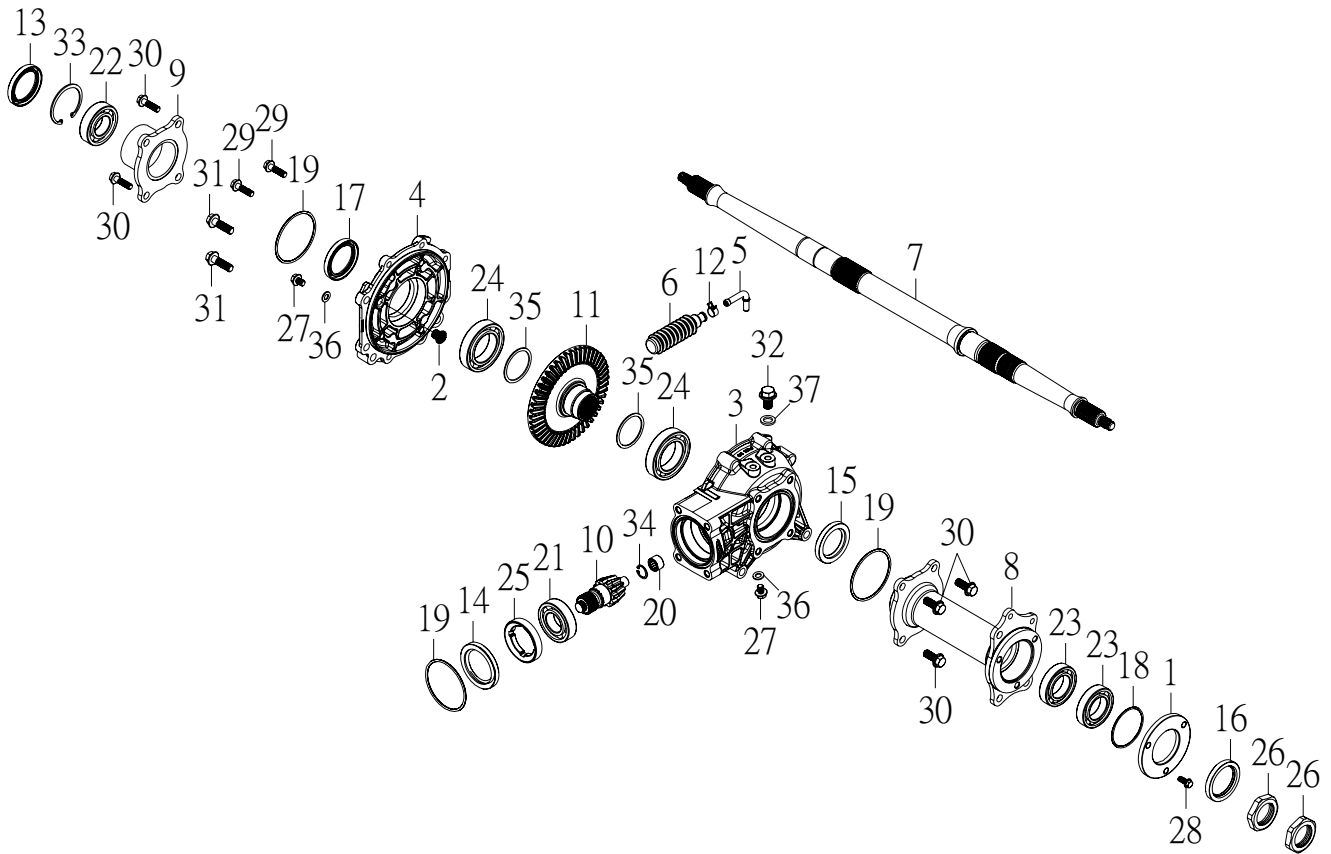


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
23	93320-356214	BALL BEARING 6007/2A	2	滾珠軸承
24	93320-457516	BALL BEARING 6009	2	滾珠軸承
25	94710-65013	BOLT, RING	1	環形栓塞
26	95201-335014-C	NUT, HEXAGON	2	六角螺帽
27	96414-08012-C	BOLT, FLANGE	2	凸緣螺栓
28	96414-08020-B	BOLT, FLANGE	3	凸緣螺栓
29	96414-08030-C	BOLT, FLANGE	6	凸緣螺栓
30	96414-10025-C	BOLT, FLANGE	8	凸緣螺栓
31	96414-10035-C	BOLT, FLANGE	2	凸緣螺栓
32	96414-12015-C	BOLT, FLANGE	1	凸緣螺栓
33	97012-58020-K	CIRCLIP	1	C形內扣環
34	97013-20010-K	CIRCLIP IR-20	1	C形內扣環
35	97201-465405	WASHER, PLATE	2	齒輪襯片
	97201-465406	WASHER, PLATE	2	齒輪襯片
	97201-465407	WASHER, PLATE	2	齒輪襯片
	97201-465408	WASHER, PLATE	2	齒輪襯片
	97201-465409	WASHER, PLATE	2	齒輪襯片
	97201-465410	WASHER, PLATE	2	齒輪襯片
36	97231-081620	WASHER, ALUMINUM 8.2*16*2	2	鋁墊圈
37	97231-122020	WASHER, ALUMINUM 12.3*20*2.0	1	鋁墊圈

 REAR WHEEL 後輪

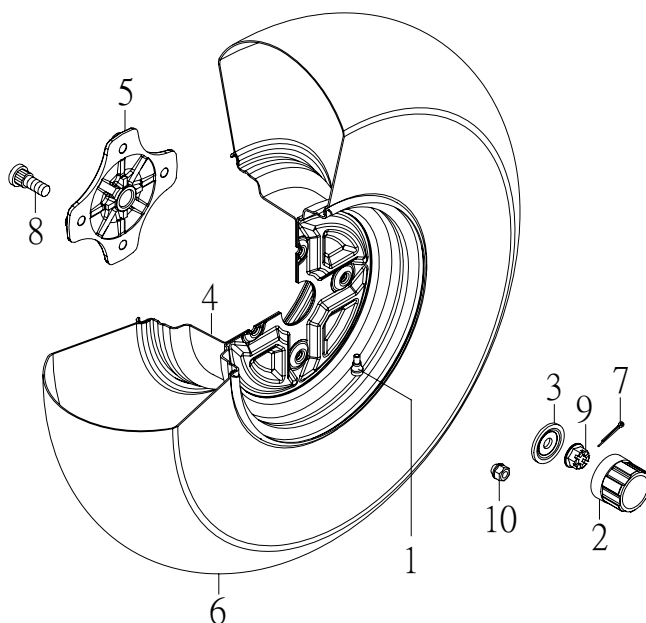


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	42570-RAM-00	VALVE, RIM	2	
	42570-CBW-00	VALVE, RIM	2	alloy
2	42595-SK9-00	CAP, WHEEL	2	
3	42596-JOW-00	HOLDER, WHEEL CAP	2	
4	42882-JOW-00	WHEEL, REAR 12*8.0AT	2	
	42882-JOW-01	WHEEL, REAR 12*8.0AT	2	alloy
5	42885-JOW-00	COLLAR, WHEEL	2	
6	42890-JOW-00	TIRE, REAR 25*10-12 DI-2010 45F	2	
	42890-JOW-01	TIRE, REAR AT25*10-12 K572 45N	2	
7	90240-29025-B	COTTER PIN 2.9*25	2	
8	94710-10037-C	BOLT, RIBBED NECK	8	
9	95326-142114-C	NUT, CASTLE FLANGE	2	
10	95801-101718-C	LOCK NUT, FLANGE	8	

 FUEL TANK 油箱

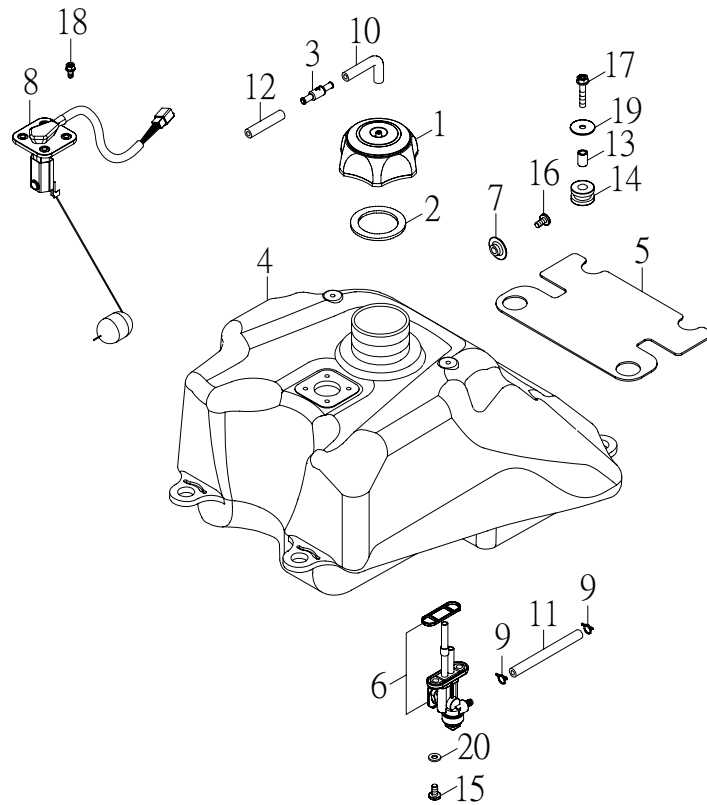

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	43102-RAM-00	CAP ASS'Y	1	汽油箱蓋總成
2	43103-RAM-00	CAP WASHER	1	油箱蓋墊圈
3	43108-SK5-00	CHECK, VALVE	1	汽油逆止閥
4	43110-JOW-00	FUEL TANK	1	汽油箱
5	43154-JOW-00	GUARD	1	保護板
6	43500-RAM-01	FUEL COCK ASS'Y	1	油杯
7	52726-JOW-00	BUTTON	1	座墊鈕扣
8	62770-JOW-00	SENDER UNIT ASSEMBLY	1	汽油油面感應器
9	90210-12010	CLIP	2	管夾
10	90310-50050	HOSE 5*8*50	1	通氣管
11	90310-50200	HOSE, FUEL 5*10*200	1	汽油管
12	90310-50390	HOSE 5*8*390	1	通氣管
13	93510-061015-B	COLLAR F	4	油箱隔管 前
14	93580-102416	GROMMET R	4	油箱套環 後
15	96318-06012-G	SCREW, PAN HEAD	2	十字孔頭螺絲
16	96318-06020-G	SCREW, PAN HEAD	1	十字孔頭螺絲
17	96414-06025-B	BOLT, FLANGE	4	凸緣螺栓
18	96612-05012-C	BOLT, HEXAGON WITH WASHER	4	六角十字穴螺栓附墊圈
19	97201-062220-B	WASHER, PLATE	4	平面墊圈
20	97210-061315	WASHER, PLATE	2	石棉墊圈

 REAR BRAKE 後煞車系統

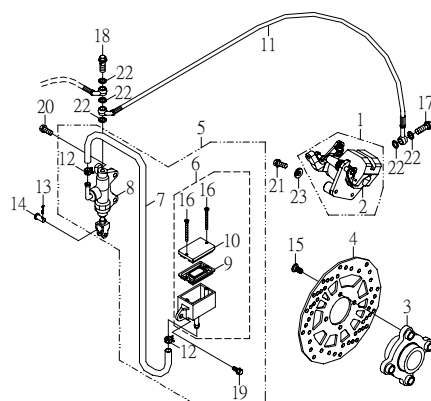


NO.	PARTS NO.	PARTS NAME		QTY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	45801-CFS-01	CALIPER ASS'Y	卡鉗總成	1	
2	45815-RAM-01	PAD, CALIPER	剎車片組	1	
3	45830-RAM-00	BRACKET, DISC	剎車圓盤座	1	
4	45831-RAM-00	DISC, BRAKE	剎車圓盤	1	
5	45870-RAM-01	MASTER CYLINDER SUB ASS'Y	主缸總成	1	
6	45871-RAM-00	RESERVOIR	油槽總成	1	
7	45874-RAM-00	HOSE 8*13*400	油管	1	
8	45877-RAM-01	CYLINDER KIT, MASTER	推進器組	1	
9	45878-NAF-00	DIAPHRAGM, RESERVOIR	油槽隔片	1	
10	45879-NAF-00	CAP, RESERVOIR	油槽蓋	1	
11	61320-JOW-00	HOSE, BRAKE	剎車油管	1	
12	90220-80013	CLAMP	管夾	2	
13	90230-12008	COTTER PIN	開尾銷	1	
14	94610-06016-B	PIN, CLEVIS	帶頭銷	1	
15	94706-08017-B	BOLT, BUTTON	剎車盤固定螺栓	4	
16	94712-04040-K	SCREW, FLAT HEAD	十字孔埋頭螺絲	2	
17	94716-10022-G	BOLT, UNION	接合螺栓	1	
18	94716-10033-G	BOLT, UNION	接合螺栓	1	
19	96414-06016-B	BOLT, FLANGE	凸緣螺栓	1	
20	96414-06022-B	BOLT, FLANGE	凸緣螺栓	2	
21	96414-08045-B	BOLT, FLANGE	凸緣螺栓	2	
22	97230-101512	WASHER, COPPER 10.3*15*1.2	銅墊圈	5	

2006.10.19

45801-JOW-00A

 REAR BRAKE 後煞車系統

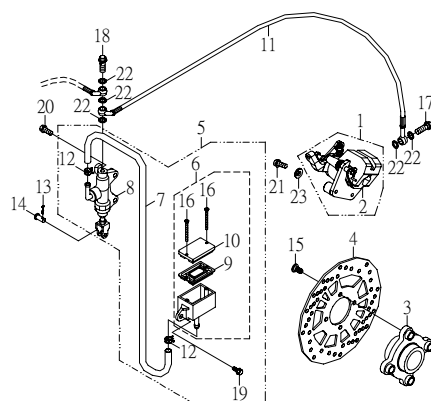


NO.	PARTS NO.	PARTS NAME		QTY	NOTE
項目	零件號碼	零件名稱		用量	備註
23	97301-081520-B	WASHER, SPRING	彈簧墊圈	2	

2006.10.19


45801-JOW-00A

 KNUCKLE, STEERING 轉向關節座

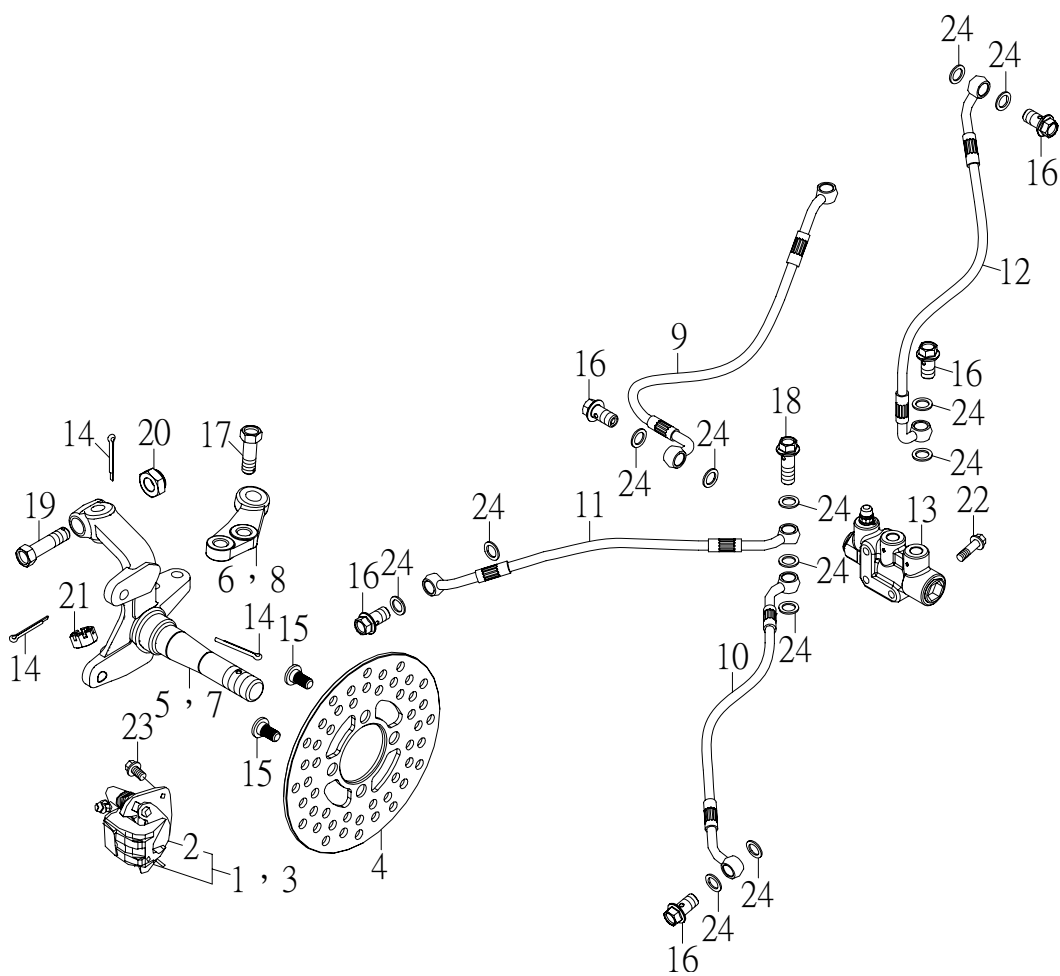


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	45811-RAM-02	CALIPER ASS'Y, L FRONT	1	左前卡鉗總成
2	45815-RAM-01	PAD, CALIPER	2	剎車片組
3	45821-RAM-02	CALIPER ASS'Y, R FRONT	1	右前卡鉗總成
4	45831-RAM-01	DISK, BRAKE	2	剎車圓盤
5	45861-RAM-01	KNUCKLE, STEERING L	1	左前轉向關節座
6	45862-RAM-00	JOINT, ROD L	1	左前連結片
7	45866-RAM-01	KNUCKLE, STEERING R	1	右前轉向關節座
8	45867-RAM-00	JOINT, ROD R	1	右前連結片
9	61811-JOW-01	HOSE, BRAKE	1	腳剎車油管
10	61812-JOW-01L	HOSE, FRONT BRAKE L	1	左前剎車油管
11	61812-JOW-01R	HOSE, FRONT BRAKE R	1	右前剎車油管
12	61820-JOW-01	HOSE, HANDBRAKE	1	手剎車油管
13	61860-JOW-01	BRAKE SHUNT ASS'Y	1	分流閥組
14	90240-23020-B	COTTER PIN 2.3*20	8	開口銷
15	94706-08017-B	BOLT, BUTTON	8	剎車盤固定螺栓
16	94716-10022-G	BOLT, UNION	5	接合螺栓
17	94716-10030-C	BOLT, KEYHOLE	4	栓孔螺栓
18	94716-10033-G	BOLT, UNION	1	接合螺栓
19	94716-10040-C	BOLT, KEYHOLE	2	栓孔螺栓
20	95311-101710-C	NUT, NYLON	2	尼龍螺帽
21	95321-101710-C	NUT, CASTLE	2	有槽螺帽
22	96414-06035-B	BOLT, FLANGE	2	凸緣螺栓

 STEERING HANDLE CABLE 轉向把手，鋼索

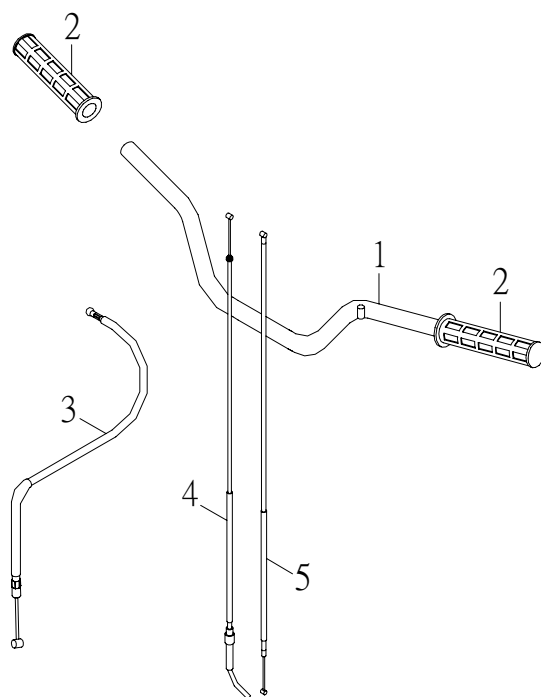


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	46110-JOW-01	HANDLEBAR	1	把手整體
2	46240-RAM-00	GRIP	2	握把
3	61340-JOW-01	CABLE, HANDBRAKE	1	手剎車鋼索
4	61620-JOE-01	CABLE, THROTTLE	1	節流鋼索
5	61720-JOW-00	CABLE, CHOKE	1	阻風導線

 FRONT FENDER 前土除

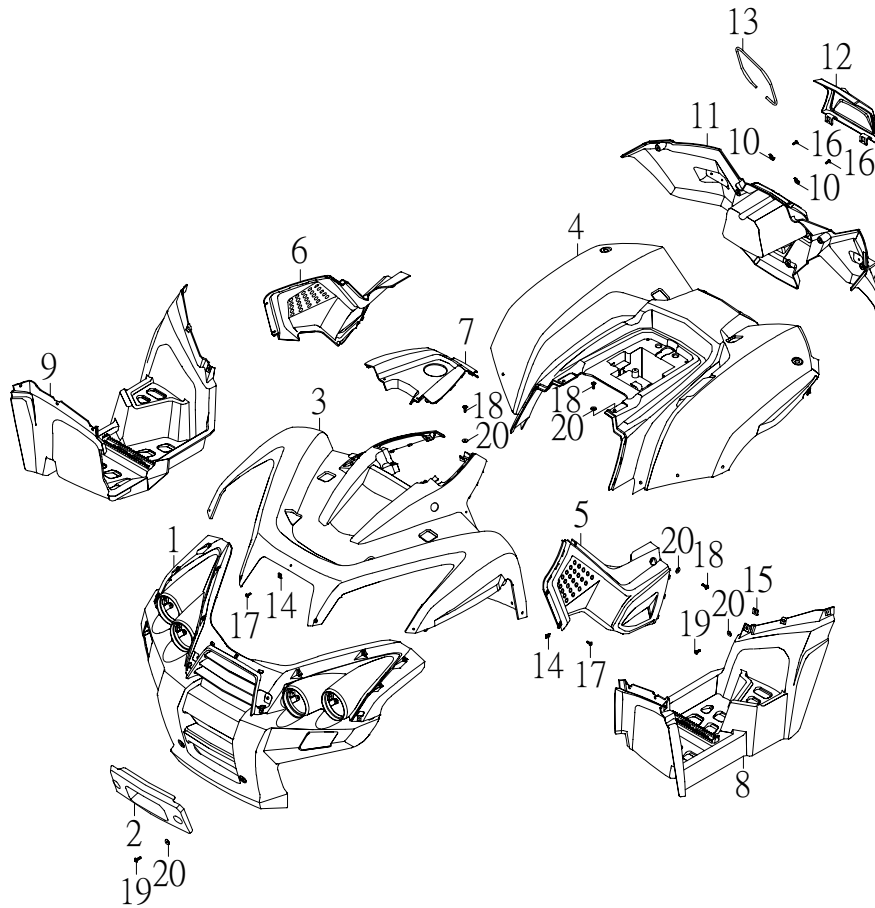


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	51121-JOW-01	SHIELD COVER, FRONT	1	前保桿飾蓋
2	51122-JOW-00	COVER, WINCH	1	絞盤飾蓋
3	51161-JOW-00	COVER, FRONT	1	前蓋
4	51171-JOW-00	COVER, SIDE	1	後蓋
5	51172-JOW-00	SIDE COVER L	1	左側蓋
6	51173-JOW-00	SIDE COVER R	1	右側蓋
7	51532-JOW-00	COVER, TOP	1	油箱上蓋
8	53235-JOW-00	MUDGUARD L	1	左腳踏板
9	53245-JOW-00	MUDGUARD R	1	右腳踏板
10	53396-NAF-00	HINGE	2	鉸鏈
11	57820-JOW-00	BAGGAGE COMPARTMENT	1	後置物箱
12	57830-JOW-00	COVER, BAGGAGE COMPARTMENT	1	後置物箱蓋
13	57842-JOW-00	SEAL, BAGGAGE COMPARTMENT	1	後置物箱封圈
14	95101-05012	NUT, SPRING	21	U型板螺帽
15	95101-061820-C	NUT, SPRING	12	U型板螺帽
16	96110-41218-K	SCREW, TAPPING	2	自攻螺絲
17	96112-51216-K	SCREW, TAPPING	21	自攻螺絲
18	96318-06012-G	SCREW, PAN HEAD	20	十字孔頭螺絲
19	96318-06015-G	SCREW, PAN HEAD	14	十字孔頭螺絲
20	97321-061825-G	WASHER, FLANGE	34	凸緣墊圈

 SEAT 座墊

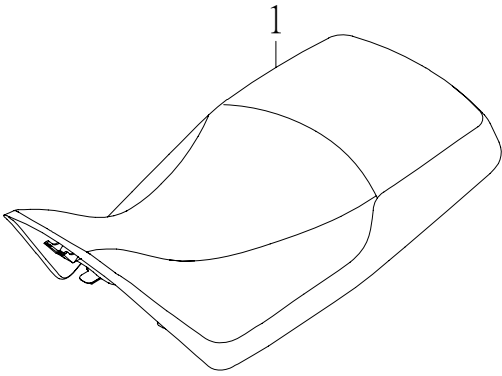


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	52730-JOW-00	SINGLE SEAT ASS'Y	1	單人座墊總成

 CARRIER, FRONT 前架

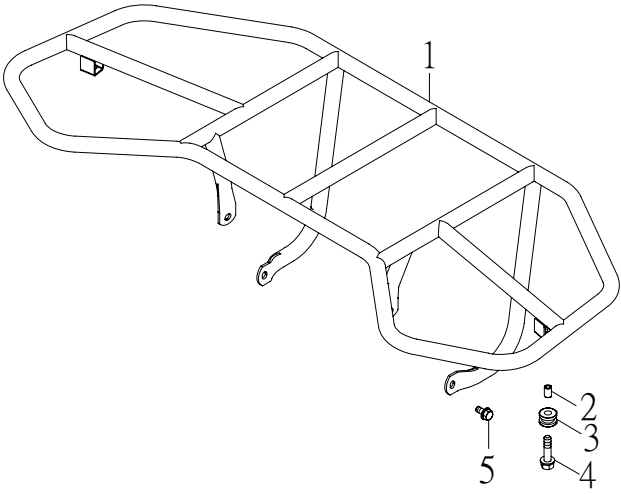


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	52850-JOW-00	CARRIER, REAR	後架	1	
2	93510-061010	COLLAR	牌照板軸環	2	
3	93580-102212	GROMMET	牌照板套環	2	
4	96214-06025-B	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	2	
5	96414-08014-B	BOLT, FLANGE	凸緣螺栓	4	

 STICK SHIFT 排檔裝置

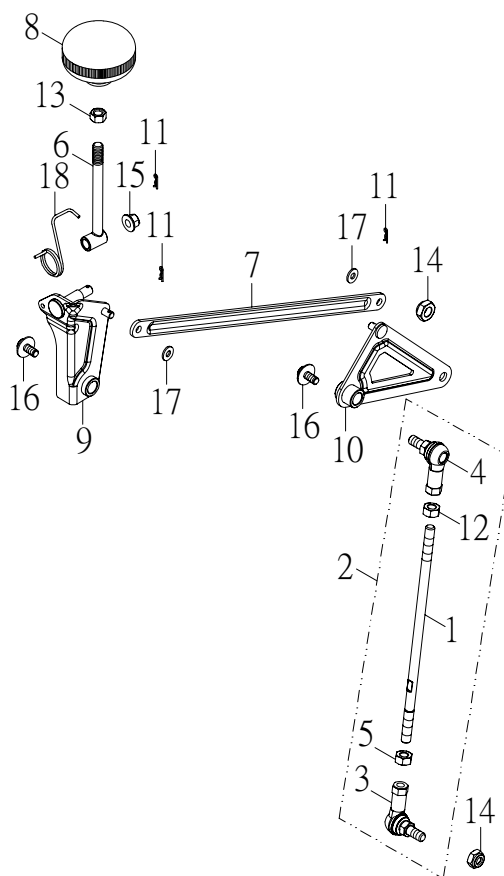


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	53203-JPE-00	GEAR SHIFT LEVER LOWER	變速桿下	1	
2	53203-JPE-00A	GEAR SHIFT LEVER LOWER	變速桿下總成	1	
3	53207-JOW-00	JOINT L, GEAR SHIFT LEVER	變速桿接頭左	1	
4	53208-JOW-00	JOINT R, GEAR SHIFT LEVER	變速桿接頭右	1	
5	53209-JOW-00	NUT	變速桿螺帽	1	
6	53211-JOW-00	ROD SHIFT	排檔桿	1	
7	53213-JPE-00	GEAR SHIFT LEVER UPPER	變速桿上	1	
8	53214-GLO-00	HEAD SHIFT	排檔頭	1	
9	53215-JPE-00	ARM SHIFT	排檔臂	1	
10	53217-JOW-00	GEAR SHIFT LEVER	變速桿搖臂	1	
11	90230-12008	COTTER PIN	開尾銷	3	
12	95201-081207-B	NUT, HEXAGON	六角螺帽	1	
13	95201-101408-B	NUT, HEXAGON	六角螺帽	1	
14	95311-081308-B	NUT, NYLON	尼龍螺帽	2	
15	95401-081208-B	NUT, FLANGE	凸緣螺帽	1	
16	96218-06012-B	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	2	
17	97201-061415-B	WASHER, PLATE	平面墊圈	2	
18	97508-221880-B	SPRING, TORSION	扭轉彈簧	1	

 STAND FOOTREST 腳踏桿

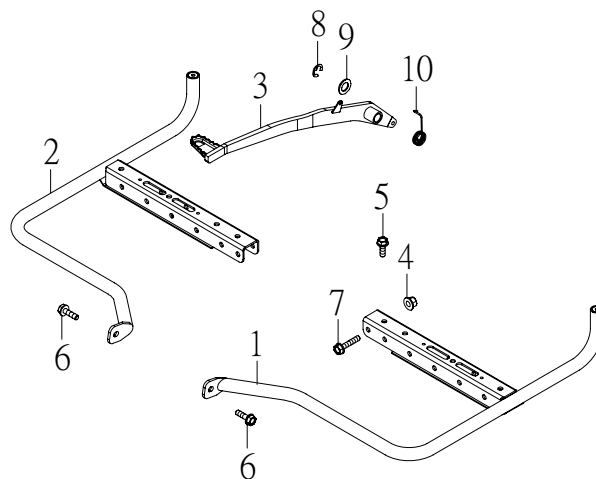


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	53231-JOW-00	FOOTREST L	1	左腳踏桿
2	53241-JOW-00	FOOTREST R	1	右腳踏桿
3	53261-JOW-00	PEDAL, BRAKE	1	後剎車踏板
4	95401-081208-B	NUT, FLANGE	4	凸緣螺帽
5	96414-08016-B	BOLT, FLANGE	2	凸緣螺栓
6	96414-08050-B	BOLT, FLANGE	4	凸緣螺栓
7	97011-12010-B	CIRCLIP 12*1.0	1	E形扣環
8	97201-152620-B	WASHER, PLANE 15.2*25.6*2.0	1	平面墊圈
9	97508-3226115-B	SPRING, TORSION	1	剎車踏板扭轉彈簧

 HEAD LIGHT 前燈

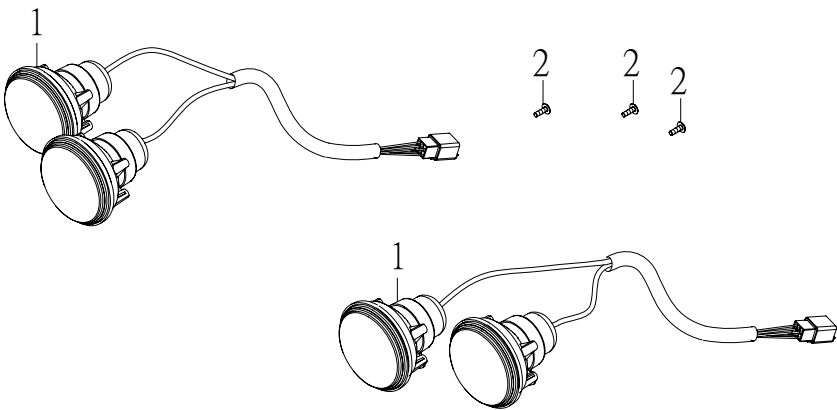


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	55300-MLS-00B	HEAD LIGHT ASS'Y	前燈總成	2	
2	96112-41218-K	SCREW, TAPPING	自攻螺絲	16	

 FLASHER 方向燈

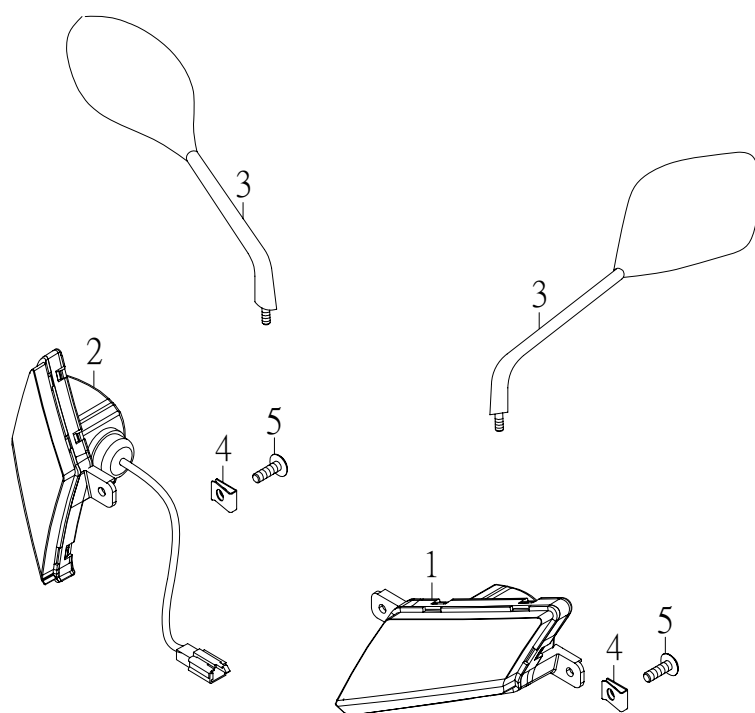


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	55350-JOW-00	WINKER ASS'Y, L FRONT	前方向燈組左	1	
2	55360-JOW-00	WINKER ASS'Y, R FRONT	前方向燈組右	1	
3	56270-ROA-00	MIRROR ASS'Y, BACK	後照鏡組	1	
4	95101-05012	NUT, SPRING	U型板螺帽	4	
5	96112-51216-K	SCREW, TAPPING	自攻螺絲	4	

 SPEEDOMETER 速度表

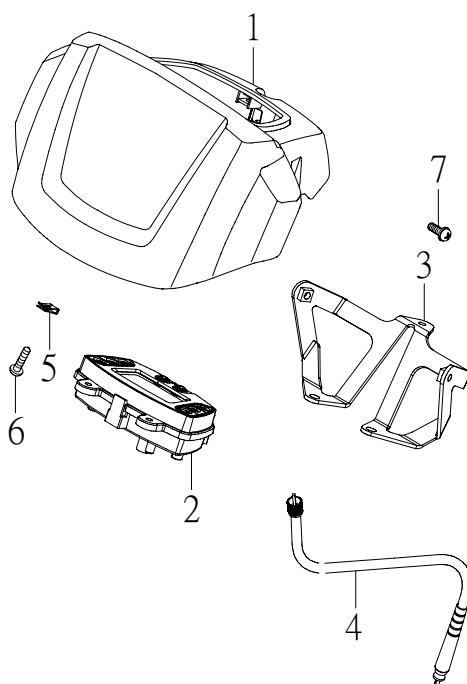


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	55213-JOW-00	PROTECTOR, HANDLEBAR	1	把手上蓋
2	55510-JPE-00	SPEEDOMETER ASS'Y	1	速度表總成
3	55516-JOW-00	HOLDER, SPEEDOMETER	1	速度表固定座
4	61520-JPE-00	CABLE, SPEEDOMETER ASS'Y	1	速度表鋼索總成
5	95101-05012	NUT, SPRING	3	U型板螺帽
6	96112-51216-K	SCREW, TAPPING	3	自攻螺絲
7	96312-06016-K	SCREW, PAN HEAD WITH WASHER	3	十字孔頭螺絲附墊圈

 INDICATOR LIGHT 指示燈

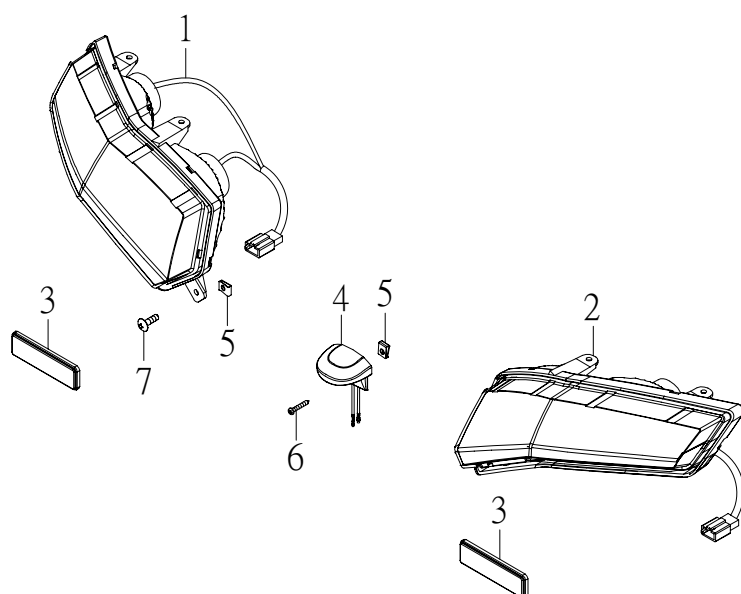


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	55700-JOW-00L	INDICATOR LIGHT L	左指示燈組	1	
2	55700-JOW-00R	INDICATOR LIGHT R	右指示燈組	1	
3	55722-JOW-00	REFLECTOR	反射片	2	
4	55740-MLS-00	LICENSE LIGHT	牌照燈組	1	
5	95101-05012	NUT, SPRING	U型板螺帽	11	
6	96110-51616-K	SCREW, TAPPING	自攻螺絲	1	
7	96112-51216-K	SCREW, TAPPING	自攻螺絲	10	

 WARNING 警告標示

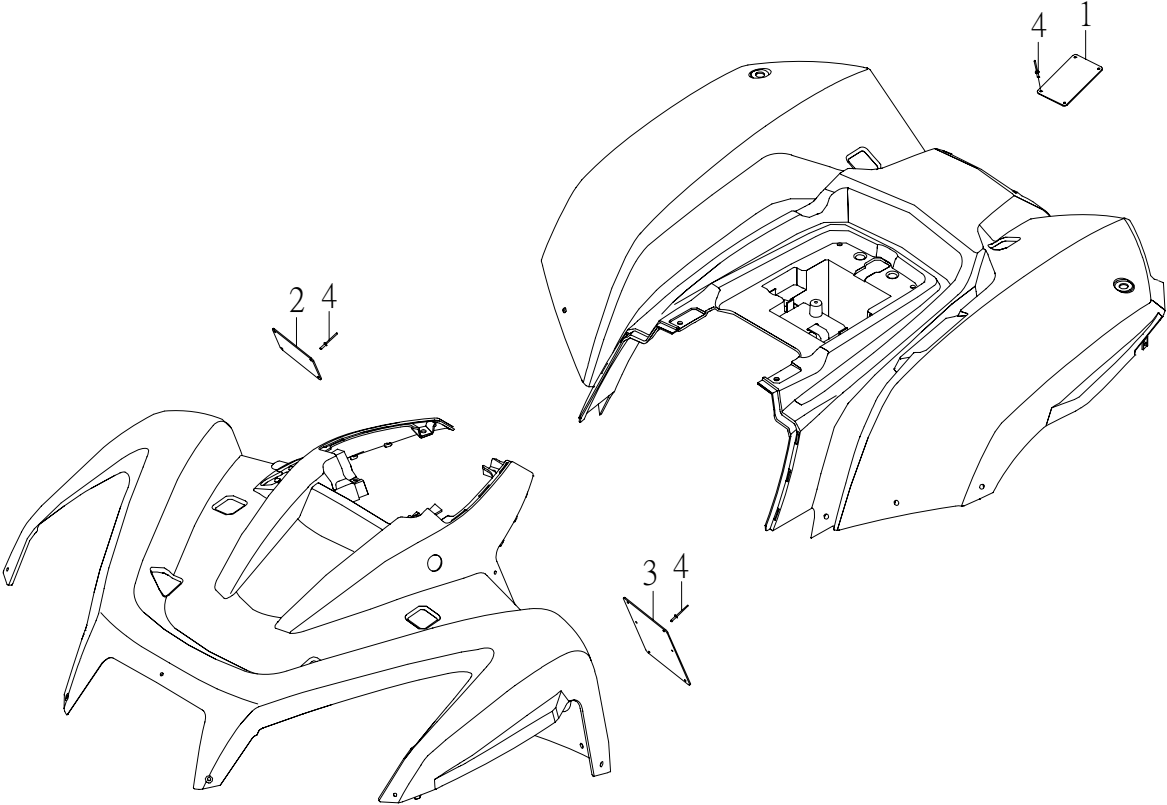


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	56576-RAM-00	LABEL WARNING 3 (TIRE)	胎壓規範	1	
2	56578-RAM-00	LABEL WARNING 2 (AGE)	年齡規範	1	
3	56781-RAM-01	LABEL WARNING 1 (OPERATION)	騎乘規範	1	
4	94320-32096	RIVET 3.2*9.6	拉釘	14	

 TRAILER 拖車裝置 (Accessroy)




NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	56221-JOW-00	BRACKET CENTER	1	托架軸心
2	95201-223218-R	NUT, HEXAGON	1	六角螺帽
3	97201-223926-B	WASHER, PLATE	1	平面墊圈
4	97301-223656-B	WASHER, SPRING	1	彈簧墊圈

 HANDLE SWITCH, LEVER 把手開關、拉桿

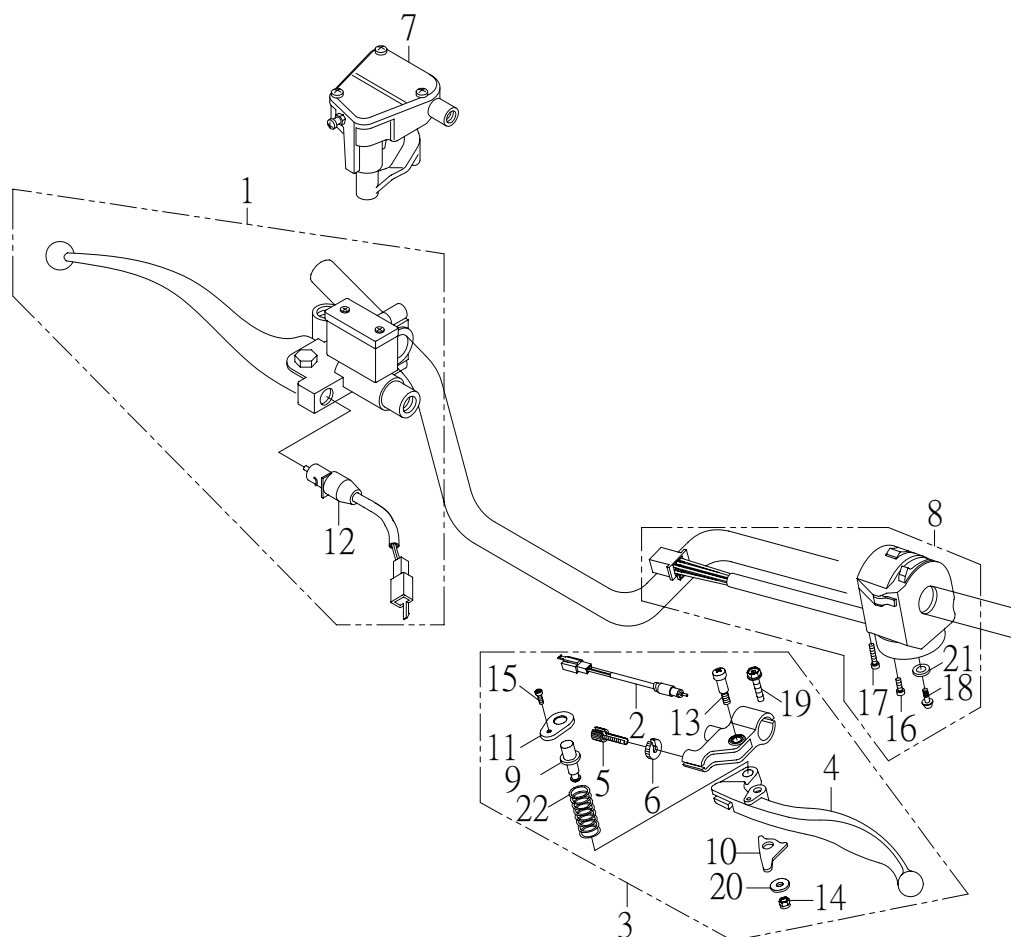


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	45870-JOW-00	MASTER CYLINDER SUB ASS'Y	1	主缸總成
2	45890-SK9-00	FRONT STOP SWITCH	1	前剎車燈開關
3	62910-SK9-02	LEVER ASS'Y, HANDLE	1	左拉桿組
4	62912-SK9-02	LEVER, L	1	左拉桿
5	62916-RAM-00	BOLT, WIRE ADJUSTING	1	離合器線調整螺栓
6	62917-RAM-00	NUT, WIRE ADJUSTING	1	離合器線調整螺帽
7	62920-JOW-00	THROTTLE ASS'Y	1	節流座總成
8	62930-RAM-02	HANDLE SWITCH ASS'Y L	1	左把手開關總成
9	62971-RAM-00	PIN, LOCK	1	拉桿鎖位銷
10	62973-RAM-00	LOCK, LEVER	1	拉桿鎖位板
11	62976-RAM-00	COVER	1	拉桿鎖位蓋
12	62980-JOW-00	FRONT STOP SWITCH	1	前剎燈開關
13	94710-06031-G	BOLT, LEVER	1	拉桿螺栓
14	95311-061006-K	NUT, NYLON	1	尼龍螺帽
15	96310-03008-B	SCREW, PAN HEAD	1	十字孔頭螺絲
16	96310-05030-G	SCREW, PAN HEAD	1	十字孔頭螺絲
17	96310-05040-G	SCREW, PAN HEAD	1	十字孔頭螺絲
18	96310-06010-G	SCREW, PAN HEAD	1	十字孔頭螺絲
19	96510-06020-G	BOLT, SOCKET	1	六角承窩螺栓
20	97201-061210-C	WASHER, PLATE 6.2*11.5*1.0	1	平面墊圈
21	97201-061310-B	WASHER, PLATE 6.5*13*1.0	1	平面墊圈
22	97501-08025-B	SPRING	1	拉桿鎖壓縮彈簧

 WIRE HARNESS 主電路配線

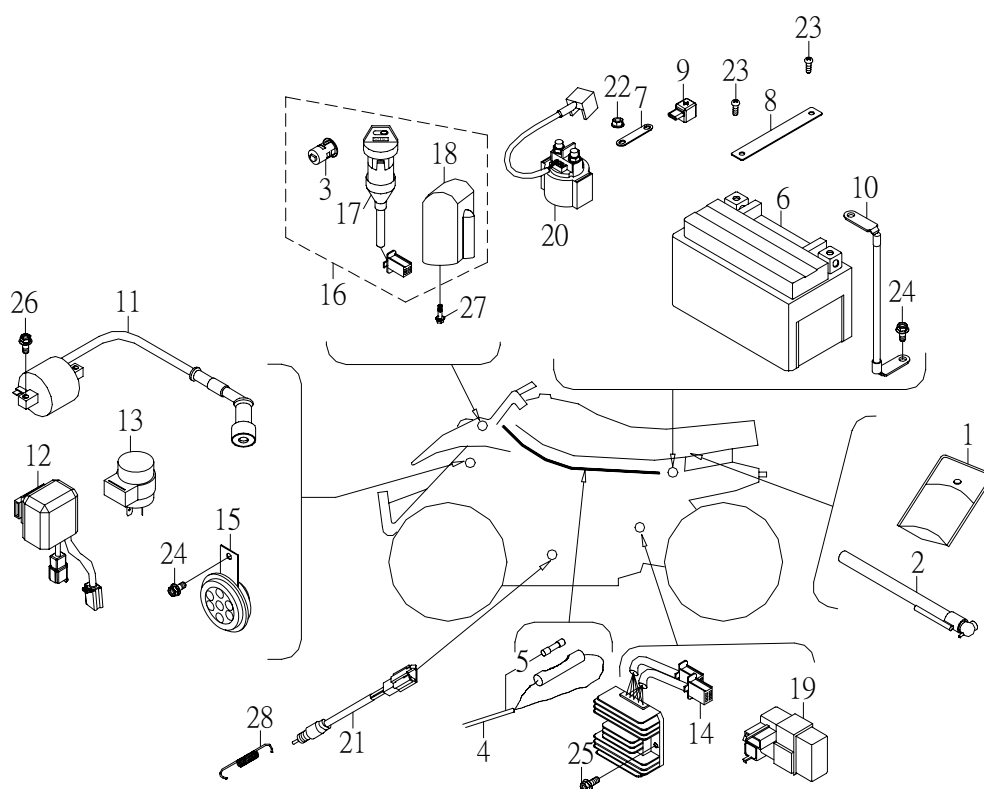


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	56100-CBT-00	TOOL SET	1	工具包
2	56190-RAM-00	GAUGE, AIR	1	胎壓計
3	57851-NAF-00	LOCK	1	後置物箱鎖
4	61120-JOW-00	WIRE, HARNESS	1	主配線總成
5	61151-CHP-00	FUSE (15A250V)	1	保險絲
6	62100-JOW-00	BATTERY ASS'Y	1	蓄電池總成
	62100-JOW-01	BATTERY ASS'Y (GTX12-BS)	1	蓄電池總成
7	62110-JOW-00	PLATE	1	蓄電池導片
8	62112-JOW-00	BAND, BATTERY	1	電瓶固定板
9	62116-JOW-00	PROTECTOR	1	蓄電池導片保護套
10	62120-JOW-00	CABLE, EARTH	1	蓄電池接地線
11	62310-JOW-00	IGNITION COIL ASS'Y	1	點火線圈總成
12	62340-JOW-00		1	防干擾線圈
13	62350-NAF-01	FLASHER RELAY ASSEMBLY	1	方向警報斷續器總成
14	62360-JOW-00	RECTIFIER & REGULATOR COMP	1	整流穩壓器
15	62370-NAF-00	HORN	1	喇叭
16	62500-JOW-00	KEY SET	1	鎖組
17	62501-JOW-00	MAIN SWITCH ASS'Y	1	主開關總成
18	62503-RAM-00	LOCK COMP, STEERING HANDLE	1	轉向舵鎖
19	62540-JOW-00	C.D.I UNIT ASS'Y	1	C.D.I 組件總成
20	62550-JOW-00	STARTER RELAY SWITCH COMP	1	起動開關組
21	62980-CHP-00	SWITCH ASS'Y, REAR STOP	1	剎車燈後置開關

 WIRE HARNESS 主電路配線

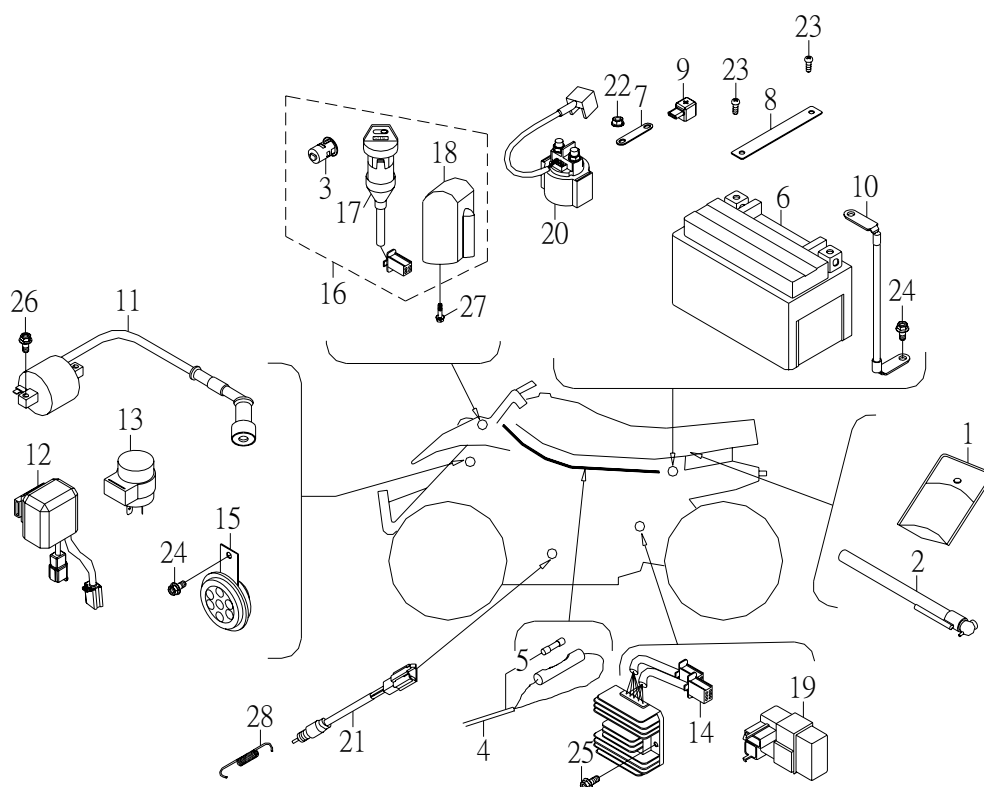

NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
22	95401-061006-B	NUT, FLANGE	1	凸緣螺帽
23	96318-06012-G	SCREW, PAN HEAD	2	十字孔頭螺絲
24	96414-06012-B	BOLT, FLANGE	2	凸緣螺栓
25	96414-06016-B	BOLT, FLANGE	2	凸緣螺栓
26	96414-06020-B	BOLT, FLANGE	2	凸緣螺栓
27	96613-05012-B	BOLT, HEXAGON WITH WASHER	2	六角十字穴螺栓附墊圈
28	97506-1272190-B	SPRING, STOP SWITCH	1	剎車開關拉伸彈簧

 WINCH 絞盤 (accessory set)

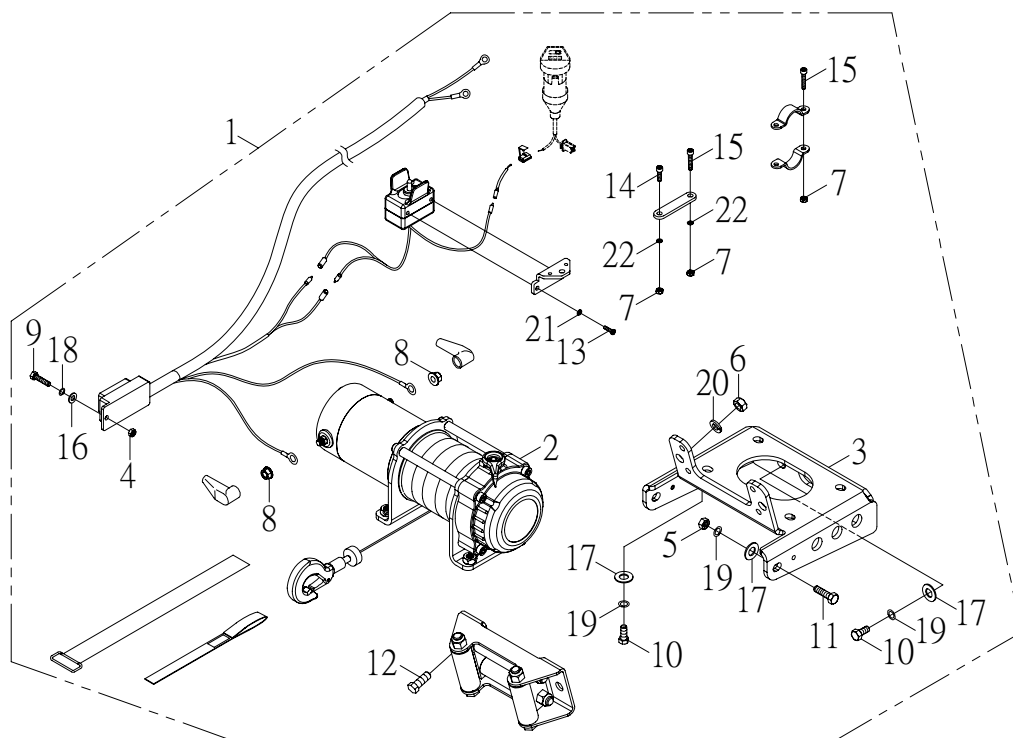

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	56200-JOW-00	WINCH ASS'Y	絞盤總成	1	
2	56201-JOW-00	WINCH	絞盤	1	
3	56206-JOW-00	BASE, WINCH	絞盤底板	1	
4	95201-061005-B	NUT, HEXAGON	六角螺帽	1	
5	95201-081306-B	NUT, HEXAGON	六角螺帽	2	
6	95201-101708-B	NUT, HEXAGON	六角螺帽	2	
7	95311-050805-B	NUT, NYLON	尼龍螺帽	3	
8	95401-061006-B	NUT, FLANGE	凸緣螺帽	2	
9	96210-06020-B	BOLT, HEXAGON	六角螺栓	1	
10	96210-08020-B	BOLT, HEXAGON	六角螺栓	6	
11	96210-08025-B	BOLT, HEXAGON	六角螺栓	2	
12	96210-10020-B	BOLT, HEXAGON	六角螺栓	2	
13	96310-03008-B	SCREW, PAN HEAD	十字孔頭螺絲	2	
14	96510-05015-K	BOLT, SOCKET	六角承窩螺栓	1	
15	96510-05025-K	BOLT, SOCKET	六角承窩螺栓	2	
16	97201-061310-B	WASHER, PLATE	平面墊圈	1	
17	97201-081715-B	WASHER, PLATE	平面墊圈	8	
18	97301-061215-B	WASHER, SPRING	彈簧墊圈	1	
19	97301-081520-B	WASHER, SPRING	彈簧墊圈	8	
20	97301-101830-B	WASHER, SPRING	彈簧墊圈	2	
21	97321-030705-K	WASHER, LOCK	內齒墊圈	2	
22	97321-051005-K	WASHER, LOCK	內齒墊圈	2	