 
 


CYLINDER, CYLINDER HEAD 汽缸、汽缸頭

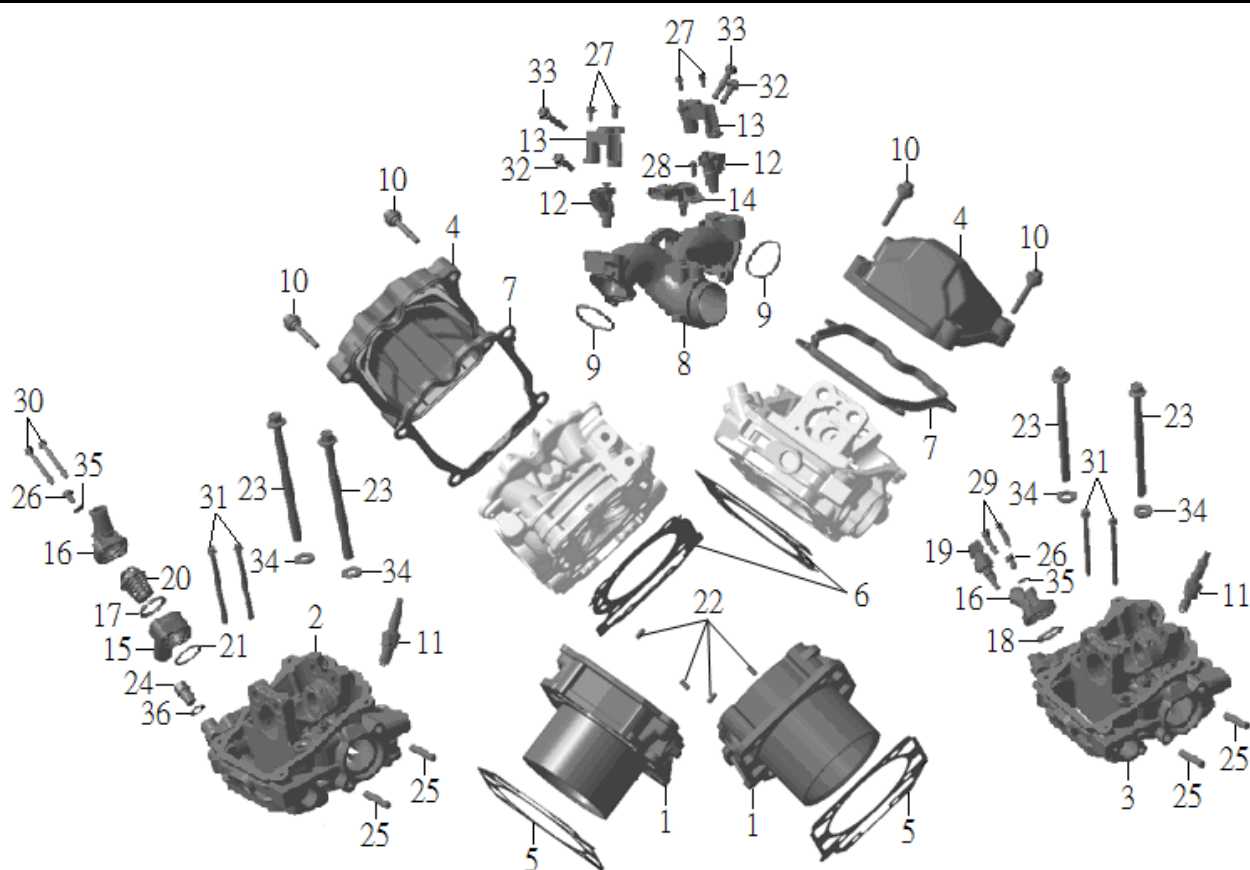


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	11111-ML9-00	CYLINDER COMP	汽缸	2	
2	11121-ML8-00F	HEAD COMP, CYLINDER	汽缸頭前	1	
3	11121-ML8-00R	HEAD COMP, CYLINDER	汽缸頭後	1	
4	11141-ML8-00	COVER, CYLINDER HEAD	汽缸頭蓋	2	
5	11151-ML8-00	GASKET, CYLINDER	汽缸墊片	2	
	11151-ML9-00	GASKET, CYLINDER	汽缸墊片	2	
6	11181-ML9-00	GASKET, CYLINDER HEAD	汽缸頭墊片	2	
7	11191-ML8-00	GASKET, HEAD COVER	汽缸頭蓋墊圈	2	
8	13551-ML8-00	ALUMINUM SEAT, INTAKE PIPE	進氣歧管鋁座	1	
9	13561-ML8-00	SEAL, INTAKE PIPE	進氣歧管墊圈	2	
10	15497-ML8-00	BOLT	飾蓋螺栓	8	
11	62210-ML8-00	PLUG, SPARK	火星塞	2	
12	62240-ML8-00	INJECTOR	噴油器	2	
13	62248-ML8-00	INJECTOR HOLDER	噴油器固定座	2	
14	62290-DA9-00	MAPMAT SENSOR	進氣溫度壓力傳感器	1	
15	62731-ML8-00	THERMOSTAT HOUSING	節溫器座	1	
16	62732-ML8-00	THERMOSTAT COVER	節溫器蓋	2	
17	62733-ML8-00	GASKET	節溫器密封圈	1	
18	62733-ML8-00A	GASKET	節溫器密封圈組	1	
19	62740-ML8-00	TEMPERATURE SENSOR	水溫傳感器	1	
20	62745-ML8-00	THERMOSTAT	節溫器	1	
21	93210-26265	O-RING	護油圈	1	

CYLINDER, CYLINDER HEAD 汽缸、汽缸頭

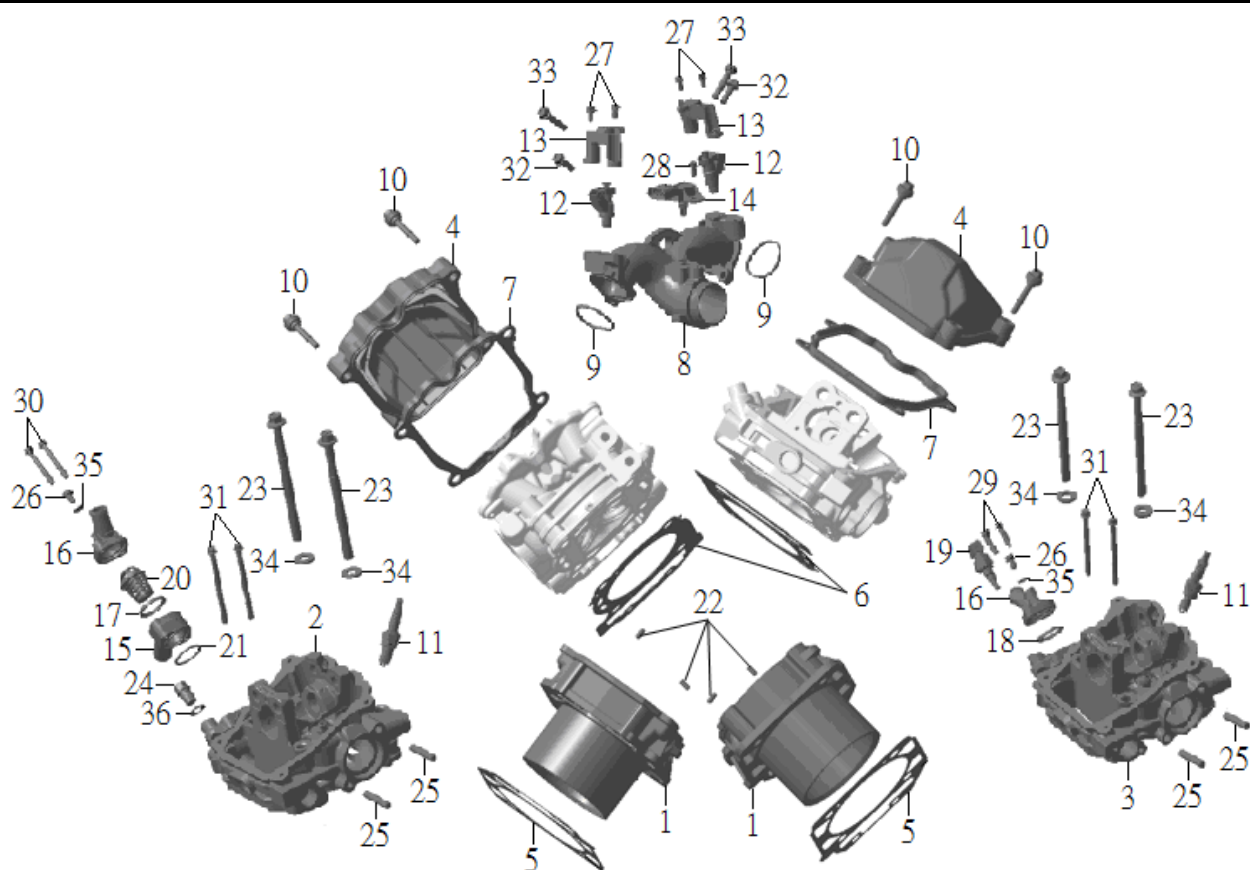


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
22	94510-50012	NEEDLE PIN	滾針	8	
23	94610-10145-K	BOLT	缸頭螺栓	8	
24	94706-12015-B	PLUG, WATER JACKET	水道栓塞	1	
25	94717-08040-B	BOLT, STUD	雙頭螺栓	4	
26	96411-06012-B	BOLT, FLANGE	凸緣螺栓	2	
27	96411-06016-B	BOLT, FLANGE	凸緣螺栓	4	
28	96411-06020-B	BOLT, FLANGE	凸緣螺栓	1	
29	96411-06022-B	BOLT, FLANGE	凸緣螺栓	2	
30	96411-06045-B	BOLT, FLANGE	凸緣螺栓	2	
31	96411-06085-B	BOLT, FLANGE	凸緣螺栓	4	
32	96411-08025-B	BOLT, FLANGE	凸緣螺栓	2	
33	96411-08040-B	BOLT, FLANGE	凸緣螺栓	2	
34	97201-112224-K	WASHER, PLATE	平面墊圈	8	
35	97226-061312	SEAL	密封墊圈	2	
36	97230-121815	WASHER, COPPER	銅墊圈	1	

 CRANKSHAFT, PISTON 曲軸、活塞

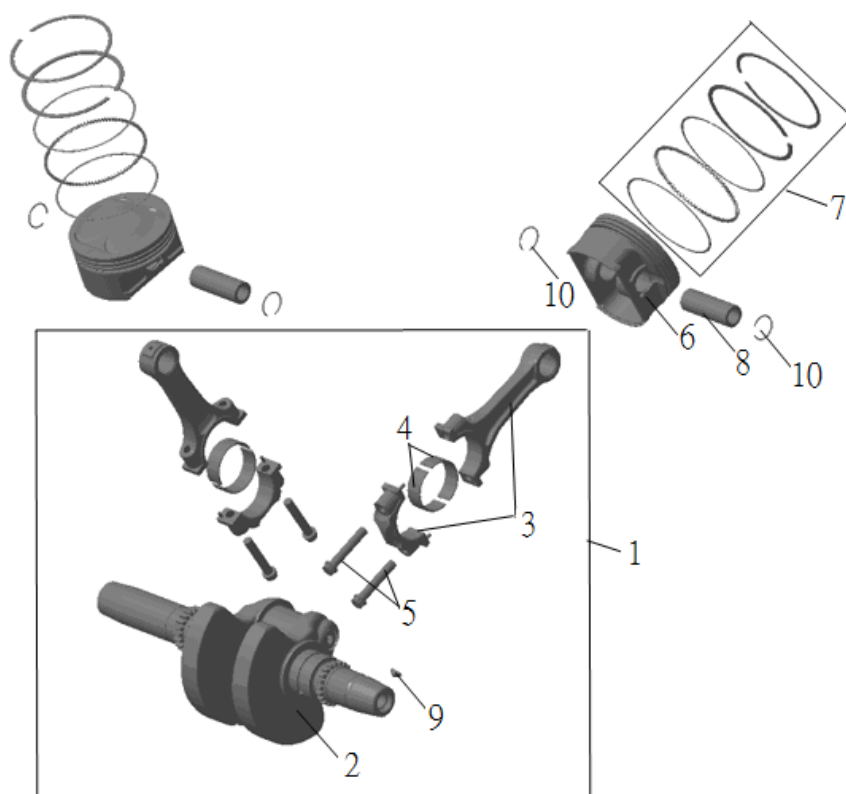


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	11400-ML8-00	CRANKSHAFT COMP	曲軸總成	1	
2	11410-ML8-00	CRANKSHAFT	曲軸	1	
3	11450-ML8-00	CONNECTING ROD	連桿組合	2	
4	11456-ML8-00	HALF PLAIN-BEARING	連桿大端軸瓦	4	
5	11459-ML8-00	ROD-SCREW	連桿螺栓	4	
6	11631-ML9-01	PISTON	活塞	2	
7	11636-ML9-00	RING SET, PISTON	活塞環組	2	
8	93510-132056	PIN, PISTON	活塞銷	2	
9	94420-04013	KEY, WOODRUFF	半圓鍵	1	
10	97050-14023	CIRCLIP, PISTON PIN	活塞銷止動環	4	

 WATER PUMP 水泵

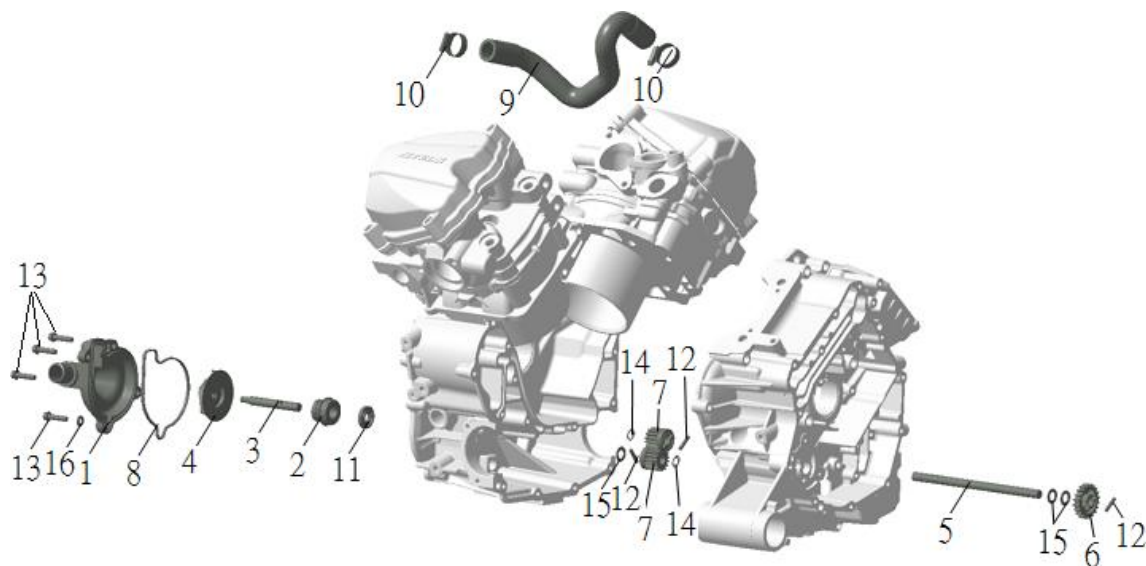

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	13012-ML8-00	WATER PUMP COVER	水泵蓋	1	
2	13018-ML8-00A	WATER SEAL COMP	水封組	1	
3	13021-ML8-00	WATER PUMP SHAFT	水泵軸	1	
4	13024-ML8-00	FAN	水泵葉輪	1	
5	13031-ML8-00	INTERMEDIATE SHAFT	水泵惰齒輪軸	1	
6	13033-ML8-00	WATER PUMP DRIVE GEAR	水泵驅動齒輪	1	
7	13034-ML8-00	WATER PUMP GEAR	水泵惰齒輪	2	
8	13051-ML8-00	SEAL, PUMP COVER	水泵蓋密封圈	1	
9	43426-ML8-00	HOSE	連接水管	1	
10	90281-090032-C	CLAMP	斑馬式管夾	2	
11	93110-10255	OIL SEAL	油封	1	
12	94510-40020	NEEDLE PIN	滾針	3	
13	96411-06025-B	BOLT, FLANGE	凸緣螺栓	4	
14	97010-10010-K	CIRCLIP	C型扣環	2	
15	97201-101805	WASHER, PLATE	平面墊圈	3	
16	97226-061312	SEAL	密封墊圈	1	

 OIL PUMP 機油泵

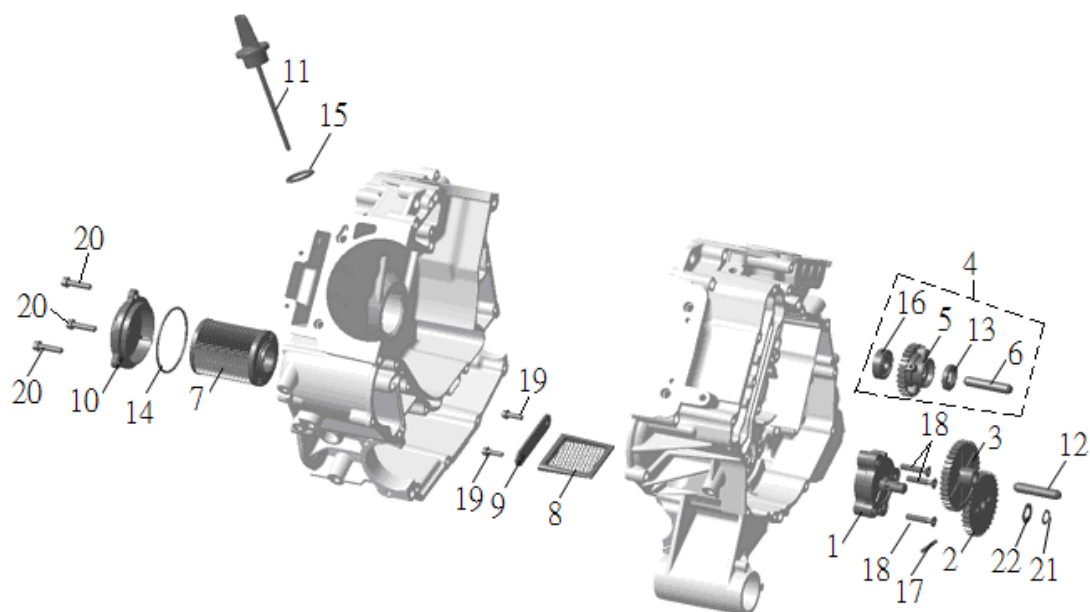


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	13100-ML8-00	PUMP ASSY, OIL	機油泵總成	1	
2	13124-ML8-00	OIL PUMP GEAR	機油泵傳動齒輪	1	
3	13178-ML8-00	OIL PUMP DRIVING WHEEL	機油泵驅動齒輪	1	
4	13350-ML8-00	BREATHER GEAR COMP	回油器組件	1	
5	13351-ML8-00	BREATHER GEAR	回油器齒輪	1	
6	13353-ML8-00	SHAFT	回油器軸	1	
7	15533-ML8-00	OIL FILTER	機油過濾器	1	
8	15536-ML8-00	ENGINE OIL STRAINER	機油濾網	1	
9	15537-ML8-00	RETAINING PLATE	濾網壓板	1	
10	15551-ML8-00	OIL FILTER COVER	過濾器飾蓋	1	
11	15563-ML8-00	GAUGE OIL LEVEL	量油尺	1	
12	23663-ML8-00	SHAFT	齒輪軸	1	
13	93110-15265	OIL SEAL	油封	1	
14	93210-26615	O-RING	護油圈	1	
15	93210-35224	O-RING	護油圈	1	
16	9332N-103009UU	BALL BEARING	滾珠軸承	1	
17	94510-40030	NEEDLE PIN	滾針	1	
18	94712-06030-B	SCREW, FLAT HEAD	十字孔埋頭螺絲	3	
19	96411-06012-B	BOLT, FLANGE	凸緣螺栓	2	
20	96411-06025-B	BOLT, FLANGE	凸緣螺栓	3	
21	97010-11010-K	CIRCLIP	C型扣環	1	
22	97201-112109-K	WASHER, PLATE	平面墊圈	1	

2016.03.21


13100-ML8-00A

 THROTTLE VALVE 節氣閥

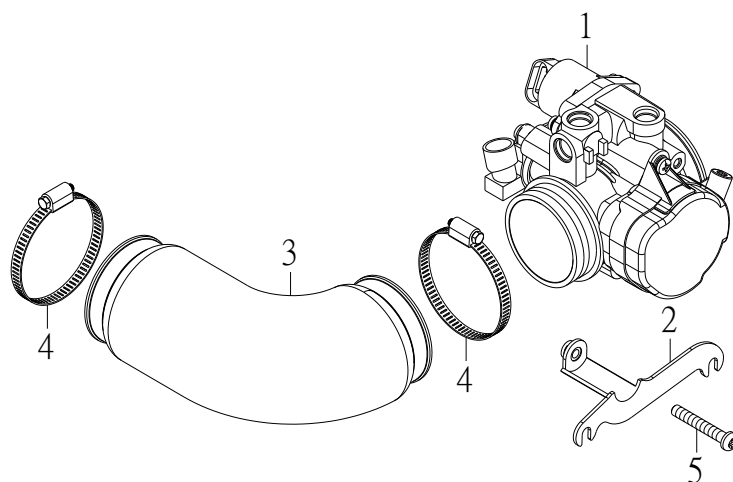


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	13201-ML8-00	THROTTLE VALVE	節氣閥總成	1	
2	13251-ML8-00	HOLDER, THROTTLE VALVE	節氣閥固定座	1	
3	13552-ML8-00	CONNECTING PIPE	進氣歧管橡膠接管	1	
4	90281-090070	CLAMP	斑馬式管夾	2	
5	96310-06040-B	SCREW, PAN HEAD	十字孔頭螺絲	1	

 CAMSHAFT, VALVE 凸輪軸、閥門

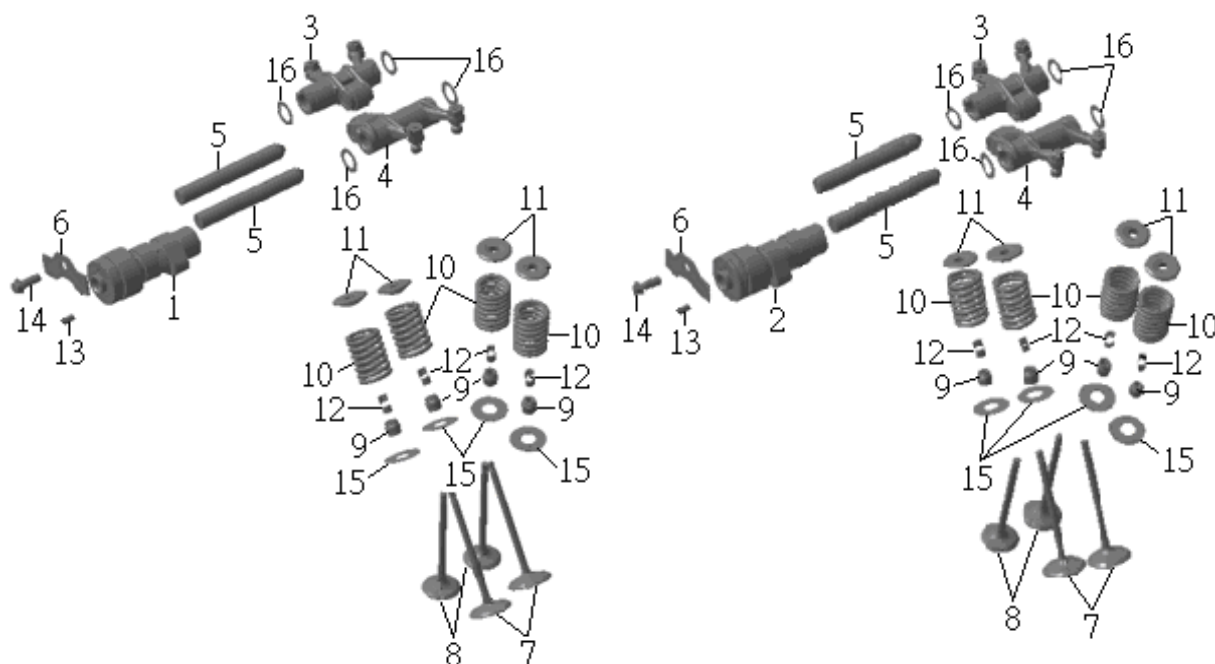


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	14100-ML8-00F	CAMSHAFT	前缸凸輪軸	1	
2	14100-ML8-00R	CAMSHAFT	後缸凸輪軸	1	
3	14430-ML8-00	ROCKER ARM COMP, IN	進氣搖臂組合	2	
4	14440-ML8-00	ROCKER ARM COMP, EX	排氣搖臂組合	2	
5	14450-ML8-00	SHAFT, ROCKER ARM	搖臂軸	4	
6	14451-ML8-00	CAMSHAFT RETAINING PLATE	凸輪軸限位板	2	
7	14711-ML8-00	VALVE, IN	進氣閥門	4	
8	14721-ML8-00	VALVE, EX	排氣閥門	4	
9	14731-ML8-00	SEAL, VALVE STEM	閥門徑封	8	
10	14751-ML8-00	SPRING, VALVE	閥門彈簧	8	
11	14771-ML8-00	RETAINER, VALVE SPRING	閥彈簧蓋	8	
12	14781-ML8-00	COTTER, VALVE	閥門鎖扣	16	
13	94510-40009	NEEDLE PIN	滾針	2	
14	96411-06016-B	BOLT, FLANGE	凸緣螺栓	2	
15	97201-112505	SPRING SEAT	閥彈簧座	8	
16	97201-121905	WASHER, PLATE	搖臂軸墊圈	8	

 CAM CHAIN, TENSIONER 內鏈條、拉力桿

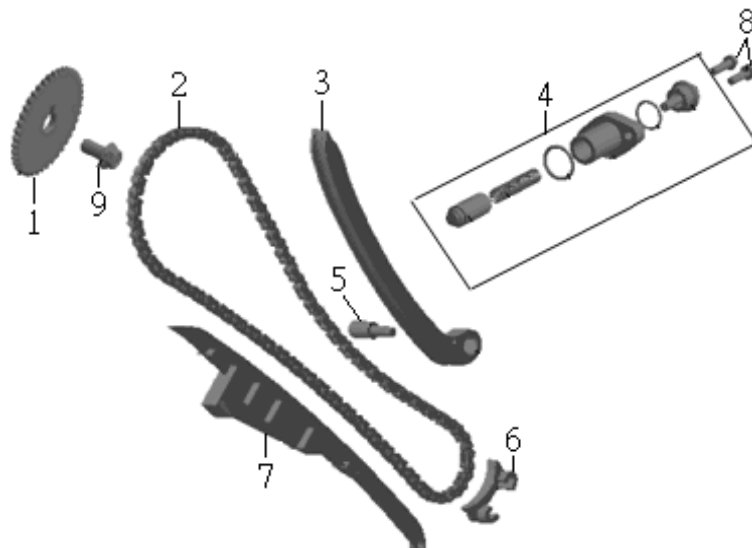


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	14111-ML8-00	SPROCKET, CAMSHAFT	凸輪軸鏈輪	2	
2	14501-ML8-00	CHAIN, CAM	凸輪軸內鏈條	2	
3	14510-ML8-00	TENSIONER, CAM CHAIN	鏈條拉力桿	2	
4	14520-ML8-00	LIFTER ASSY, TENSIONER	鏈條調整器	2	
5	14531-ML8-00	PIVOT, CAM CHAIN TENSIONER	拉力桿螺絲	2	
6	14550-ML8-00	LOWER TIMING CHAIN GUIDE	鏈條下導件	2	
7	14560-ML8-00	GUIDE COMP, CAM CHAIN	鏈條導件	2	
8	96411-06020-B	BOLT, FLANGE	凸緣螺栓	4	
9	96411-10020-B	BOLT, FLANGE	凸緣螺栓	2	

 CRANKCASE 曲軸箱

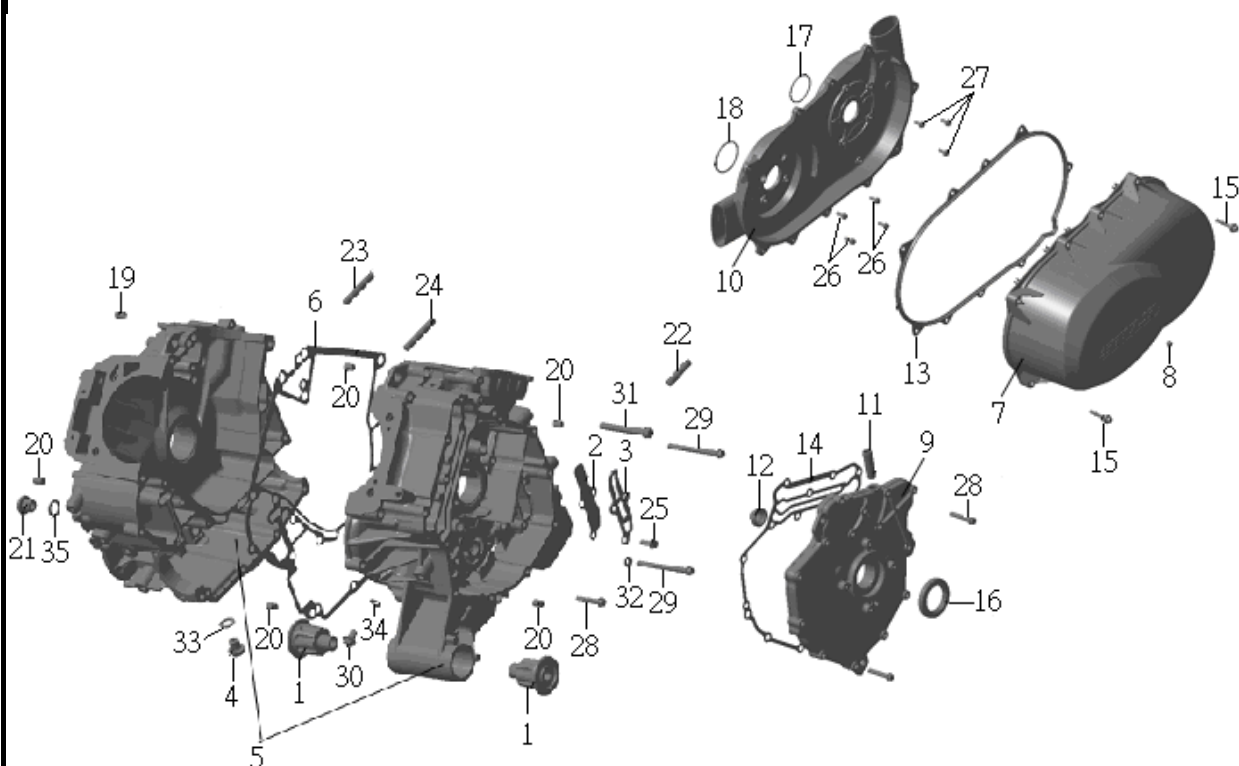


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	15118-ML8-00	BUSH, ENGINE HANGER	引擎吊架橡膠襯套	2	
2	15141-ML8-00	REED VALVE	彈力閥	1	
3	15143-ML8-00	STOPPER	限位座	1	
4	15223-ML8-00	BOLT	洩油螺栓	1	
5	15250-ML8-00	CRANKCASE COMP	曲軸箱體組合	1	
6	15251-ML8-00	GASKET, CRANKCASE	曲軸箱墊片	1	
7	15411-ML8-00	COVER, CVT	CVT側蓋	1	
8	15418-ML8-00	PLUG	排水橡膠塞	1	
9	15421-ML8-00	COVER, L REAR CRANKCASE	左曲軸箱蓋	1	
10	15431-ML8-00	CVT AIR GUIDE	CVT導風護罩板	1	
11	15471-ML8-00	VENT HOSE NIPPLE	通氣管接頭	1	
12	15476-ML8-00	SLEEVE	通氣套	1	
13	15481-ML8-00	GASKET, CVT COVER	CVT蓋墊片	1	
14	15483-ML8-00	GASKET, L CRANKCASE COVER	左曲軸箱蓋墊片	1	
15	15497-ML8-00	BOLT	飾蓋螺栓	9	
16	93110-34527	OIL SEAL	油封	1	
17	93210-35515	O-RING	護油圈	1	
18	93210-35580	O-RING	護油圈	1	
19	94410-08012	PIN, DOWEL	定位銷	1	
20	94510-80012	PIN	定位銷	5	
21	94706-14011-B	BOLT	搖臂軸蓋螺栓	1	
22	94717-08042-B	BOLT, STUD	雙頭螺栓	1	

 CRANKCASE 曲軸箱

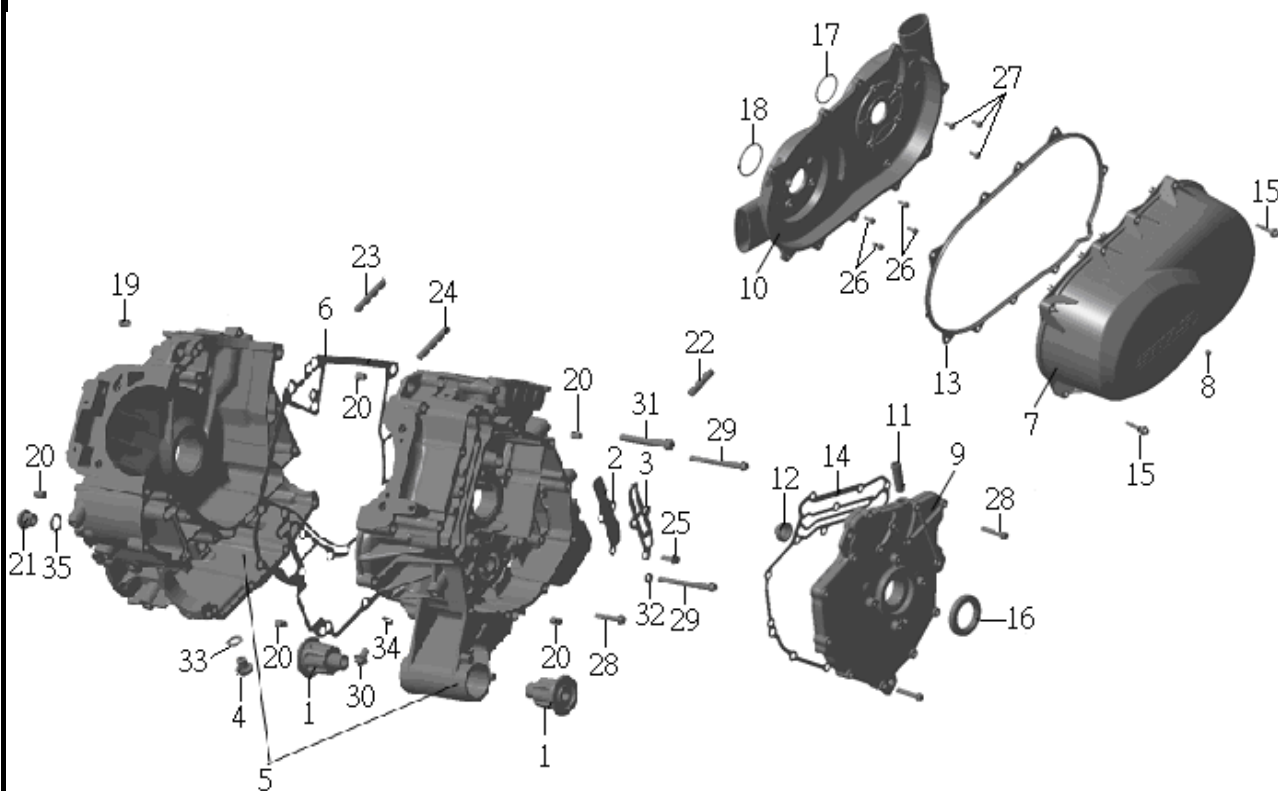


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
23	94717-08055-B	BOLT, STUD	1	雙頭螺栓
24	94717-08066-B	BOLT, STUD	1	雙頭螺栓
25	96411-06012-B	BOLT, FLANGE	3	凸緣螺栓
26	96411-06018-B	BOLT, FLANGE	4	凸緣螺栓
27	96411-06020-B	BOLT, FLANGE	5	凸緣螺栓
28	96411-06035-B	BOLT, FLANGE	15	凸緣螺栓
29	96411-06075-B	BOLT, FLANGE	12	凸緣螺栓
30	96411-08012-B	BOLT, FLANGE	1	凸緣螺栓
31	96411-08065-B	BOLT, FLANGE	4	凸緣螺栓
32	97226-061312	SEAL	1	密封墊圈
33	97230-121815	WASHER, COPPER	1	銅墊圈
34	97231-081612	WASHER, ALUMINUM	1	鋁墊圈
35	97231-141917	WASHER, ALUMINUM	1	鋁墊圈

 RIGHT CRANKCASE COVER 右曲軸箱蓋

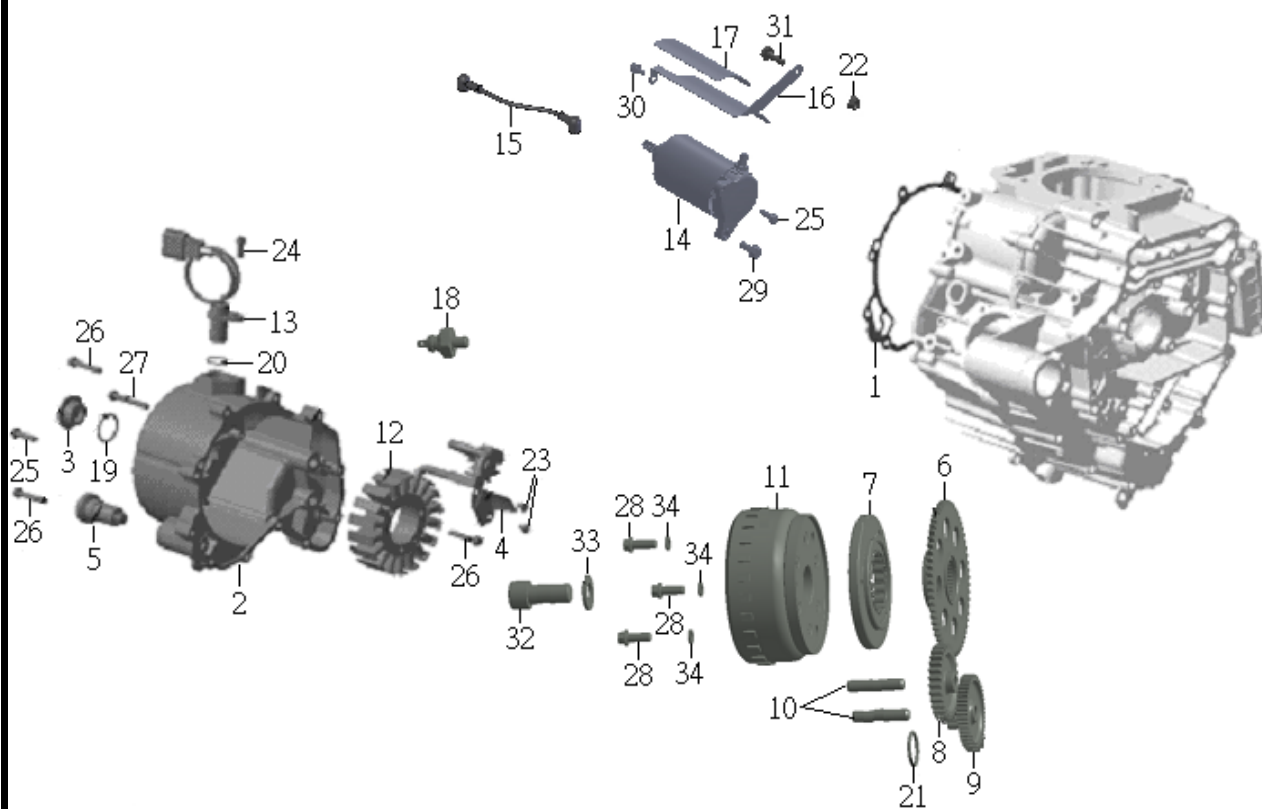


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	15221-ML8-00	GASKET, R CRANKCASE COVER	右曲軸箱蓋墊片	1	
2	15511-ML8-00	COVER, R CRANKCASE COMP	右曲軸箱蓋	1	
3	15517-ML8-00	SCREW PLUG	視孔蓋	1	
4	15541-ML8-00	CLAMPER, CORD	A.C.G壓線板	1	
5	15556-ML8-00	PRESSURE REGULATOR VALVE	釋壓閥	1	
6	23524-ML8-00	STARTING CLUTCH GEAR COMP	起動輪組件	1	
7	23570-ML8-00	STARTER CLUTCH ASSEMBLY	起動離合器總成	1	
8	23612-ML8-00	REDUCTION GEAR	減速齒輪1	1	
9	23660-ML8-00	REDUCTION GEAR	減速齒輪2	1	
10	23663-ML8-00	SHAFT, GEAR	齒輪軸	2	
11	35550-ML8-00	FLYWHEEL COMP	轉子總成	1	
12	35560-ML8-00	GENERATOR ASSY	發電機座總成	1	
13	35580-ML8-00	COIL, PULSE	脈動線圈	1	
14	35800-ML8-00	MOTOR ASSY, STARTER	起動馬達總成	1	
15	35831-ML8-00	CABLE, STARTER MOTOR	起動馬達導線	1	
16	35841-ML8-00	INSULATION PLATE	起動馬達隔熱板	1	
17	52846-ML8-00	INSULATION PAPER	起動馬達隔熱紙	1	
18	62725-ML8-00	OIL PRESSURE SWITCH	油壓警示開關	1	
19	93210-26236	O-RING	護油圈	1	
20	9321V-18180	O-RING	護油圈	1	
21	9321V-31245	O-RING	護油圈	1	
22	95401-061007-C	NUT, FLANGE	凸緣螺帽	1	

 RIGHT CRANKCASE COVER 右曲軸箱蓋

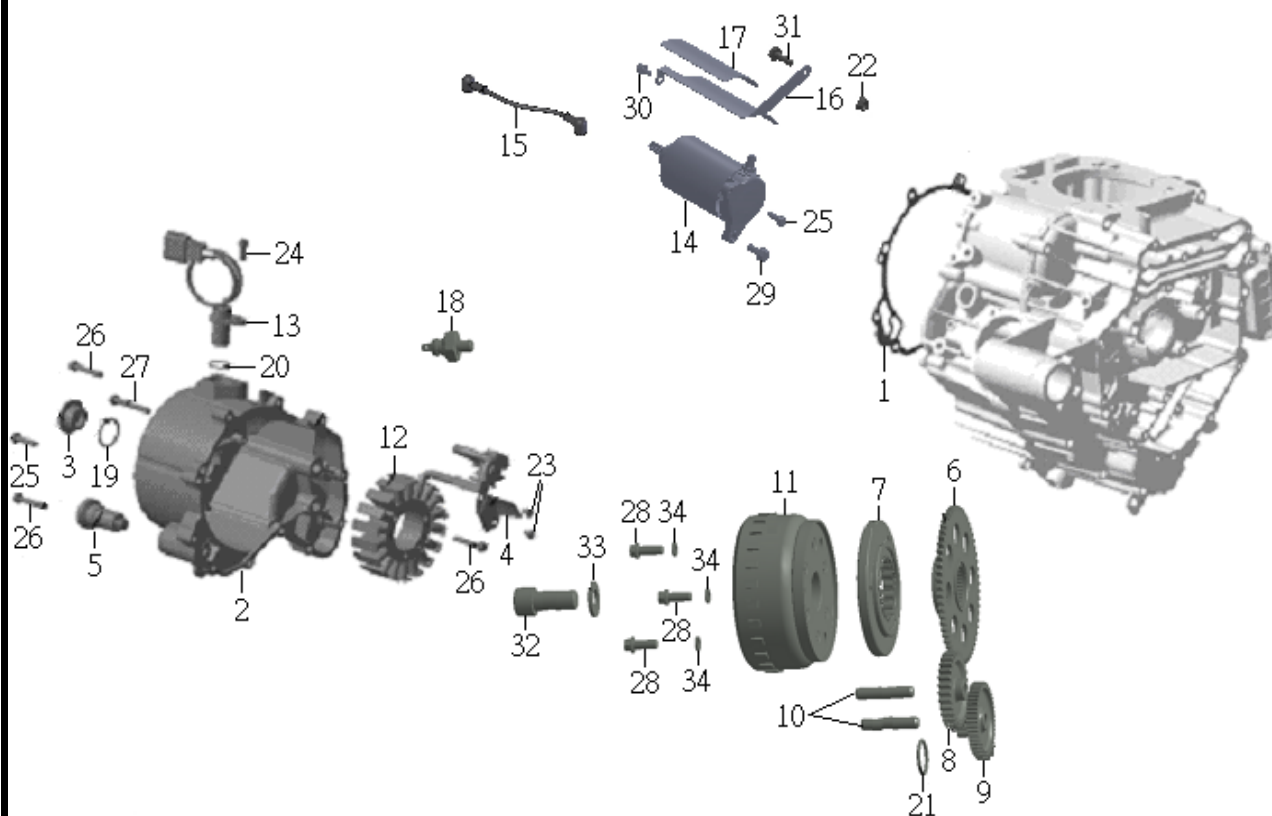

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
23	96310-05010-B	SCREW, PAN HEAD	十字孔頭螺絲	2	
24	96411-06016-B	BOLT, FLANGE	凸緣螺栓	1	
25	96411-06025-B	BOLT, FLANGE	凸緣螺栓	2	
26	96411-06035-B	BOLT, FLANGE	凸緣螺栓	12	
27	96411-06045-B	BOLT, FLANGE	凸緣螺栓	1	
28	96411-08020-K	BOLT, FLANGE	凸緣螺栓	3	
29	96411-08025-B	BOLT, FLANGE	凸緣螺栓	1	
30	96414-06012-B	BOLT, FLANGE	凸緣螺栓	1	
31	96414-06020-B	BOLT, FLANGE	凸緣螺栓	1	
32	96510-16035-C	BOLT, SOCKET	六角承窩螺栓	1	
33	97201-163030-K	WASHER, PLATE	平面墊圈	1	
34	97301-081320-K	WASHER, SPRING	彈簧墊圈	3	

 GEAR SHIFT 變速機構

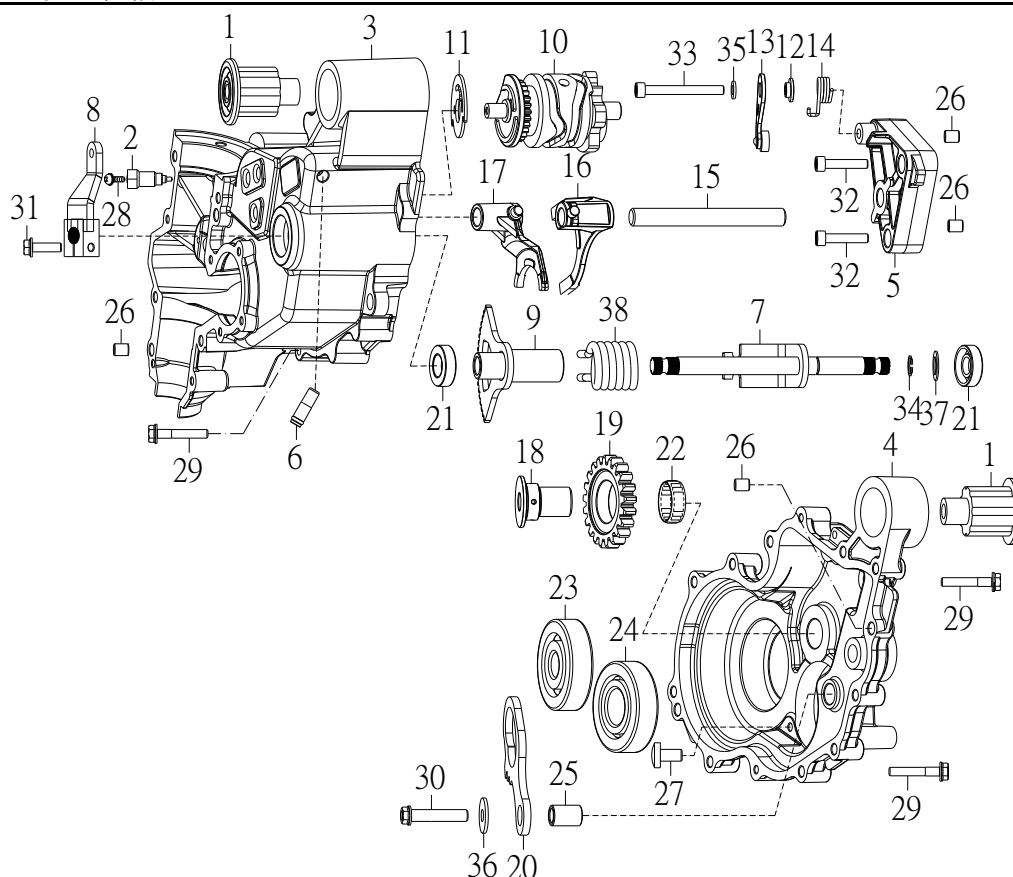


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	15118-ML8-00	BUSH, ENGINE HANGER	2	引擎吊架橡膠襯套
2	15130-ML8-00	GEARBOX POSITION SWITCHES	3	檔位開關組
3	15301-ML8-00	GEARBOX CASE	1	變速箱體
4	15311-ML8-00	COVER, GEARBOX	1	變速箱蓋
5	15331-ML8-00	MOUNTING BASE	1	安裝座
6	15371-ML8-00	VENT HOSE NIPPLE	1	通氣管接頭
7	24201-ML8-00	MANUAL SHIFT SPINDLE COMP	1	變速桿組
8	24206-ML8-00	SHIFT LEVER	1	變速拉桿
9	24216-ML8-00	GEAR, GEAR LEVER	1	變速桿齒輪組
10	24220-ML8-00	GEAR SHIFT DRUM ASSY	1	齒輪變速筒組
11	24223-ML8-00	ISOLATING WASHER	1	絕緣墊
12	24227-ML8-00	LOCKING RING	1	制止器軸環
13	24228-ML8-00	INDEX LEVER	1	變速凸輪制止器
14	24229-ML8-00	LOCKING SPRING	1	制止器彈簧
15	24236-ML8-00	SHAFT, GEAR SHIFT FORK	1	變速叉樞軸
16	24237-ML8-00	FORK, L GEAR SHIFT	1	齒輪變速左叉
17	24239-ML8-00	FORK, R GEAR SHIFT	1	齒輪變速右叉
18	26415-ML8-00	AXLE, IDLE GEAR	1	倒檔惰齒輪軸
19	26416-ML8-00	IDLE GEAR, REVERSE	1	倒檔惰齒輪
20	26450-ML8-00	PARKING BRAKE	1	駐車器
21	93110-12287	OIL SEAL	2	油封
22	93310-2529100	NEEDLE BEARING	1	滾針軸承

2016.05.06


24210-ML8-00A

 GEAR SHIFT 變速機構

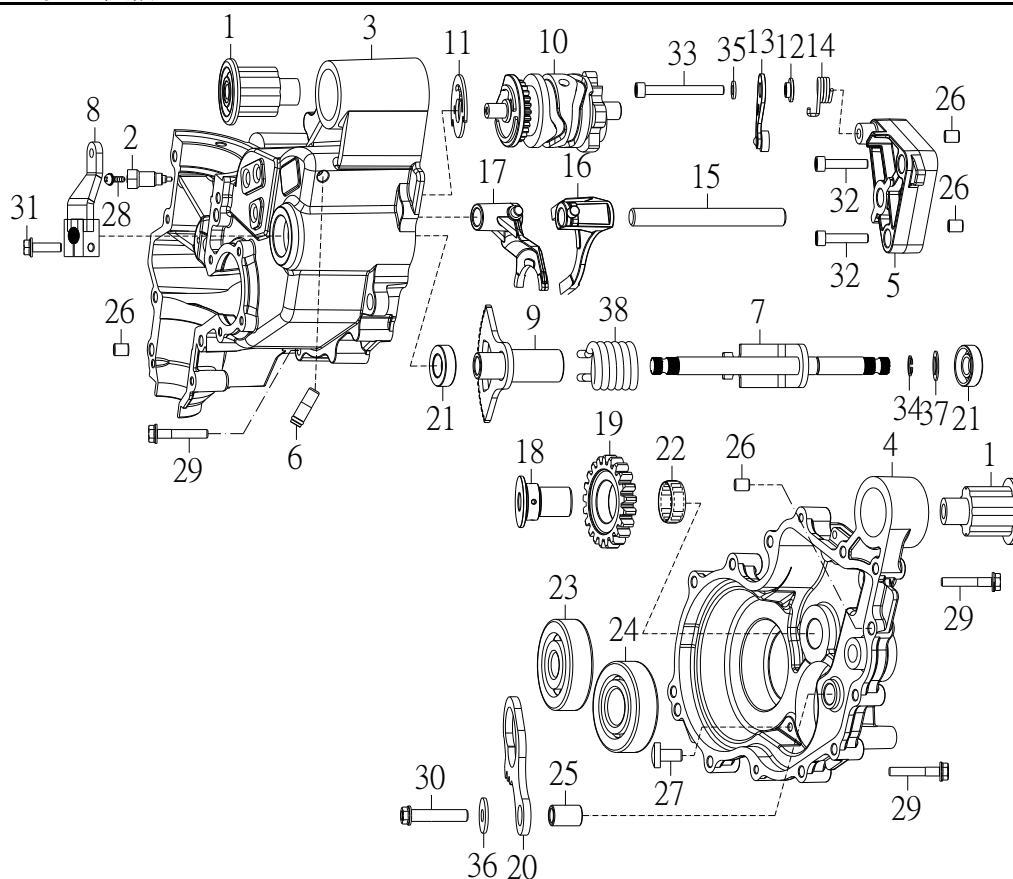


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
23	9332U-176217	BALL BEARING	1	滾珠軸承
24	9332U-256217	BALL BEARING	1	滾珠軸承
25	93510-091421	SLEEVE	1	駐車器軸環
26	94410-08010	PIN, DOWEL	6	定位銷
27	94706-08012-B	BOLT	1	軸承固定螺栓
28	96312-03008-B	SCREW, PAN HEAD WITH WASHER	3	十字孔頭螺絲附墊圈
29	96411-06035-B	BOLT, FLANGE	12	凸緣螺栓
30	96411-08040-B	BOLT, FLANGE	1	凸緣螺栓
31	96414-06020-C	BOLT, FLANGE	1	凸緣螺栓
32	96510-06030-B	BOLT, SOCKET	2	六角承窩螺栓
33	96510-06055-B	BOLT, SOCKET	1	六角承窩螺栓
34	97010-12010-K	CIRCLIP	1	C型扣環
35	97201-061820-K	WASHER, PLATE	1	平面墊圈
36	97201-082420-B	WASHER, PLATE	1	平面墊圈
37	97201-122010-K	WASHER, PLATE	1	平面墊圈
38	97510-5023000	SPRING, GEAR LEVER	1	變速桿回位彈簧

 CLUTCH 離合器

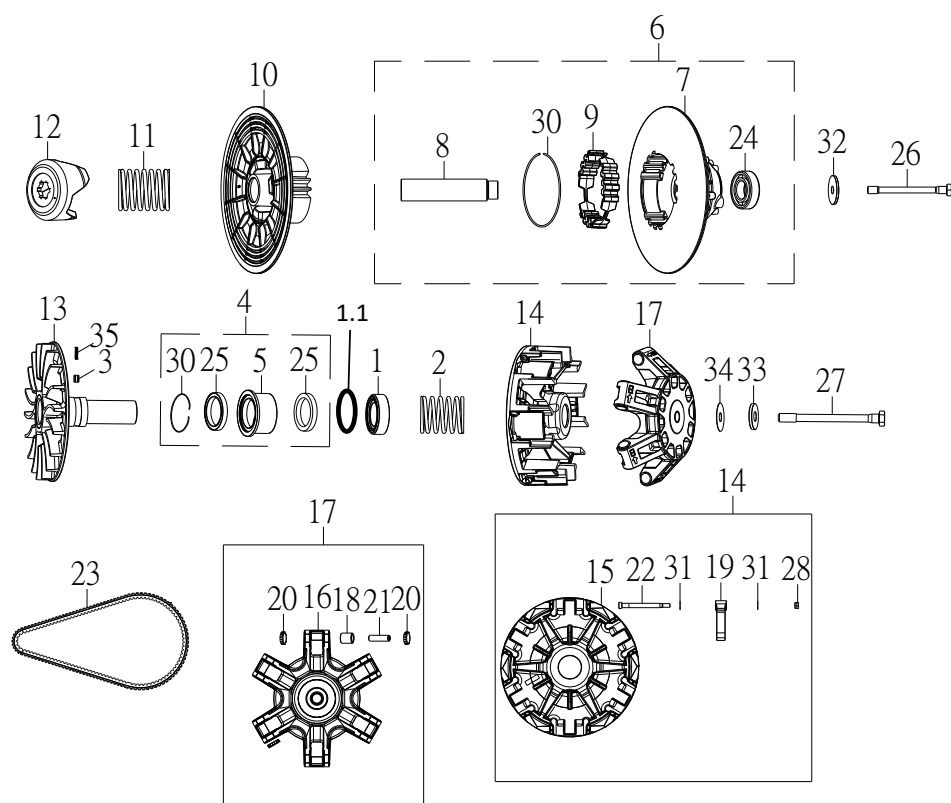


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	25621-DA9-00	FRICITION WASHER	1	主槽輪彈簧座組
1.1	25622-ML8-00	ANTIFRICTION WASHER	1	
2	25626-ML8-00	SPRING	1	主槽輪彈簧
3	25634-ML8-00	PIN	2	單向器定位銷
4	25635-ML8-00	ONE-WAY CLUTCH	1	單向器組合
5	25636-ML8-00	HOUSING	±	單向器支架
6	25660-ML8-00	PULLEY ASSY, FIXED SHEAVE	1	副固定槽輪整體
7	25661-ML8-00	PULLEY, FIXED SHEAVE	1	副固定槽輪組
8	25663-ML8-00	SHAFT	1	副槽輪中心軸
9	25664-ML8-00	TORQUE GEAR	1	傳力齒圈
10	25670-ML8-00	PULLEY, SLIDING SHEAVE	1	副滑動槽輪組
11	25680-ML8-00	SPRING	1	副槽輪彈簧
12	25685-ML8-00	CAM	1	扭力凸輪組
13	25711-ML8-00	FIXED SHEAVE	1	主固定槽輪組
14	25720-ML8-00	SLIDING SHEAVE	1	主滑動槽輪整體
15	25721-ML8-00	SLIDING SHEAVE	1	主滑動槽輪組
16	25723-ML8-00	PLATE, RAMP	1	凸輪板組
17	25725-ML8-00	PLATE, RAMP	1	凸輪板整體
18	25731-ML8-00	ROLLER	6	滾輪
19	25732-ML8-00	CENTRIFUGAL LEVER	6	甩塊組
20	25733-ML8-00	SLIDER SHOE	12	減磨墊
21	25736-ML8-00	SHAFT	6	滾輪軸
22	25737-ML8-00	CENTRIFUGAL LEVER PIVOT BOLT	6	甩塊軸

 CLUTCH 離合器

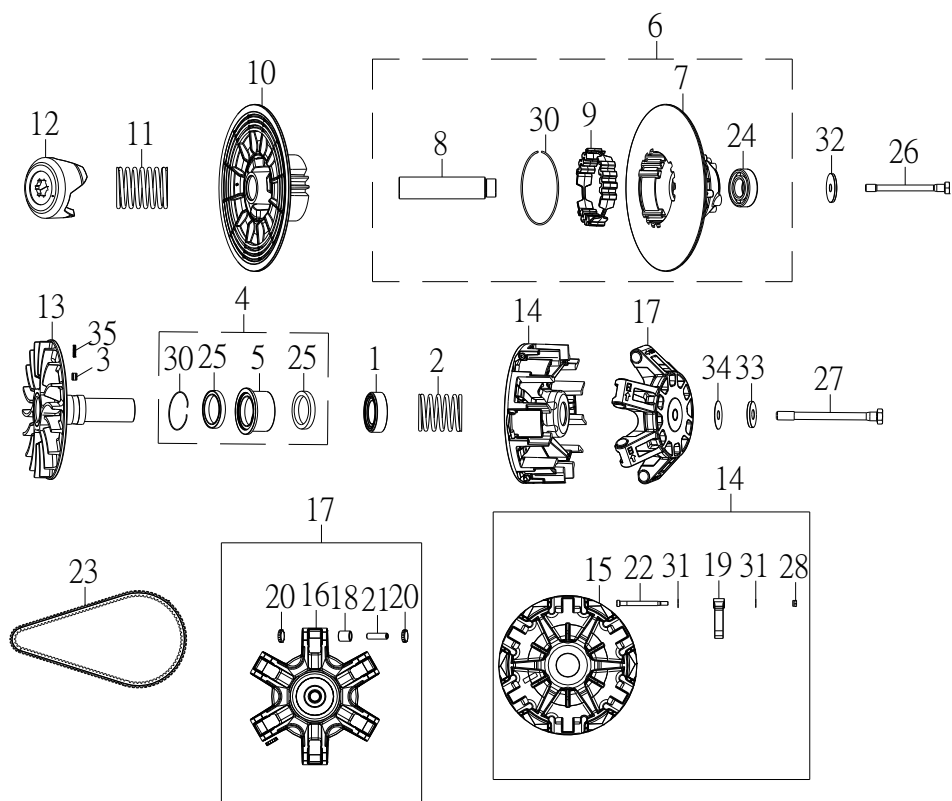


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
23	25741-ML8-00	BELT	皮帶	1	
24	9332U-255215UU	BALL BEARING	滾珠軸承	1	
25	9332U-405207UU	BALL BEARING	滾珠軸承	2	
26	94706-10115-K	DRIVEN PULLEY SCREW	副槽輪固定軸	1	
27	94706-12145-K	DRIVE PULLEY SCREW	主槽輪固定軸	1	
28	95311-050806-B	LOCK NUT	尼龍螺帽	6	
29	97050-10056	RETAINING RING	單向器止動環	1	
30	97050-20110	RETAINING RING	傳力齒圈止動環	1	
31	97201-061203	THRUST WASHER	甩塊墊片	12	
32	97201-104030-B	WASHER, PLATE	平面墊圈	1	
33	97201-123640-B	WASHER, PLATE	平面墊圈	1	
34	97201-123905-B	WASHER, PLATE	平面墊圈	1	
35	97501-0404016	SPRING	單向器回位彈簧	2	

 TRANSMISSION SYSTEM 傳動系統

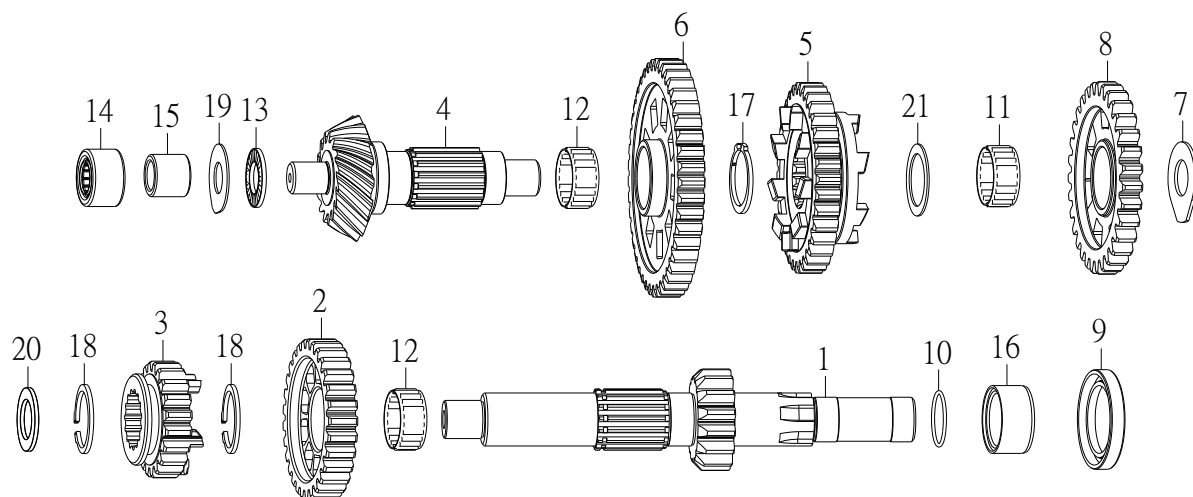

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	26111-ML8-00	MAIN SHAFT	傳動主軸	1	
2	26112-ML8-00	HIGH RANGE GEAR	主軸高速齒輪	1	
3	26114-ML8-00	LOW RANGE GEAR	主軸低速齒輪	1	
4	26411-ML8-00	COUNTERSHAFT	傳動副軸	1	
5	26412-ML8-00	SLIDING GEAR	副軸高速齒輪	1	
6	26414-ML8-00	LOW RANGE GEAR	副軸低速齒輪	1	
7	26423-ML8-00	WASHER	齒輪墊圈	1	
8	26426-ML8-00	REVERSE GEAR	副軸倒檔齒輪	1	
9	93110-32477	OIL SEAL	油封	1	
10	93210-18236	O-RING	護油圈	1	
11	93310-2529100	NEEDLE BEARING	滾針軸承	1	
12	93310-2529128	NEEDLE BEARING	滾針軸承	2	
13	93316-1528020	PLAIN BEARING	平面軸承	1	
14	9331N-1927160	NEEDLE BEARING	滾針軸承	1	
15	93510-151916	COUNTERSHAFT BUSH	傳動副軸襯套	1	
16	93510-253218-K	MAIN SHAFT BUSH	傳動主軸襯套	1	
17	97014-26519	CIRCLIP	同心扣環	1	
18	97014-29019	CIRCLIP	C型同心扣環	2	
19	97201-152810	WASHER, PLATE	平面墊圈	1	
20	97201-193020-K	WASHER, PLATE	平面墊圈	1	
21	97201-253410-K	THRUST WASHER	齒輪襯片	1	

 OUTPUT SHAFT 傳輸軸

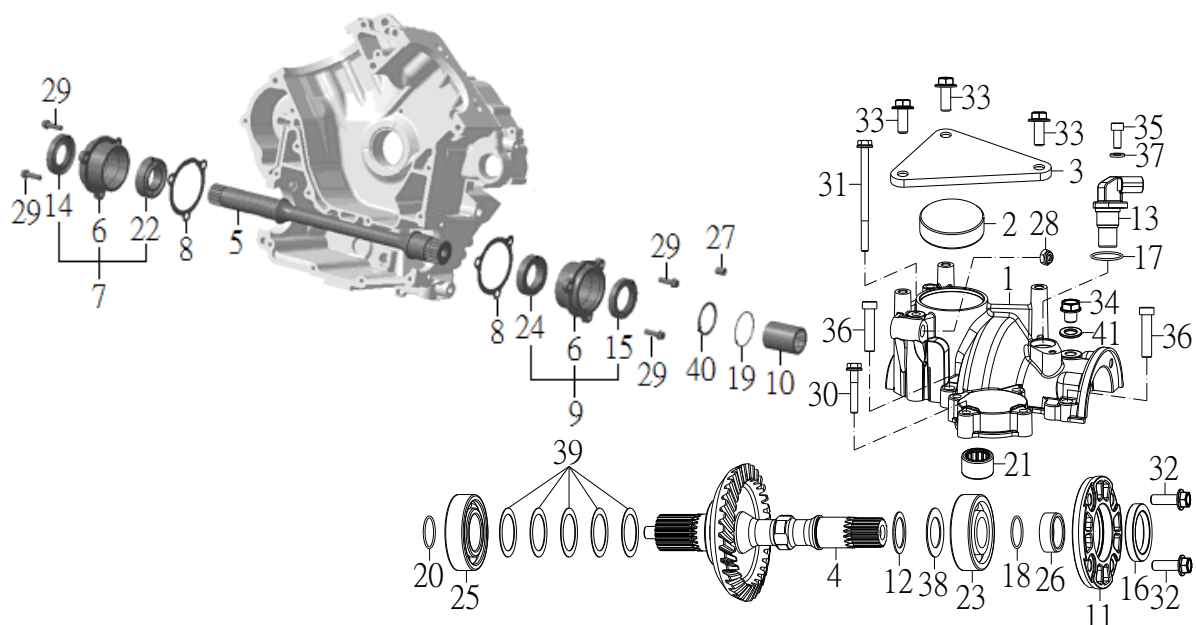


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	15321-ML8-00	GEARBOX REAR COVER	變速箱後蓋	1	
2	15378-ML8-00	PLUG, REAR COVER	後蓋堵頭	1	
3	15379-ML8-00	PRESS PLATE, PLUG	堵頭壓板	1	
4	26470-ML8-00	OUTPUT SHAFT COMP	輸出齒輪軸組	1	
5	26471-ML8-00	DRIVE SHAFT	前輸出軸	1	
6	26472-ML8-00	BEARING COVER	軸承端蓋	2	
7	26472-ML8-00A	BEARING COVER COMP	前端蓋組合	1	
8	26473-ML8-00	GASKET	端蓋墊片	2	
9	26474-ML8-00A	BEARING COVER COMP	後端蓋組合	1	
10	26475-ML8-00	COUPLING SLEEVE	接合花鍵套	1	
11	26476-ML8-00	REAR OUTPUT COVER	後輸出端蓋	1	
12	26477-ML8-00	WASHER	齒輪墊圈	1	
13	61520-ML8-00	VELOCITY SENSOR	速度感應器	1	
14	93110-25477	OIL SEAL	油封	1	
15	93110-30477	OIL SEAL	油封	1	
16	93110-32477	OIL SEAL	油封	1	
17	93210-17171	O-RING	護油圈	1	
18	93210-18236	O-RING	護油圈	1	
19	93210-20460	O-RING	護油圈	1	
20	93210-27252	O-RING	護油圈	1	
21	93310-1826160	NEEDLE BEARING	滾針軸承	1	
22	9332U-254712	BALL BEARING	滾珠軸承	1	

2016.05.06


26470-ML8-00A

 OUTPUT SHAFT 傳輸軸

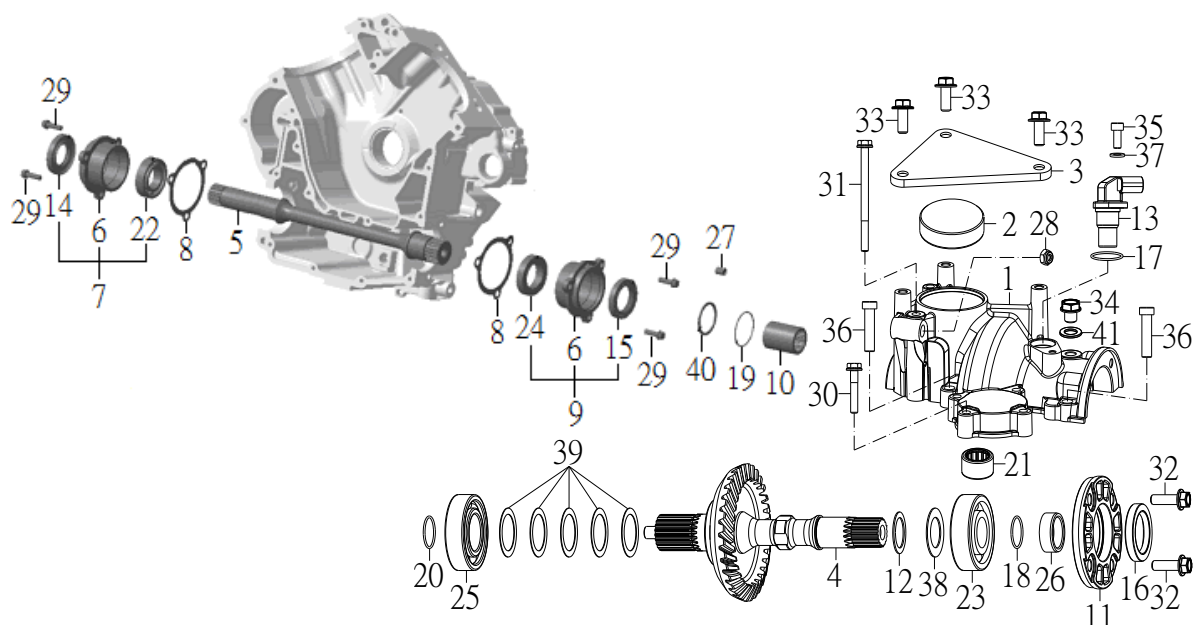


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
23	9332U-256217	BALL BEARING	滾珠軸承	1	
24	9332U-304709	BALL BEARING	滾珠軸承	1	
25	9332U-306216	BALL BEARING	滾珠軸承	1	
26	93510-253211-K	OUTPUT SHAFT BUSH	輸出軸襯套	1	
27	94410-10014	PIN, DOWEL	定位銷	1	
28	95301-081309-B	NUT, LOCK	止鬆螺帽	3	
29	96411-06018-B	BOLT, FLANGE	凸緣螺栓	6	
30	96411-06035-B	BOLT, FLANGE	凸緣螺栓	5	
31	96411-06085-B	BOLT, FLANGE	凸緣螺栓	2	
32	96411-08025-B	BOLT, FLANGE	凸緣螺栓	4	
33	96414-08020-B	BOLT, FLANGE	凸緣螺栓	3	
34	96414-10016-C	BOLT, FLANGE	凸緣螺栓	2	
35	96510-06016-B	BOLT, SOCKET	六角承窩螺栓	1	
36	96510-08035-B	BOLT, SOCKET	六角承窩螺栓	4	
37	97201-061215-B	WASHER, PLATE	平面墊圈	1	
38	97201-254002	SHIM	輸出軸填隙片2	1	
39	97201-304002-K	SHIM	輸出軸填隙片1	5	
40	97220-404720	WASHER	橡膠墊圈	1	
41	97231-101813	WASHER, ALUMINUM	鋁墊圈	2	

 INTAKE 空氣吸入口

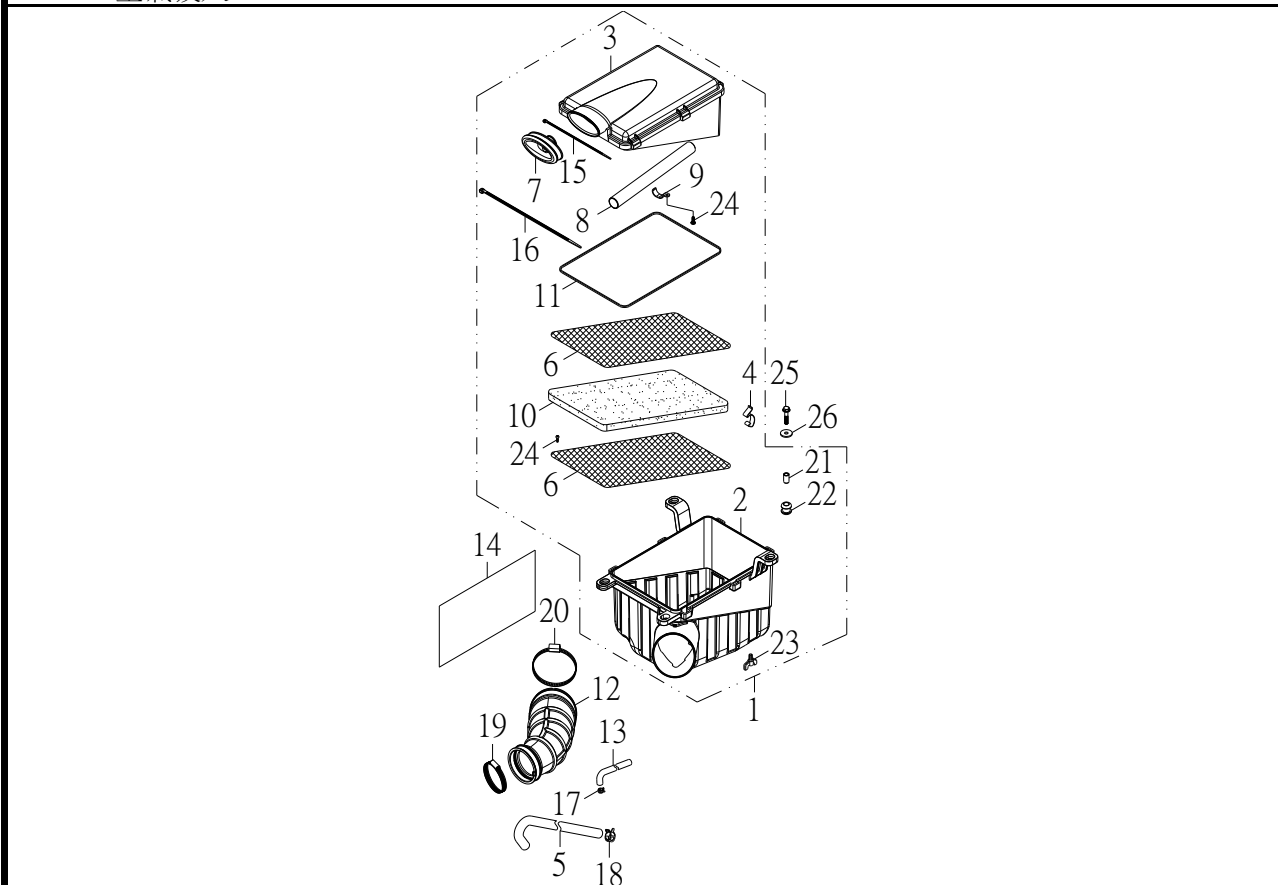


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	13411-DL9-01A	AIR CLEANER CASE COMP	空氣濾清器箱整體	1	
2	13411-ML8-00	CASE, AIR CLEANER	空氣濾清器箱	1	
3	13412-MAX-00	CAP, CLEANER CASE	空氣濾清器箱蓋	1	
4	13415-MAX-00	CLAMP	濾清箱板夾	6	
5	13424-ML8-00	BREATHER TUBE	集油室通氣管	1	
6	13433-MAX-00	PLATE, ELEMENT SET	濾清網固定板	2	
7	13436-DA9-00	RUBBER RING, DUCT	進氣管橡皮環	1	
8	13437-DA9-00	DUCT	進氣管	1	
9	13439-DA9-00	PLATE, DUCT	進氣管壓板	1	
10	13451-MAX-00	ELEMENT, AIR CLEANER	空氣濾清網	1	
11	13452-MAX-00	SEAL, AIR CLEANER COVER	濾清箱密封圈	1	
12	13453-ML8-00	JOINT, AIR CLEANER	濾清箱接頭	1	
13	15172-ML8-01	HOSE, BREATH	變速箱蓋通氣管	1	
14	52846-MAX-02	INSULATION PAPER	隔熱紙	1	
15	61135-MAX-00	BAND, CORD	束帶	1	
16	61135-RAM-00	BAND, CORD	束帶	1	
17	90220-08100-B	CLAMP	板型管夾	1	
18	90220-10160-C	CLAMP	板型管夾	1	
19	90281-090080	CLAMP	斑馬式管夾	1	
20	90281-120100	CLAMP	斑馬式管夾	1	
21	93510-071017-B	COLLAR	機油箱軸環	4	
22	93580-101919	GROMMET	機油箱套環	4	

 INTAKE 空氣吸入口

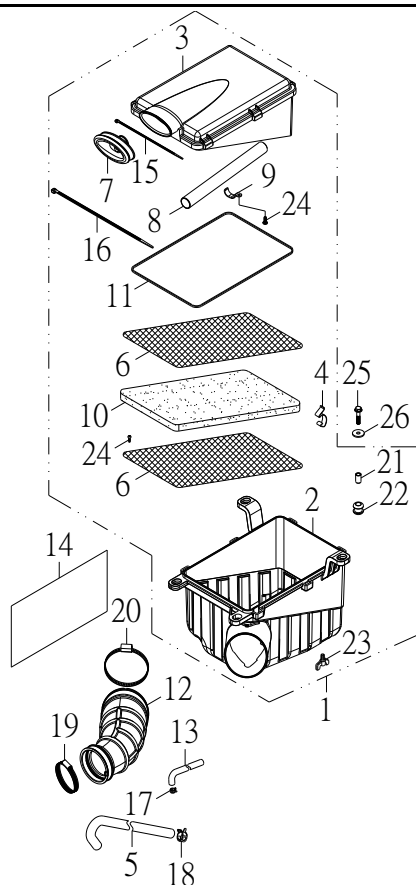


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
23	94716-06010-C	BOLT, BUTTERFLY	蝶形螺栓	1	
24	96112-41218-K	SCREW, TAPPING	自攻螺絲	7	
25	96414-06028-B	BOLT, FLANGE	凸緣螺栓	4	
26	97201-062220-B	WASHER, PLATE	平面墊圈	4	

 REAR TRANSMISSION 後傳動系統

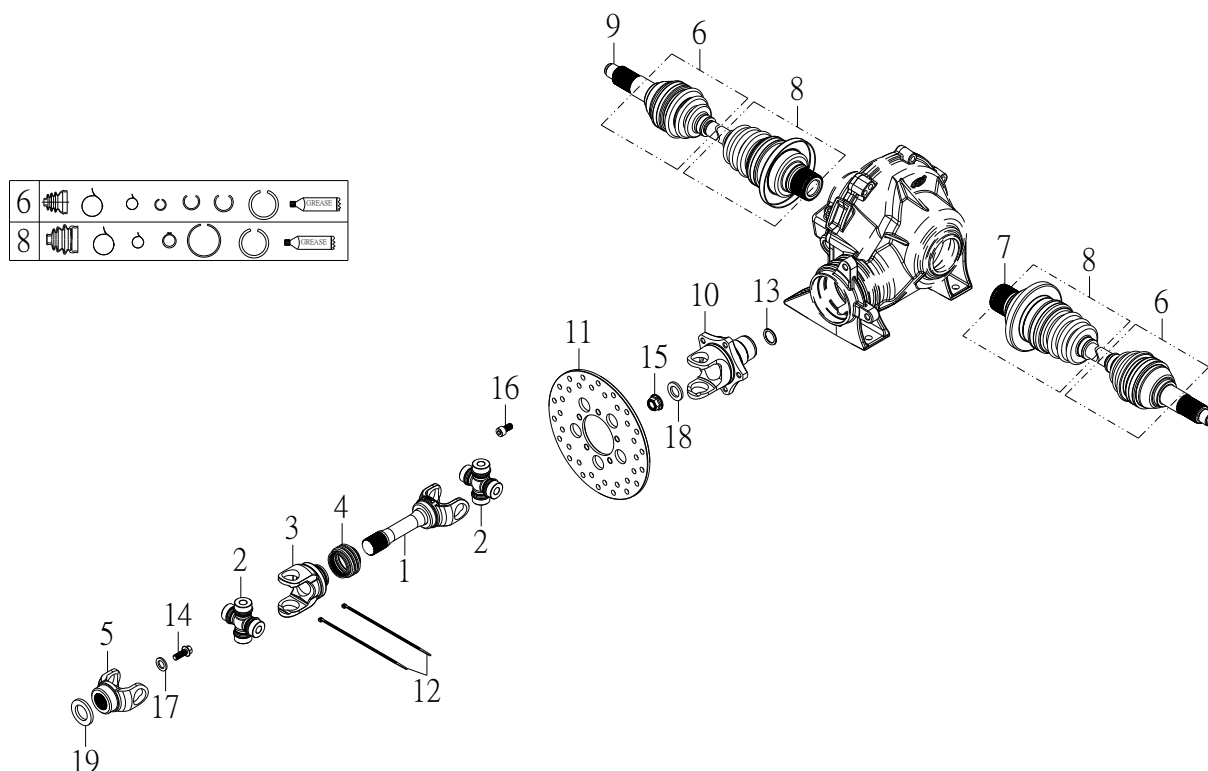


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	26481-DL9-01A	REAR DRIVE SHAFT COMP	後驅動軸組	1	
2	26483-MAX-01A	CROSS JOINT COMP	十字接頭組	2	
3	26486-MAX-02	UNIVERSAL JOINT 3	十字頭聯結器3	1	
4	26487-MAX-00	BOOT	驅動軸防塵套	1	
5	26497-ML8-00	UNIVERSAL JOINT 4	十字頭聯結器4	1	
6	42533-MAX-00	BOOT SET	輪端防塵套修理包	2	
7	42835-DL9-00	REAR DRIVE AXLE ASSY L	左後傳動軸總成	1	
8	42838-MAX-00	BOOT SET	引擎端防塵套修理包	2	
9	42845-DL9-00	REAR DRIVE AXLE ASSY R	右後傳動軸總成	1	
10	45830-DL9-00	BRACKET, DISC	駐車圓盤座	1	
11	45831-DA9-01	DISC, PARK	駐車圓盤	1	
12	61135-MAX-00	BAND, CORD	束帶	2	
13	93210-31244	O-RING	護油圈	1	
14	94710-10030-B	BOLT	連結器固定螺栓	1	
15	95301-121911-C	NUT, LOCK	止鬆螺帽	1	
16	96510-08016-G	BOLT, SOCKET	六角承窩螺栓	5	
17	97201-103250-C	WASHER, PLATE	平面墊圈	1	
18	97201-123150-C	WASHER, PLATE	平面墊圈	1	
19	97201-243820	WASHER, PLATE	平面墊圈	1	

 FRONT TRANSMISSION 前傳動系統

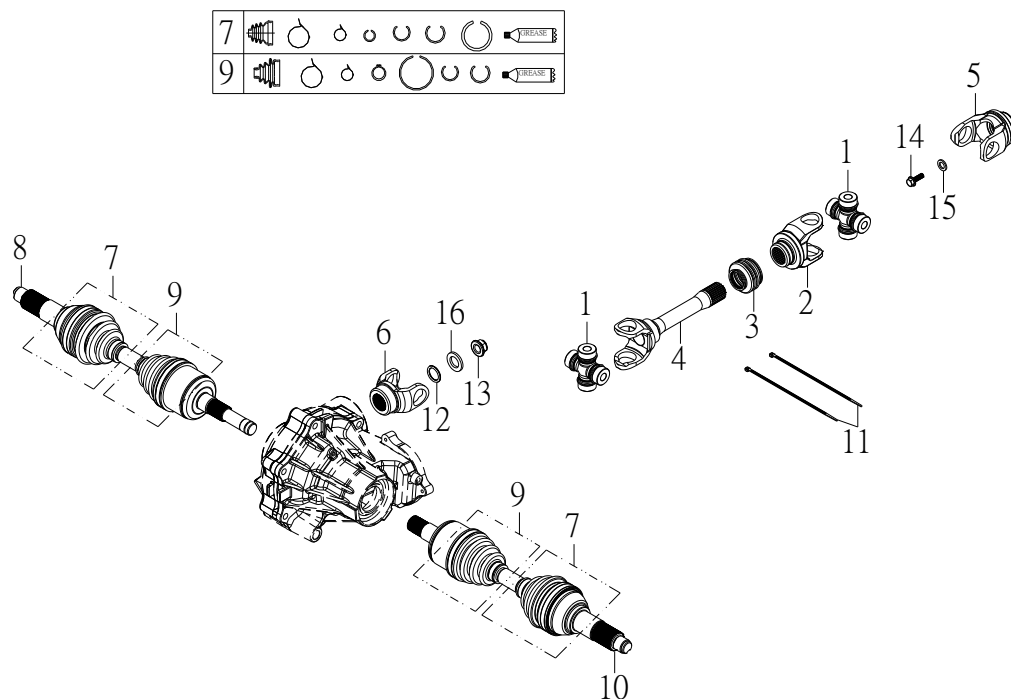

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	26483-MAX-01A	CROSS JOINT COMP	十字接頭組	2	
2	26486-MAX-02	UNIVERSAL JOINT 3	十字頭聯結器3	1	
3	26487-MAX-00	BOOT	驅動軸防塵套	1	
4	26491-ML9-00A	FRONT DRIVE SHAFT COMP	前驅動軸組	1	
5	26497-ML8-00	UNIVERSAL JOINT 4	十字頭聯結器4	1	
6	26499-ML9-00	FRONT COUPLING	軸聯結器前	1	
7	42533-MAX-00	BOOT SET	輪端防塵套修理包	2	
8	42535-MAX-00	DRIVE AXLE ASSY L F	左前傳動軸總成	1	
9	42538-MAX-00	BOOT SET	引擎端防塵套修理包	2	
10	42545-MAX-00	DRIVE AXLE ASSY R F	右前傳動軸總成	1	
11	61135-MAX-00	BAND, CORD	束帶	2	
12	9321V-30200	O-RING	護油圈	1	
13	95401-142114-B	NUT, FLANGE	凸緣螺帽	1	
14	96414-08030-B	BOLT, FLANGE	凸緣螺栓	1	
15	97201-083250-B	WASHER, PLATE	平面墊圈	1	
16	97201-143430-B	WASHER, PLATE	平面墊圈	1	

 EXHAUST MUFFLER 排氣管

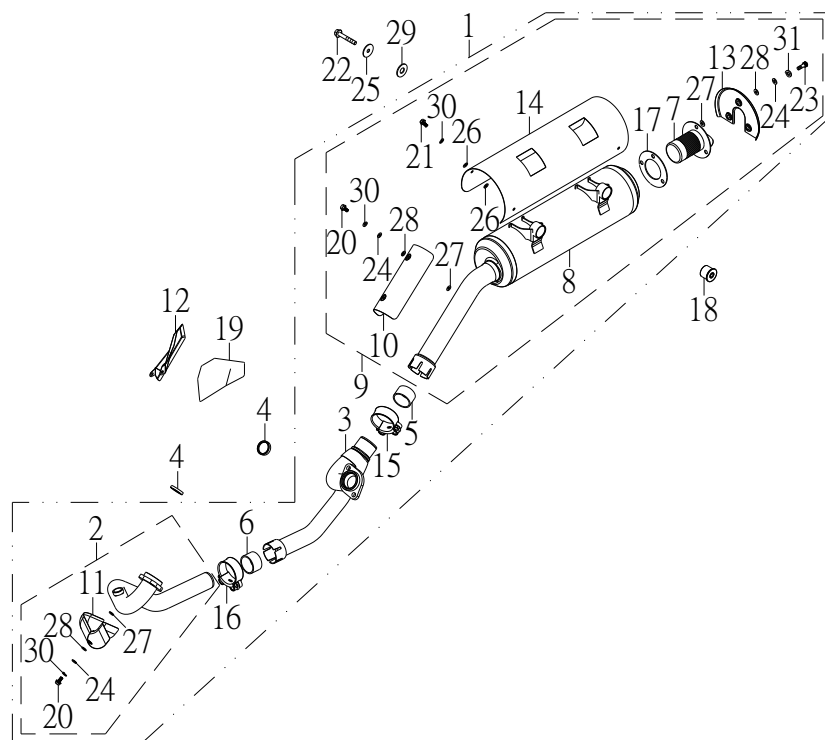


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	31610-DL9-00C	EXHAUST MUFFLER ASSY	排氣管總成	1	
2	31611-ML8-00	PIPE F, EXHAUST	排氣導管前	1	
3	31612-ML8-01	PIPE R, EXHAUST	排氣導管後	1	
4	31613-ML8-00	GASKET, EXHAUST PIPE	排氣管墊片	2	
	31613-ML8-01	GASKET, EXHAUST PIPE	排氣管墊片	2	
5	31614-MAX-00	GASKET, MUFFLER	消音筒墊片	1	
6	31614-ML8-00	GASKET, EXHAUST PIPE	排氣導管墊片	1	
7	31616-MAX-00C	ARRESTOR, SPARK	火花捕捉器	1	
8	31617-DL9-00C	MUFFLER	消音筒	1	
9	31617-DL9-00CA	MUFFLER COMP	消音筒組	1	
10	31618-MAX-01	PROTECTOR, EXHAUST	排氣管護罩2	1	
11	31618-ML8-00	PROTECTOR, EXHAUST	排氣管護罩	1	
12	31618-TL9-00	PROTECTOR, EXHAUST	排氣管側護罩	1	
13	31619-MAX-04	PROTECTOR, ELIMINATOR	消音筒護罩4	1	
14	31619-ML8-00	PROTECTOR, ELIMINATOR	消音筒護罩	1	
15	31624-ML8-00	CLIP	消音筒管束	1	
16	31625-ML8-00	CLIP	排氣導管管束	1	
17	31627-CGV-00	WASHER, SPARK ARRESTOR	火花捕捉器墊片	1	
18	31666-MAX-00	BUSH	排氣管襯套	2	
19	52846-TL9-00	INSULATION PAPER	排氣管側護罩隔熱紙	1	
20	96411-06012-R	BOLT, FLANGE	凸緣螺栓	4	
21	96411-06014-R	BOLT, FLANGE	凸緣螺栓	4	

2017.05.12


31610-DL9-00A

 EXHAUST MUFFLER 排氣管

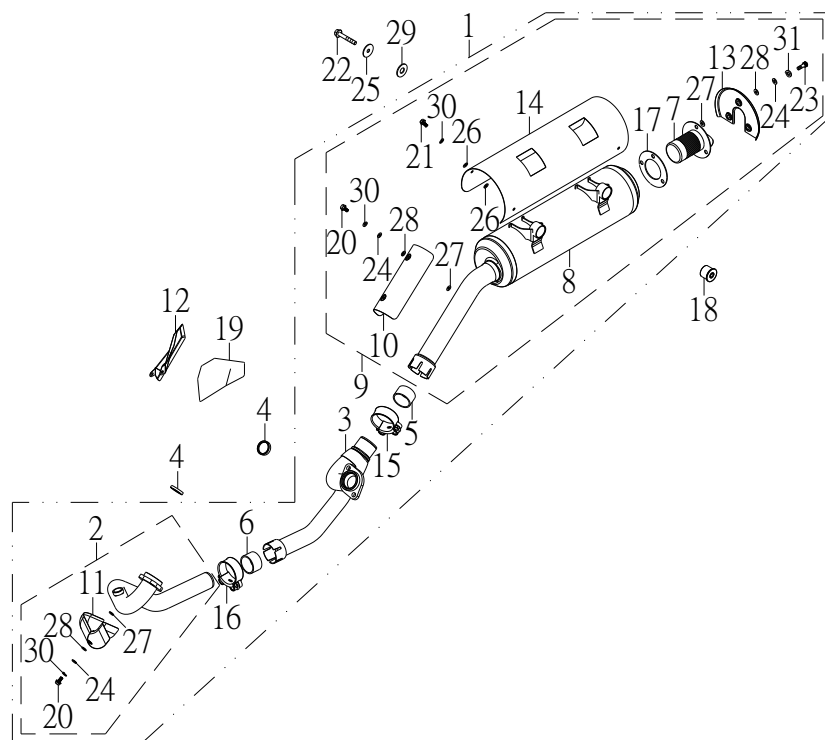


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
22	96414-08040-B	BOLT, FLANGE	凸緣螺栓	2	
23	96510-06020-K	BOLT, SOCKET	六角承窩螺栓	3	
24	97201-061310-K	WASHER, PLATE	平面墊圈	7	
25	97201-083216-B	WASHER, PLATE	平面墊圈	2	
26	97206-061610	WASHER, PLATE	白鐵墊圈	8	
27	97210-051215	WASHER, PLATE	石棉墊圈	7	
28	97210-061215	WASHER, PLATE	石棉墊圈	7	
29	97220-133220	WASHER	橡膠墊圈	2	
30	97301-061215-R	WASHER, SPRING	彈簧墊圈	8	
31	97326-061107-N	WASHER	外齒墊圈	3	

 REAR SUSPENSION 後懸吊系統

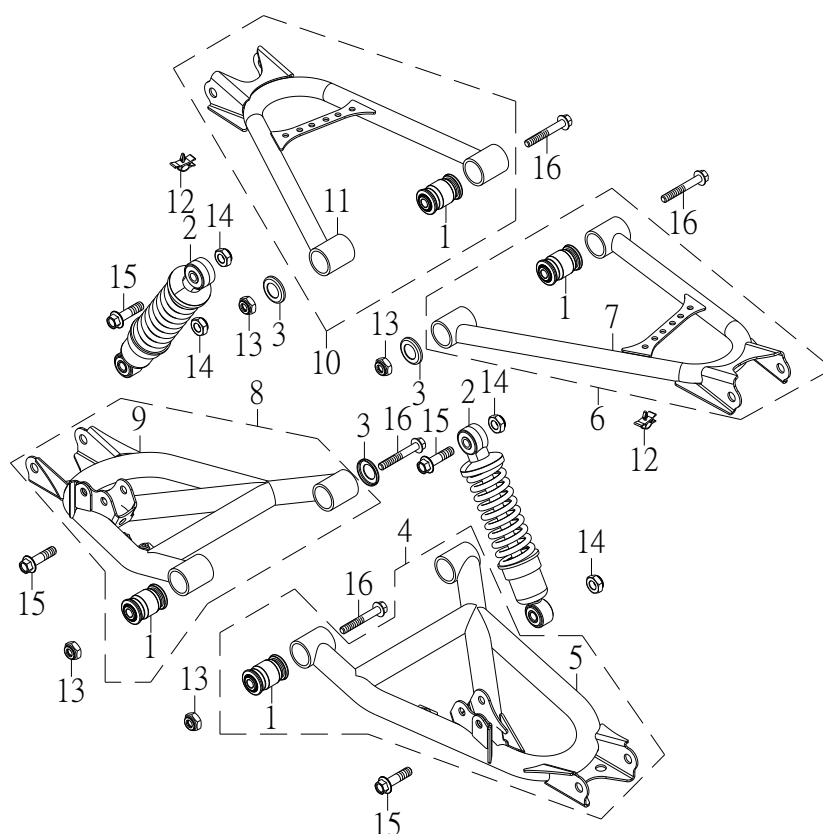


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	32116-MAX-00	BUSH	搖臂襯套	8	
2	32210-MAX-00	SHOCK ABSORBER ASSY, REAR	後緩衝器總成	2	
	32210-MAX-02	SHOCK ABSORBER ASSY, REAR	後緩衝器總成	2	gas tank
	32210-MAX-03	SHOCK ABSORBER ASSY, REAR	後緩衝器總成	2	
	32210-MAX-04	SHOCK ABSORBER ASSY, REAR	後緩衝器總成	2	
3	42183-MAX-00	GRUMMET	墊環	4	
4	42261-DA9-00	REAR LOWER, ARM LEFT COMP	左後下搖臂組	1	
5	42261-DA9-00G	REAR LOWER, ARM LEFT	左後下搖臂	1	
6	42266-DA9-00	REAR UPPER, ARM LEFT COMP	左後上搖臂組	1	
7	42266-DA9-00G	REAR UPPER, ARM LEFT	左後上搖臂	1	
8	42271-DA9-00	REAR LOWER, ARM RIGHT COMP	右後下搖臂組	1	
9	42271-DA9-00G	REAR LOWER, ARM RIGHT	右後下搖臂	1	
10	42276-DA9-00	REAR UPPER, ARM RIGHT COMP	右後上搖臂組	1	
11	42276-DA9-00G	REAR UPPER, ARM RIGHT	右後上搖臂	1	
12	61393-MAX-00	CLAMP	導線夾	2	
13	95311-101710-B	NUT, NYLON	尼龍螺帽	8	
14	95311-101710-C	NUT, NYLON	尼龍螺帽	4	
15	96414-10050-C	BOLT, FLANGE	凸緣螺栓	4	
16	96414-10070-B	BOLT, FLANGE	凸緣螺栓	8	

 FRAME 車架

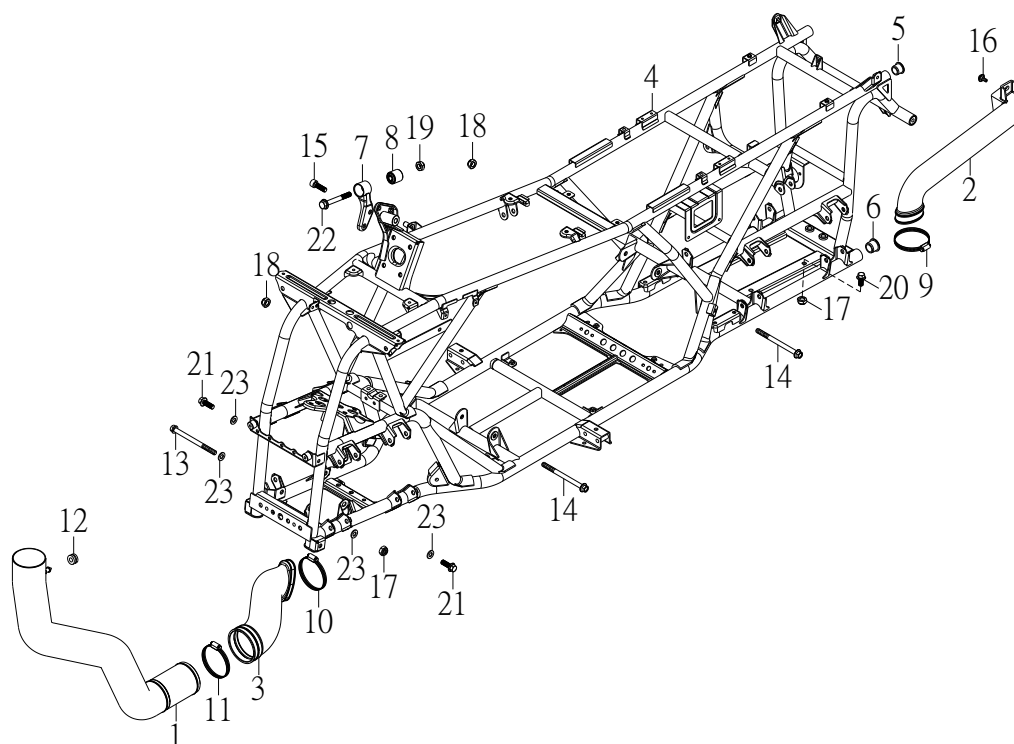


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	15433-MAX-01	CVT INLET DUCT	CVT進氣導管	1	
2	15434-ML8-00	CVT OUTLET DUCT	CVT排氣導管	1	
3	15438-ML8-00	JOINT, CVT INLET DUCT	CVT進氣導管接頭	1	
4	41110-DL9-01	FRAME COMP	車架整體	1	
5	41154-RAM-00	PLUG, SPECIAL SHAPE	管塞	2	
6	41154-URO-00	PLUG, SPECIAL SHAPE	管塞	2	
7	41410-ML8-00	ENGINE HANGER COMP	引擎吊架整體	1	
8	41416-SK9-00	BUSH	吊架襯套	1	
9	90281-090070	CLAMP	斑馬式管夾	1	
10	90281-090080	CLAMP	斑馬式管夾	1	
11	90281-090090	CLAMP	斑馬式管夾	1	
12	93580-102212	GROMMET	牌照板套環	1	
13	94610-10113-B	BOLT, FLANGE	吊架固定軸	1	
14	94610-10125-B	BOLT, FLANGE	吊架固定軸	2	
15	94706-10020-B	BOLT	引擎上固定螺栓	2	
16	94710-06016-G	BOLT	車架底板固定螺栓	1	
17	95301-101410-B	LOCKNUT	止鬆螺帽	5	
18	95311-101710-B	NUT, NYLON	尼龍螺帽	2	
19	95311-101710-C	NUT, NYLON	尼龍螺帽	1	
20	96414-10020-B	BOLT, FLANGE	凸緣螺栓	4	
21	96414-10030-B	BOLT, FLANGE	凸緣螺栓	2	
22	96414-10050-C	BOLT, FLANGE	凸緣螺栓	1	

 FRAME 車架

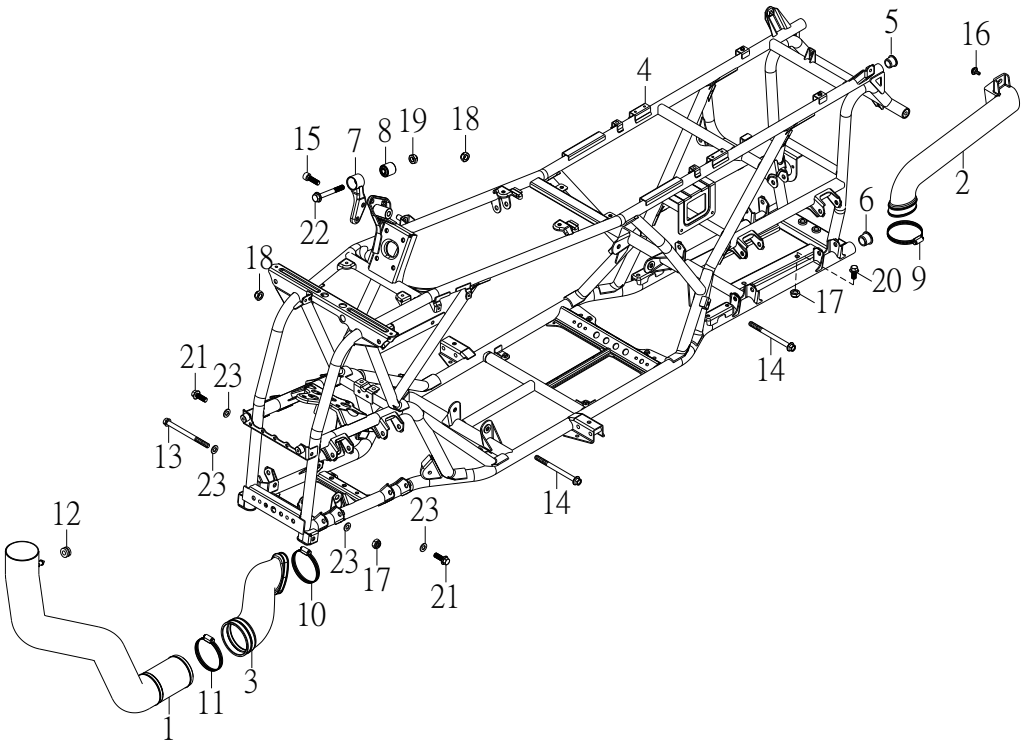


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
23	97201-102220-B	WASHER, PLATE	4	平面墊圈

 FRONT CARRIER 前架

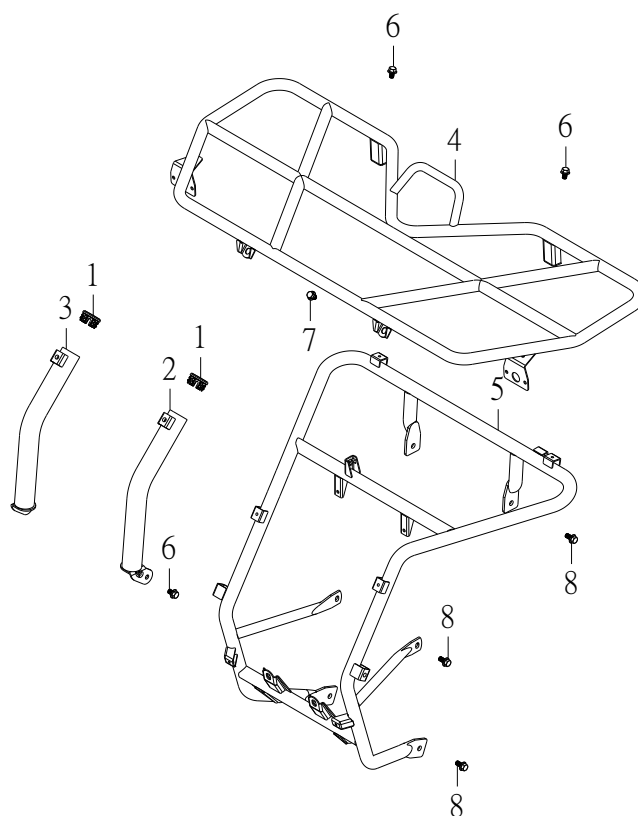


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	41154-MAX-00	PLUG, SPECIAL SHAPE	管塞	2	
2	41601-MAX-00L	SHIELD, FRONT L	前保護桿左	1	
3	41601-MAX-00R	SHIELD, FRONT R	前保護桿右	1	
4	41606-DA9-00	CARRIER, FRONT	前架	1	
5	41610-MAX-01	CRUTCH, FRONT	前支架	1	
6	96414-08012-B	BOLT, FLANGE	凸緣螺栓	4	
7	96414-08012-G	BOLT, FLANGE	凸緣螺栓	2	
8	96414-08016-B	BOLT, FLANGE	凸緣螺栓	6	
	51131-DA9-00	BRACKET, LICENSE	前牌照板固定架	1	

 STEERING 轉向裝置

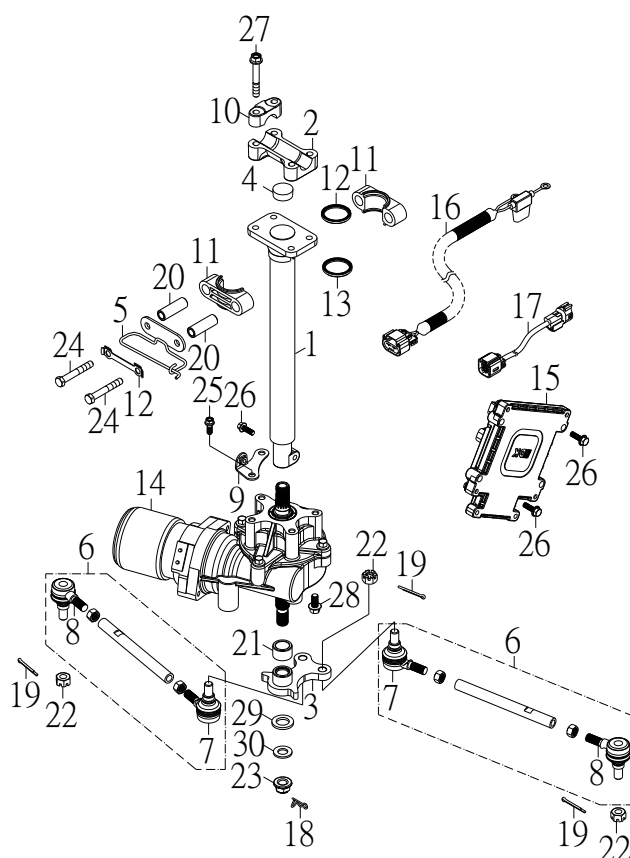


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42101-MAZ-00	COLUMN, STEERING	轉向桿	1	
2	42106-SK9-00	BRIDGE, TOP	頂樑	1	
3	42107-MAX-00	PITMAN ARM	下三角架	1	
4	42111-RAM-00	PLUG, TAPER	塞子	1	
5	42118-AAM-00	CABLE GUIDE	導線環	1	
6	42140-MAX-00	ROD, TIE ASSY	連桿總成	2	
7	42142-RAM-00	JOINT, UNIVERSAL 1	萬向接頭 內	2	
8	42143-RAM-00	JOINT, UNIVERSAL 2	萬向接頭 外	2	
9	43486-MAZ-00	STAY LOWER, TANK RESERVE	副水箱下座	1	
10	46125-RAM-00	HOLDER, HANDLE UPPER	把手上固定座	2	
11	46411-RAM-00	HOLDER, STEERING	轉向桿固定座	2	
12	46416-RAM-00	WASHER, LOCK	制止片	1	
13	46417-RAM-00	OIL SEAL	轉向桿封圈	2	
14	46420-MAZ-00	EPS	電動輔助轉向舵總成	1	
15	62560-DA9-00	TRANSFER CONTROLLER	轉向控制器	1	
16	62561-MAZ-00	POWER CORD	轉向舵電源線	1	
17	62562-MAZ-00	SIGNAL CORD	轉向舵信號線	1	
18	90230-16023-B	COTTER PIN	開尾銷	1	
19	90240-23020-B	COTTER PIN	開口銷	4	
20	93510-081442-C	COLLAR	轉向桿座隔管	2	
21	93510-172512-B	COLLAR	隔管	1	
22	95321-101710-C	NUT, CASTLE	有槽螺帽	4	

 STEERING 轉向裝置

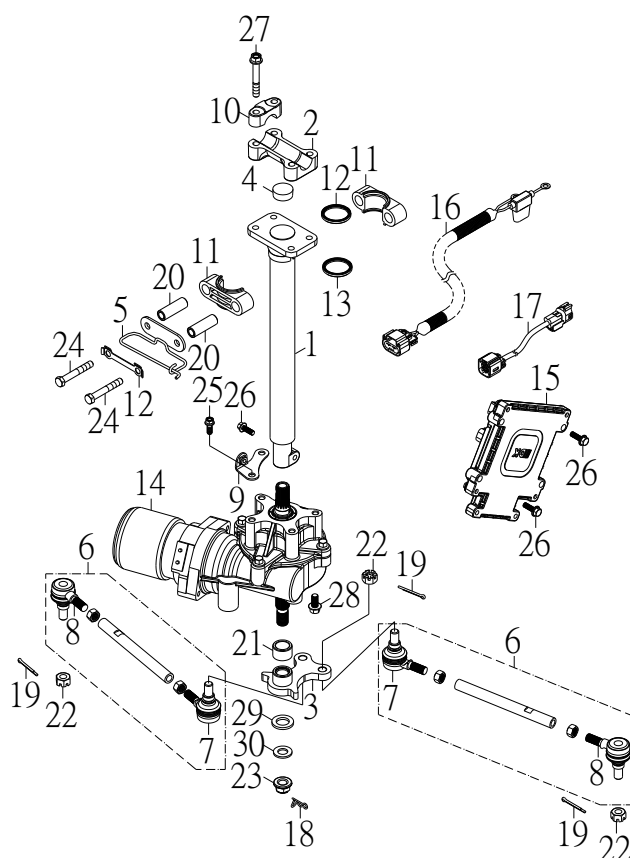


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
23	95401-142114-B	NUT, FLANGE	凸緣螺帽	1	
24	96210-08060-B	BOLT, HEXAGON	六角螺栓	2	
25	96414-08012-B	BOLT, FLANGE	凸緣螺栓	2	
26	96414-08025-B	BOLT, FLANGE	凸緣螺栓	3	
27	96414-08050-B	BOLT, FLANGE	凸緣螺栓	4	
28	96414-10016-B	BOLT, FLANGE	凸緣螺栓	4	
29	97201-143430-B	WASHER, PLATE	平面墊圈	1	
30	97310-142826	WASHER, CONICAL SPRING	錐形彈簧墊圈	1	

 FRONT SUSPENSION 前懸吊系統

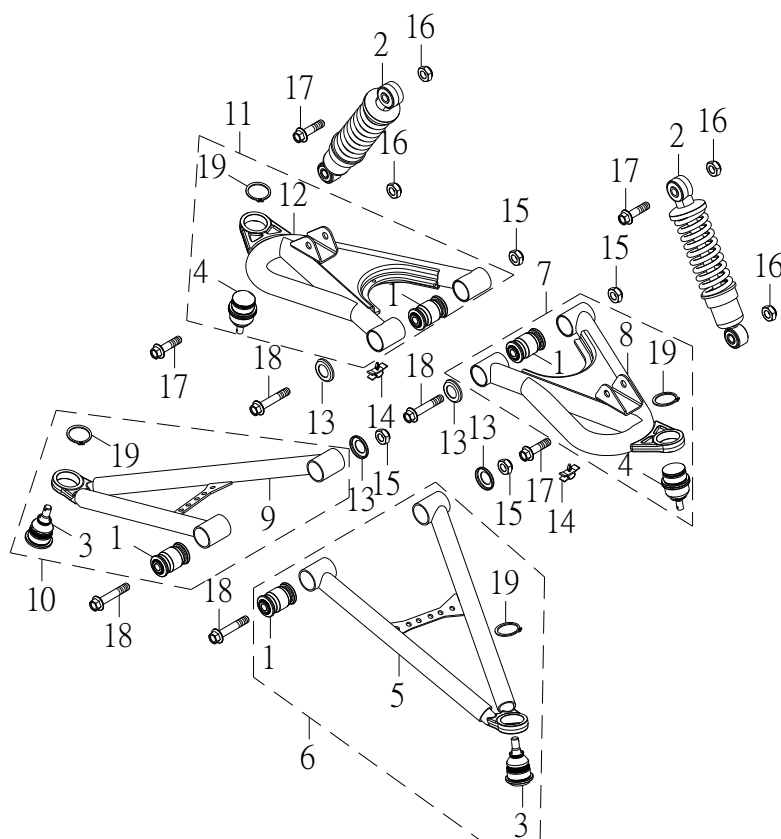


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	32116-MAX-00	BUSH	搖臂襯套	8	
2	42126-MAX-00	SHOCK ABSORBER ASSY	前緩衝器總成	2	
	42126-MAX-02	SHOCK ABSORBER ASSY	前緩衝器總成	2	gas tank
	42126-MAX-03	SHOCK ABSORBER ASSY	前緩衝器總成	2	
	42126-MAX-04	SHOCK ABSORBER ASSY	前緩衝器總成	2	
3	42150-MAX-00	UNIVERSAL JOINT COMP	下萬向接頭組	2	
4	42155-MAX-01	UNIVERSAL JOINT COMP	上萬向接頭組	2	
5	42161-MAX-00G	FRONT LOWER, ARM LEFT	左前下搖臂	1	
6	42161-MAX-01	FRONT LOWER, ARM LEFT COMP	左前下搖臂組	1	
7	42166-MAX-01	FRONT UPPER, ARM LEFT COMP	左前上搖臂組	1	
8	42166-MAX-01G	FRONT UPPER, ARM LEFT	左前上搖臂	1	
9	42171-MAX-00G	FRONT LOWER, ARM RIGHT	右前下搖臂	1	
10	42171-MAX-01	FRONT LOWER, ARM RIGHT COMP	右前下搖臂組	1	
11	42176-MAX-01	FRONT UPPER, ARM RIGHT COMP	右前上搖臂組	1	
12	42176-MAX-01G	FRONT UPPER, ARM RIGHT	右前上搖臂	1	
13	42183-MAX-00	GRUMMET	墊環	4	
14	61393-MAX-00	CLAMP	導線夾	2	
15	95311-101710-B	NUT, NYLON	尼龍螺帽	8	
16	95311-101710-C	NUT, NYLON	尼龍螺帽	4	
17	96414-10050-C	BOLT, FLANGE	凸緣螺栓	4	
18	96414-10070-B	BOLT, FLANGE	凸緣螺栓	8	
19	97010-30015-K	CIRCLIP	C型扣環	4	

 ANTI-ROLL BAR 防傾桿

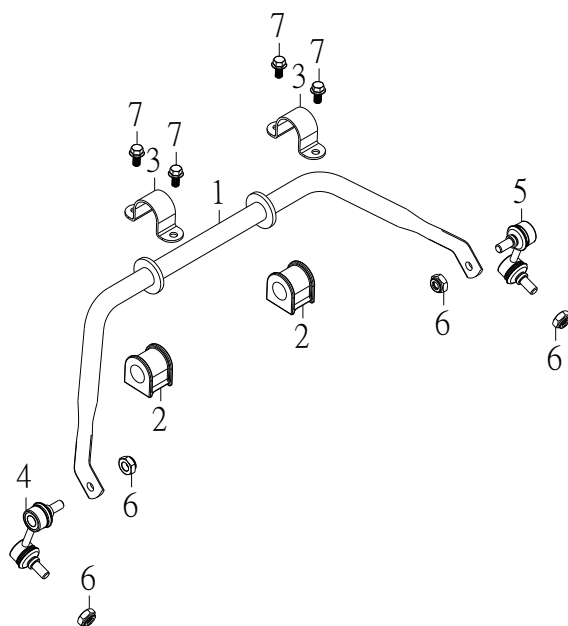


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42310-MAX-00	ANTI-ROLL BAR	防傾桿	1	
2	42321-MAX-01	BUSH	防傾桿橡皮襯套	2	
3	42323-MAX-00	HOLDER, ANTI-ROLL BAR	防傾桿支架	2	
4	42340-MAX-00	JOINT L, ANTI-ROLL BAR	防傾桿左連桿	1	
5	42345-MAX-00	JOINT R, ANTI-ROLL BAR	防傾桿右連桿	1	
6	95311-101710-B	NUT, NYLON	尼龍螺帽	4	
7	96414-08012-B	BOLT, FLANGE	凸緣螺栓	4	

 FRONT GEAR BOX 前齒輪箱

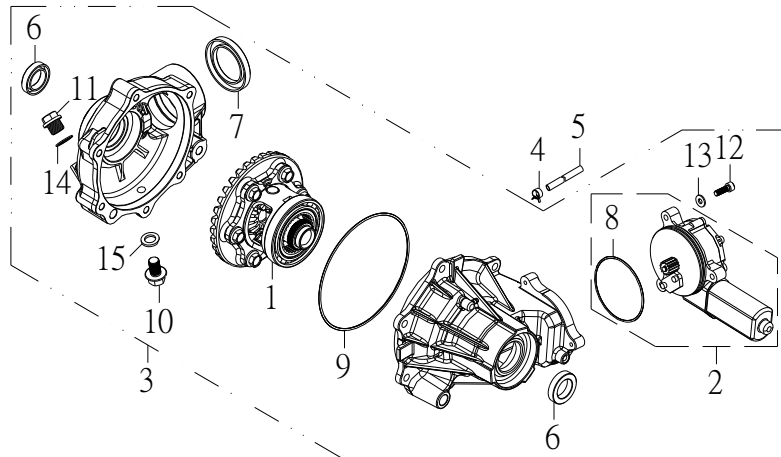


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	26611-MAX-00A	DIFFERENTIAL GEAR CASE ASSY	差速器箱總成	1	
2	26650-MAX-00	GEAR MOTOR ASSY	差速器馬達總成	1	
3	42526-ML9-00A	GEAR CASE ASSY	前齒輪箱總成	1	
4	90220-08085-D	CLAMP	板型管夾	1	
	90220-08086-B	CLAMP	板型管夾	1	
5	90310-50550	HOSE	通氣管	1	
6	93110-24388	OIL SEAL	油封	2	
7	93110-46658	OIL SEAL	油封	1	
8	93210-20770	O-RING	護油圈	1	
9	93210-241410	O-RING	護油圈	1	
10	96414-12015-B	BOLT, FLANGE	凸緣螺栓	1	
11	96414-16012-B	BOLT, FLANGE	凸緣螺栓	1	
12	96510-06030-G	BOLT, SOCKET	六角承窩螺栓	3	
13	97201-061310-B	WASHER, PLATE	平面墊圈	3	
14	97230-162212	WASHER, COPPER	銅墊圈	1	
15	97231-122020	WASHER, ALUMINUM	鋁墊圈	1	

 FRONT WHEEL 前輪(14" alloy)

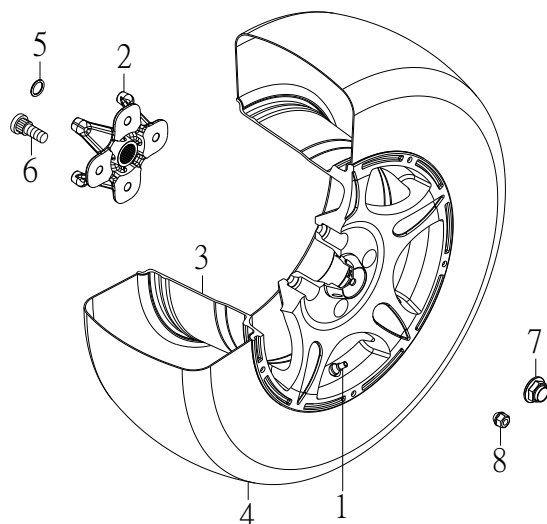


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	42570-CBW-00	VALVE, RIM	氣門嘴	2	
2	42581-MAX-00	WHEEL HUB	前輪圈固定座	2	
3	42582-MAX-07	WHEEL, FRONT	前輪圈	2	
4	42590-MAX-00	TIRE, FRONT	前輪胎	2	
5	93210-18251	O-RING	護油圈	2	
6	94710-10037-C	BOLT, RIBBED NECK	輪圈固定螺栓	8	
7	95411-202719-G	NUT, FLANGE	凸緣制止螺帽	2	
8	95801-101718-C	LOCK NUT, FLANGE	鎖位凸緣螺帽	8	

 FRONT WHEEL 前輪(12" steel rim)

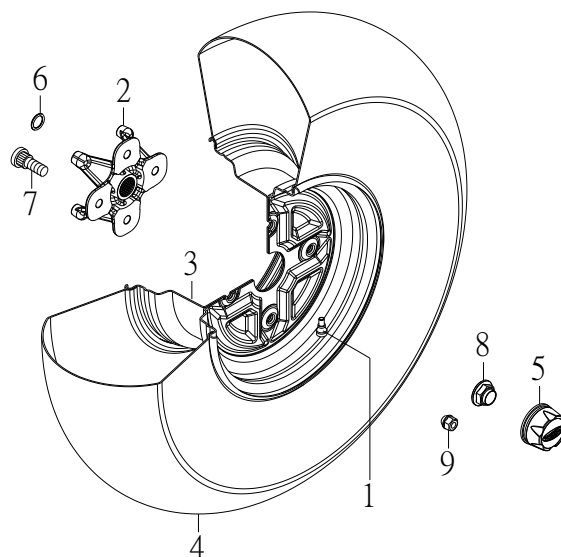


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42570-RAM-00	VALVE, RIM	氣門嘴	2	
2	42581-MAX-00	WHEEL HUB	前輪圈固定座	2	
3	42582-MAX-00	WHEEL, FRONT	前輪圈	2	
	42582-MAX-03	WHEEL, FRONT	前輪圈	2	
4	42590-JOW-03	TIRE, FRONT	前輪胎	2	
	42590-JOW-06	TIRE, FRONT	前輪胎	2	optional
	42590-JOW-07	TIRE, FRONT	前輪胎	2	optional
	42590-JOW-08	TIRE, FRONT	前輪胎	2	optional
5	42595-MAX-00	CAP, WHEEL	輪圈飾蓋	2	
6	93210-18251	O-RING	護油圈	2	
7	94710-10037-C	BOLT, RIBBED NECK	輪圈固定螺栓	8	
8	95411-202719-G	NUT, FLANGE	凸緣制止螺帽	2	
9	95801-101718-C	LOCK NUT, FLANGE	鎖位凸緣螺帽	8	

 FRONT WHEEL 前輪(12" alloy)

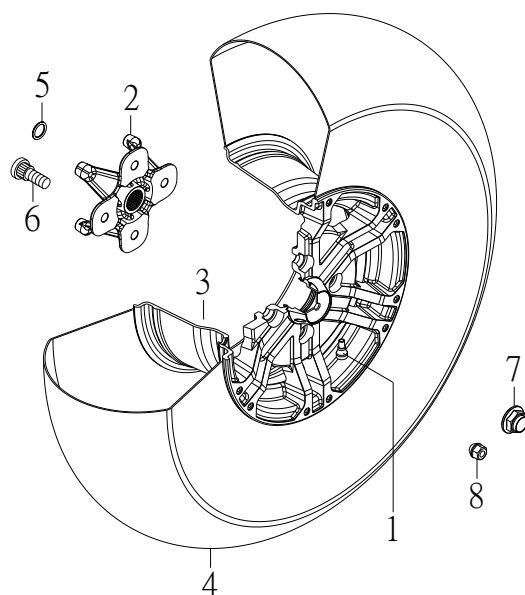


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42570-CBW-00	VALVE, RIM	氣門嘴	2	
2	42581-MAX-00	WHEEL HUB	前輪圈固定座	2	
3	42582-MAX-06	WHEEL, FRONT	前輪圈	2	
4	42590-JOW-03	TIRE, FRONT	前輪胎	2	
	42590-JOW-06	TIRE, FRONT	前輪胎	2	optional
	42590-JOW-07	TIRE, FRONT	前輪胎	2	optional
	42590-JOW-08	TIRE, FRONT	前輪胎	2	optional
5	93210-18251	O-RING	護油圈	2	
6	94710-10037-C	BOLT, RIBBED NECK	輪圈固定螺栓	8	
7	95411-202719-G	NUT, FLANGE	凸緣制止螺帽	2	
8	95801-101718-C	LOCK NUT, FLANGE	鎖位凸緣螺帽	8	

 REAR GEAR BOX 後齒輪箱

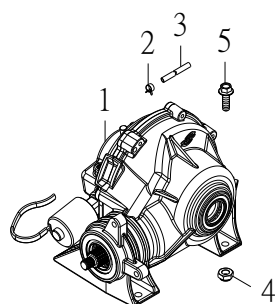


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	42826-DL9-00A	CARRIER HOUSING HALF ASSY	後齒輪箱總成	1	
2	90220-08085-D	CLAMP	板型管夾	1	
3	90310-50550	HOSE	通氣管	1	
4	95311-101710-B	NUT, NYLON	尼龍螺帽	4	
5	96414-10020-B	BOLT, FLANGE	凸緣螺栓	4	

 REAR WHEEL 後輪(14" alloy)

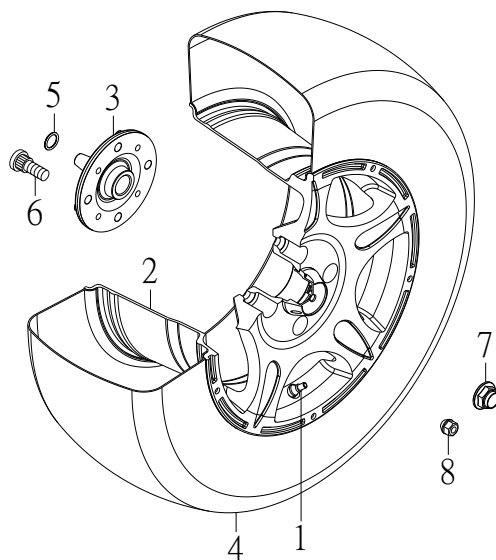


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	42570-CBW-00	VALVE, RIM	氣門嘴	2	
2	42882-MAX-07	WHEEL, REAR	後輪圈	2	
3	42885-DA9-00	WHEEL HUB	後輪固定座	2	
4	42890-MAX-00	TIRE, REAR	後輪胎	2	
5	93210-18251	O-RING	護油圈	2	
6	94710-10037-C	BOLT, RIBBED NECK	輪圈固定螺栓	8	
7	95411-202719-G	NUT, FLANGE	凸緣制止螺帽	2	
8	95801-101718-C	LOCK NUT, FLANGE	鎖位凸緣螺帽	8	

 REAR WHEEL 後輪(12" steel)

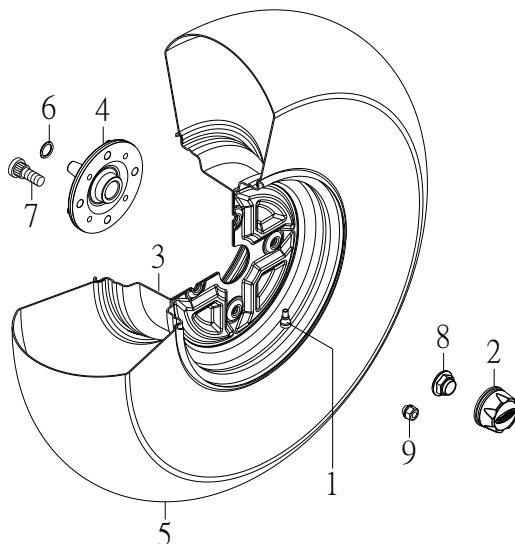


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42570-RAM-00	VALVE, RIM	氣門嘴	2	
2	42595-MAX-00	CAP, WHEEL	輪圈飾蓋	2	
3	42882-MAX-00	WHEEL, REAR	後輪圈	2	
	42882-MAX-03	WHEEL, REAR	後輪圈	2	
4	42885-DA9-00	WHEEL HUB	後輪固定座	2	
5	42890-JOW-03	TIRE, REAR	後輪胎	2	
	42890-JOW-06	TIRE, REAR	後輪胎	2	optional
	42890-JOW-07	TIRE, REAR	後輪胎	2	optional
	42890-JOW-08	TIRE, REAR	後輪胎	2	optional
6	93210-18251	O-RING	護油圈	2	
7	94710-10037-C	BOLT, RIBBED NECK	輪圈固定螺栓	8	
8	95411-202719-G	NUT, FLANGE	凸緣制止螺帽	2	
9	95801-101718-C	LOCK NUT, FLANGE	鎖位凸緣螺帽	8	

 REAR WHEEL 後輪(12" alloy)

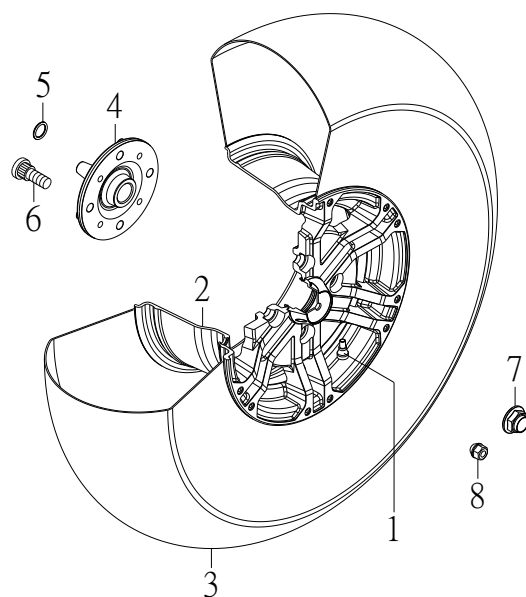


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42570-CBW-00	VALVE, RIM	氣門嘴	2	
2	42882-MAX-06	WHEEL, REAR	後輪圈	2	
3	42885-DA9-00	WHEEL HUB	後輪固定座	2	
4	42890-JOW-03	TIRE, REAR	後輪胎	2	
	42890-JOW-06	TIRE, REAR	後輪胎	2	optional
	42890-JOW-07	TIRE, REAR	後輪胎	2	optional
	42890-JOW-08	TIRE, REAR	後輪胎	2	optional
5	93210-18251	O-RING	護油圈	2	
6	94710-10037-C	BOLT, RIBBED NECK	輪圈固定螺栓	8	
7	95411-202719-G	NUT, FLANGE	凸緣制止螺帽	2	
8	95801-101718-C	LOCK NUT, FLANGE	鎖位凸緣螺帽	8	

 FUEL TANK 油箱

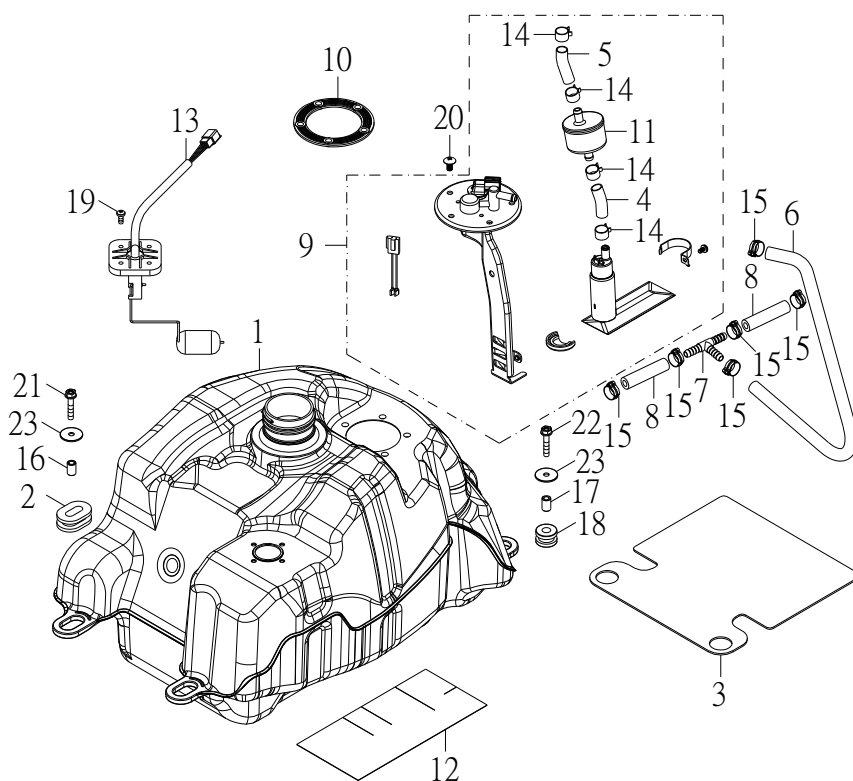


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	43110-ML8-00	FUEL TANK	汽油箱	1	
2	43151-RAM-00	GROMMET F	油箱套環 前	2	
3	43154-MAL-00	GUARD	保護板	1	
4	43532-MAX-00	FUEL HOSE	過濾杯油管	1	
5	43533-MAX-01	FUEL HOSE	調壓閥油管	1	
6	43534-ML8-00	FUEL HOSE	噴嘴油管1	1	
7	43535-ML8-00	JOINT	三向T型接頭	1	
8	43536-ML8-00	FUEL HOSE	噴嘴油管2	2	
9	43555-MAX-01	FUEL PUMP BRACKET COMP	汽油泵支架總成	1	
10	43558-MAX-00	SEAL, FUEL PUMP BRACKET	汽油泵支架封圈	1	
11	43570-MAX-01	FUEL FILTER	汽油過濾杯	1	
12	52846-ML8-03	INSULATION PAPER	隔熱紙	1	
13	62770-MAX-02	SENDER UNIT ASSEMBLY	汽油油面感應器	1	
14	90220-10130-D	CLAMP	板型管夾	4	
15	90221-06130	HIGH TENSION CLAMP	高張力管夾	6	
16	93510-061015-B	COLLAR F	油箱隔管 前	2	
17	93510-061021-B	COLLAR R	油箱隔管 後	2	
18	93580-102416	GROMMET R	油箱套環 後	2	
19	96318-05015-K	SCREW, PAN HEAD	十字孔頭螺絲	4	
20	96318-06015-G	SCREW, PAN HEAD	十字孔頭螺絲	5	
21	96414-06025-B	BOLT, FLANGE	凸緣螺栓	2	
22	96414-06032-B	BOLT, FLANGE	凸緣螺栓	2	

 FUEL TANK 油箱

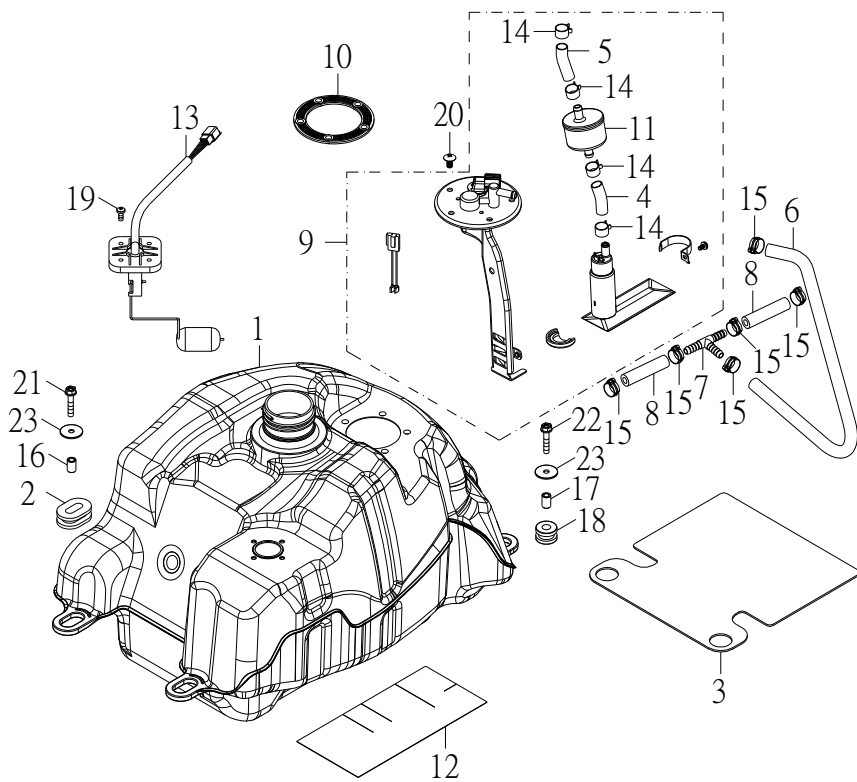

NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
23	97201-062220-B	WASHER, PLATE	4	平面墊圈

 WATER-COOLING SYSTEM 水冷卻系統

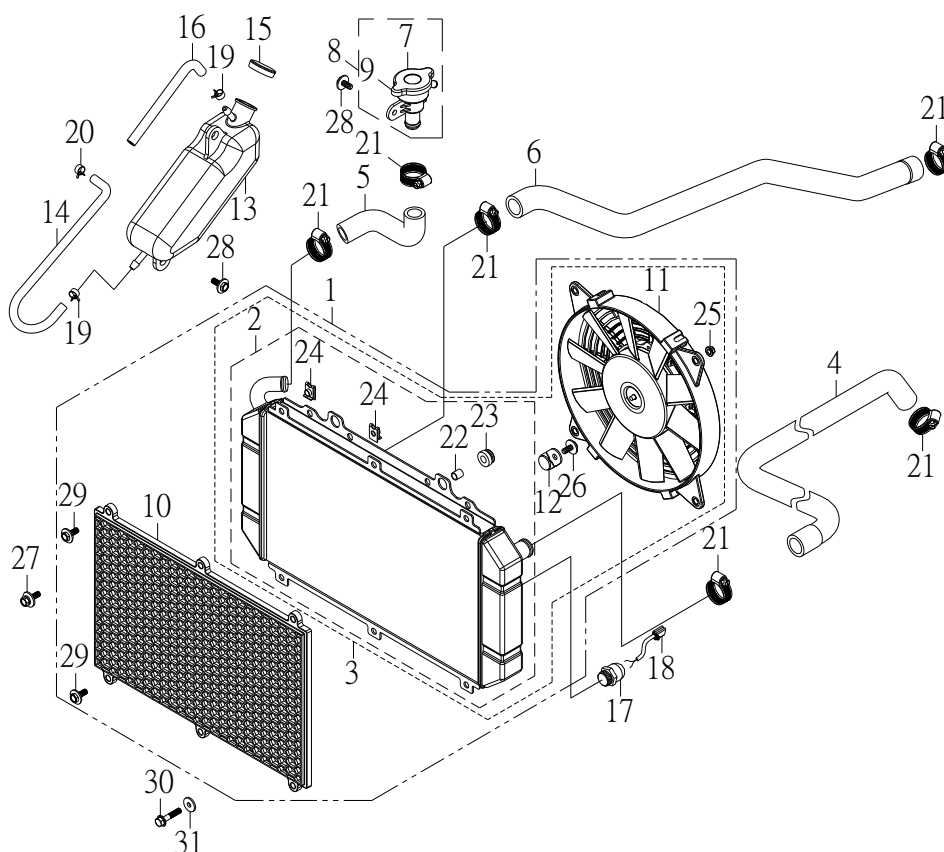


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	43400-ML8-00	RADIATOR ASSY	水箱總成	1	
2	43410-ML8-00	RADIATOR	水箱	1	
3	43410-ML8-00A	RADIATOR & FAN MOTOR	水箱風扇馬達組	1	
4	43420-ML8-00	HOSE, RADIATOR IN	水箱進水管	1	
5	43423-MAX-00	HOSE, RADIATOR CAP	加水口水管	1	
6	43425-ML8-00	HOSE, WATER PUMP IN	水泵進水管	1	
7	43430-CGV-00	RADIATOR CAP	水箱蓋	1	
8	43430-MAX-00A	RADIATOR CAP COMP	水箱蓋組	1	
9	43435-MAX-00	HULL, RADIATOR CAP	水箱蓋體	1	
10	43440-MAX-00	RADIATOR DEFEND	水箱護罩	1	
11	43450-ML8-00	FAN MOTOR ASSY	風扇馬達總成	1	
12	43458-ML8-00	STAY, FAN MOTOR	風扇馬達支座	4	
13	43460-CEE-00	WATER TANK	副水箱	1	
14	43463-JOW-00	HOSE 1, WATER TANK	副水箱溢流管	1	
15	43466-CEE-00	CAP, WATER TANK	副水箱蓋	1	
16	43468-JOW-00	HOSE 2, WATER TANK	副水箱通氣管	1	
17	62750-MAX-01	FAN MOTOR SWITCH	風扇開關	1	
18	62752-MAX-00	ADAPTER CABLE, FAN MOTOR SWITCH	風扇開關轉接線	1	
19	90220-08110-B	CLAMP	板型管夾	2	
	90220-08110-D	CLAMP	板型管夾	2	
20	90220-08120-D	CLAMP	板型管夾	1	
	90220-08122-B	CLAMP	板型管夾	1	

2016.04.27


43410-ML8-01A

 WATER-COOLING SYSTEM 水冷卻系統

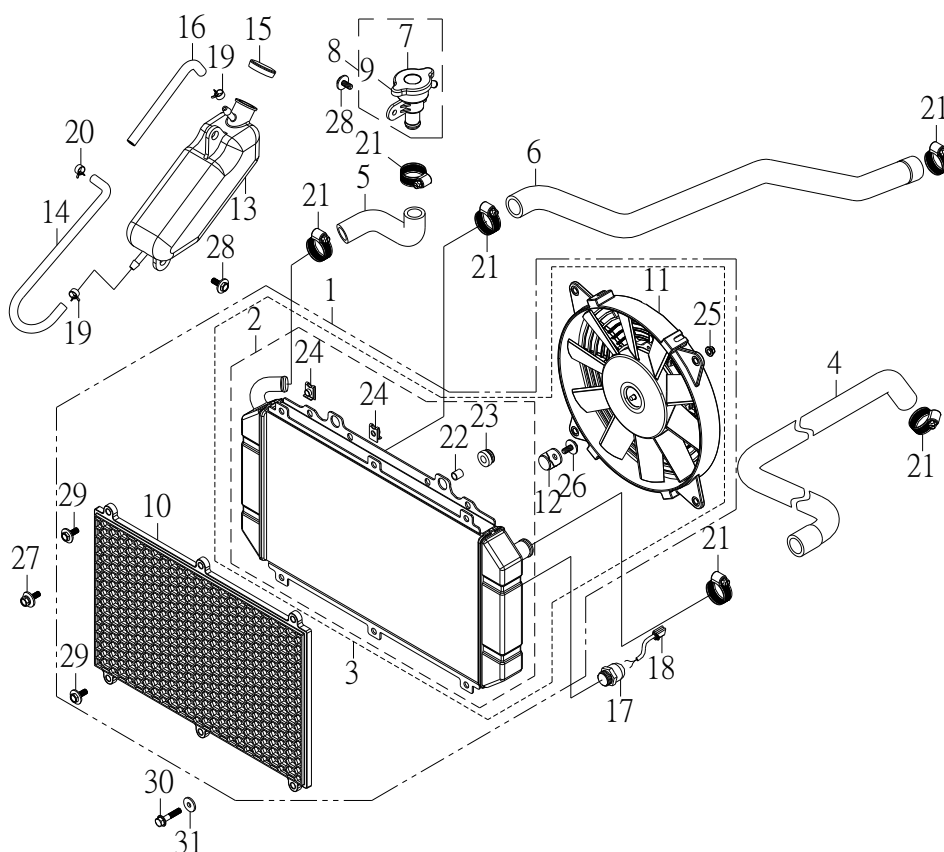


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
21	90281-090032-C	CLAMP	6	斑馬式管夾
22	93510-070910-B	COLLAR	4	軸環
23	93580-091911	GROMMET	4	套環
24	95101-061320	NUT, SPRING	10	U型板螺帽
25	95301-061007-C	NUT, LOCK	4	止鬆螺帽
26	96214-06018-C	BOLT, HEXAGON WITH WASHER	4	六角螺栓附墊圈
27	96214-06022-B	BOLT, HEXAGON WITH WASHER	2	六角螺栓附墊圈
28	96218-06016-B	BOLT, HEXAGON WITH WASHER	3	六角螺栓附墊圈
29	96218-06020-G	BOLT, HEXAGON WITH WASHER	6	六角螺栓附墊圈
30	96414-06035-B	BOLT, FLANGE	2	凸緣螺栓
31	97201-061820-B	WASHER, PLATE	2	平面墊圈

 BRAKE SYSTEM 剎車系統

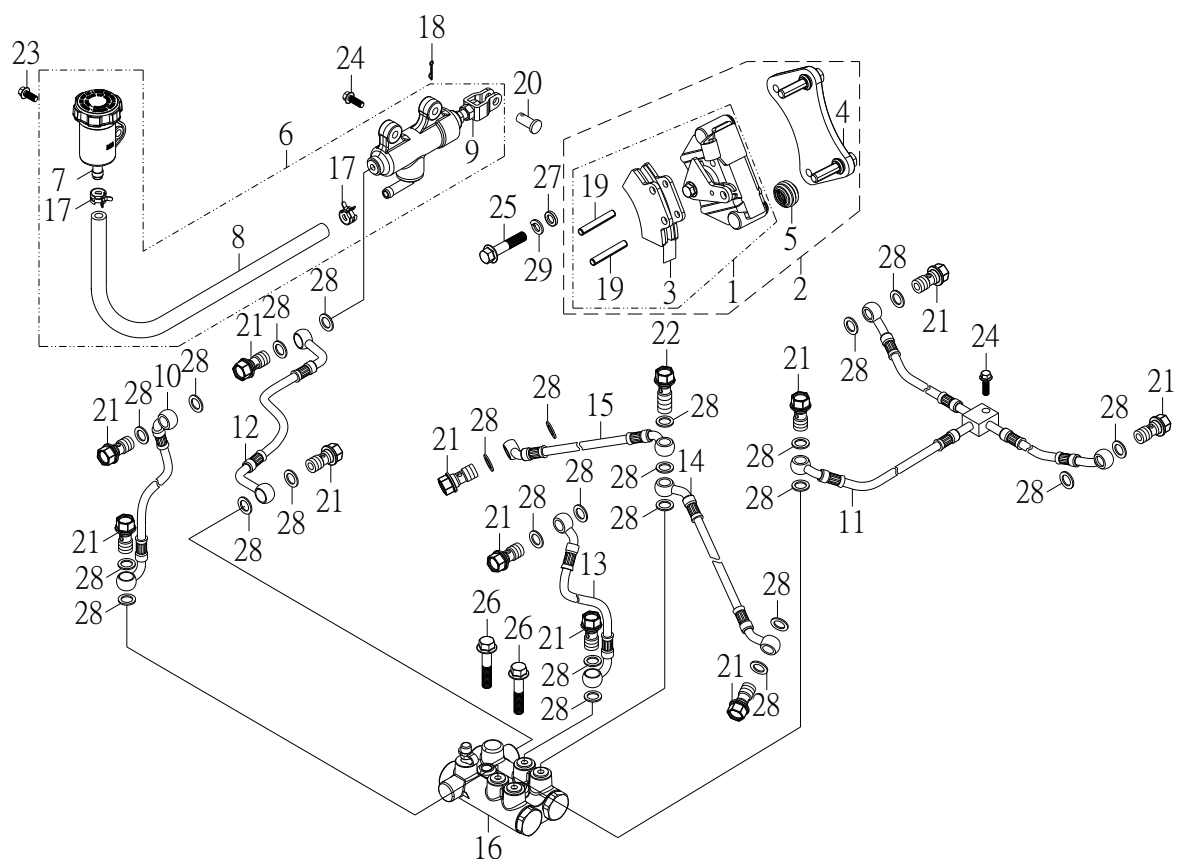


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	45801-DA9-00	CALIPER	駐車卡鉗	1	
2	45801-DA9-00A	CALIPER ASSY	駐車卡鉗總成	1	
3	45805-DA9-00	PAD, CALIPER	剎車片組	1	
4	45810-DL9-00	BRACKET, CALIPER	駐車卡鉗承座	1	
5	45814-MAX-00	BOOT	導銷防塵套	2	
6	45870-ML8-00	MASTER CYLINDER SUB ASSY	後主缸總成	1	
7	45871-MAX-00	RESERVOIR	油槽總成	1	
8	45874-ML8-00	HOSE	油管	1	
9	45877-MAX-00	CYLINDER KIT, MASTER	推進器組	1	
10	61311-MAX-02	HOSE, BRAKE	後剎車油管上	1	
11	61312-DL9-00	HOSE, BRAKE	後剎車油管下	1	
12	61330-ML8-00	HOSE, BRAKE	腳剎車油管	1	
13	61811-MAX-02	HOSE, BRAKE	前剎車油管上	1	
14	61812-MAX-02L	HOSE, FRONT BRAKE L	左前剎車油管	1	
15	61812-MAX-02R	HOSE, FRONT BRAKE R	右前剎車油管	1	
16	61860-JPE-00	BRAKE SHUNT ASSY	分流閥組	1	
17	90220-08125-D	CLAMP	板形管夾	2	
18	90240-14016-B	COTTER PIN	開口銷	1	
19	94430-60030-K	PIN, DOWEL	彈簧銷	2	
20	94610-06016-B	PIN, CLEVIS	帶頭銷	1	
21	94716-10022-G	BOLT, UNION	接合螺栓	11	
22	94716-10033-G	BOLT, UNION	接合螺栓	1	

 BRAKE SYSTEM 剎車系統

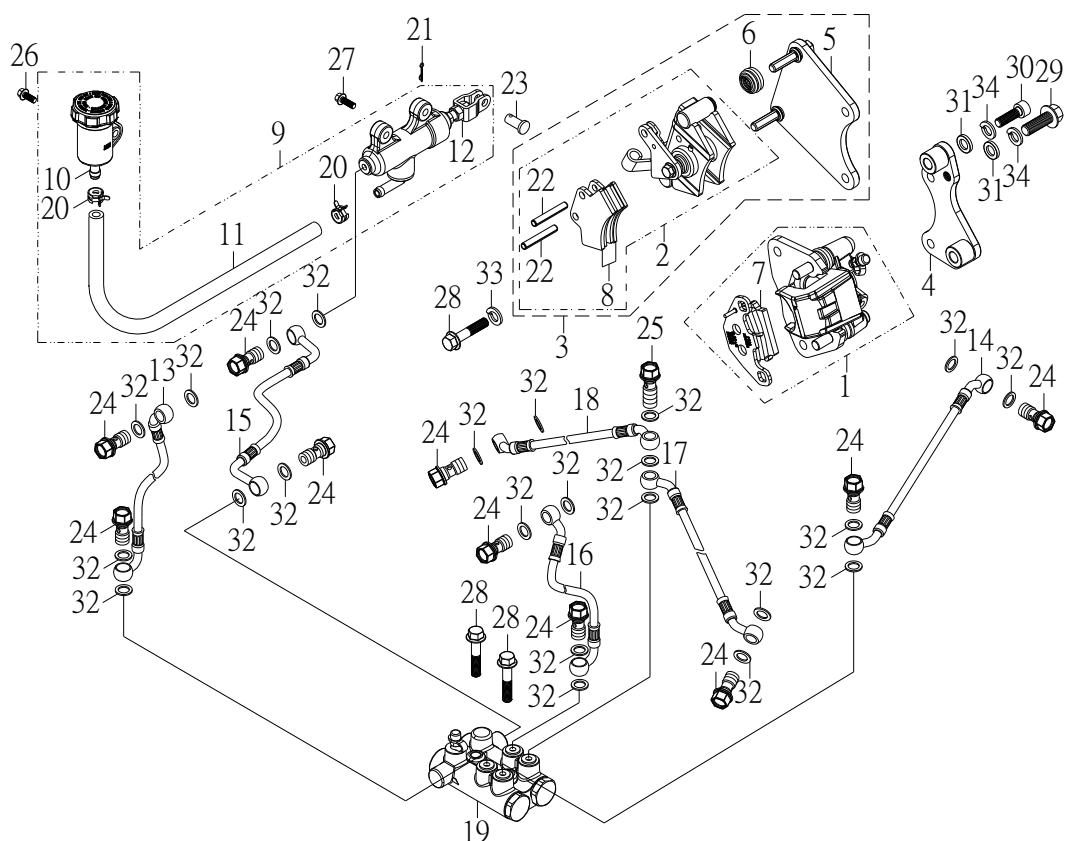


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
23	96414-06016-B	BOLT, FLANGE	凸緣螺栓	1	
24	96414-06020-B	BOLT, FLANGE	凸緣螺栓	3	
25	96414-08028-B	BOLT, FLANGE	凸緣螺栓	2	
26	96414-08040-B	BOLT, FLANGE	凸緣螺栓	2	
27	97201-081620-C	WASHER, PLATE	平面墊圈	2	
28	97230-101512	WASHER, COPPER	銅墊圈	25	
29	97301-081520-B	WASHER, SPRING	彈簧墊圈	2	

 STEERING KNUCKLE 轉向關節座

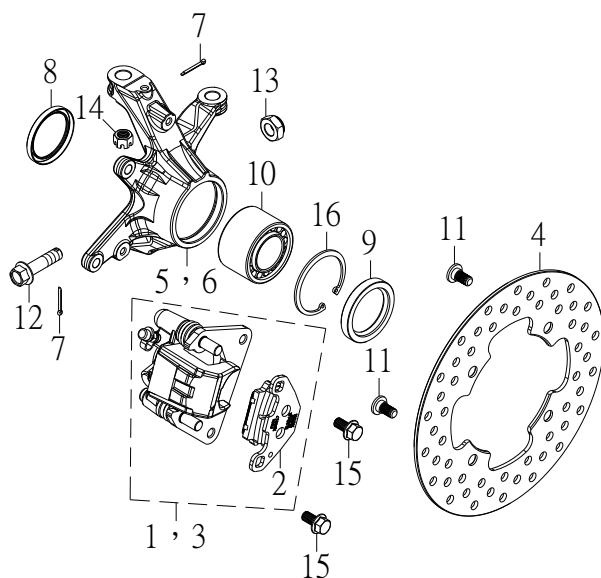


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	45811-DA9-00	CALIPER ASSY, L FRONT	左前卡鉗總成	1	
2	45815-DA9-00	PAD, CALIPER	剎車片組	2	
3	45821-DA9-00	CALIPER ASSY, R FRONT	右前卡鉗總成	1	
4	45831-MAX-00	DISK, BRAKE	剎車圓盤	2	
5	45861-MAX-00	KNUCKLE, STEERING L	左前轉向關節座	1	
6	45866-MAX-00	KNUCKLE, STEERING R	右前轉向關節座	1	
7	90240-23020-B	COTTER PIN	開口銷	4	
8	93110-40504	OIL SEAL	油封	2	
9	93110-40556	OIL SEAL	油封	2	
10	93324-305532	BEARING	雙列斜角滾珠軸承	2	
11	94706-08017-B	BOLT, BUTTON	剎車盤固定螺栓	8	
12	94716-10040-C	BOLT, KEYHOLE	栓孔螺栓	2	
13	95311-101710-C	NUT, NYLON	尼龍螺帽	2	
14	95321-101710-C	NUT, CASTLE	有槽螺帽	2	
15	96414-08016-B	BOLT, FLANGE	凸緣螺栓	4	
16	97012-55020-K	CIRCLIP	C形內扣環	2	

 REAR KNUCKLE 後關節座

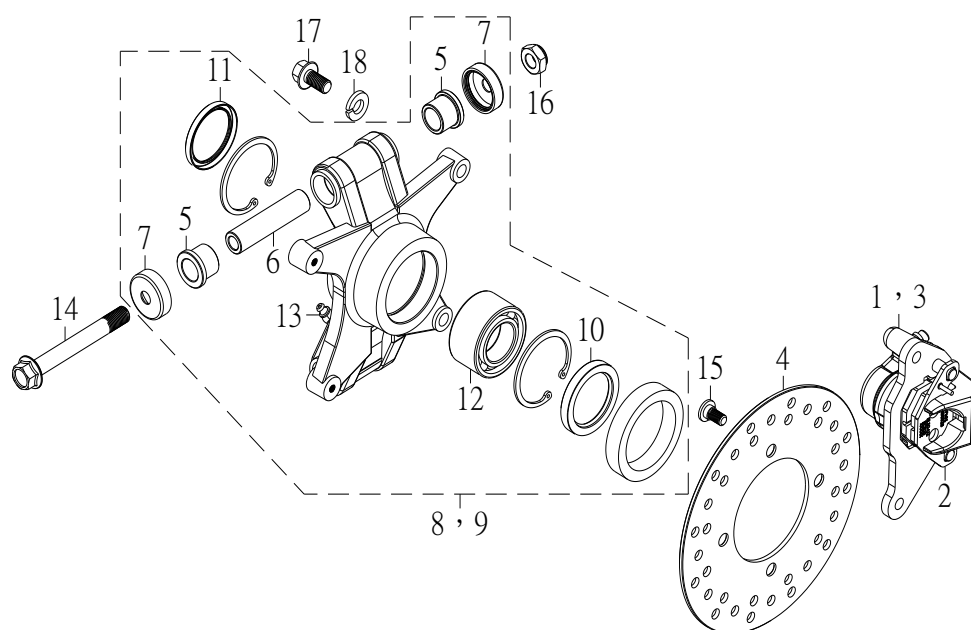


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	45812-DA9-00	CALIPER ASSY L	左後卡鉗總成	1	
2	45815-DA9-00	PAD, CALIPER	剎車片組	2	
3	45822-DA9-00	CALIPER ASSY R	右後卡鉗總成	1	
4	45831-DA9-00	DISK, BRAKE	剎車圓盤	2	
5	45924-DA9-00	BUSHING	後關節座襯套	8	
6	45925-DA9-00	COLLAR	後關節座軸襯	4	
7	45927-DA9-00	COVER, THRUST	塵封蓋	8	
8	45960-DA9-00	REAR KNUCKLE L	左後關節座整體	1	
9	45965-DA9-00	REAR KNUCKLE R	右後關節座整體	1	
10	93110-38557	OIL SEAL	油封	2	
11	93110-386016	OIL SEAL	油封	2	
12	93324-306037	BEARING	雙列斜角滾珠軸承	2	
13	94341-08010-B	NIPPLE, GREASE	45度黃油嘴	4	
14	94610-12100-B	BOLT, FLANGE	轉向關節固定軸	4	
15	94706-08017-B	BOLT, BUTTON	剎車盤固定螺栓	8	
16	95311-121912-B	NUT, NYLON	尼龍螺帽	4	
17	96414-10025-B	BOLT, FLANGE	凸緣螺栓	4	
18	97301-101825-B	WASHER, SPRING	彈簧墊圈	4	

 STEERING HANDLE CABLE 轉向把手、鋼索

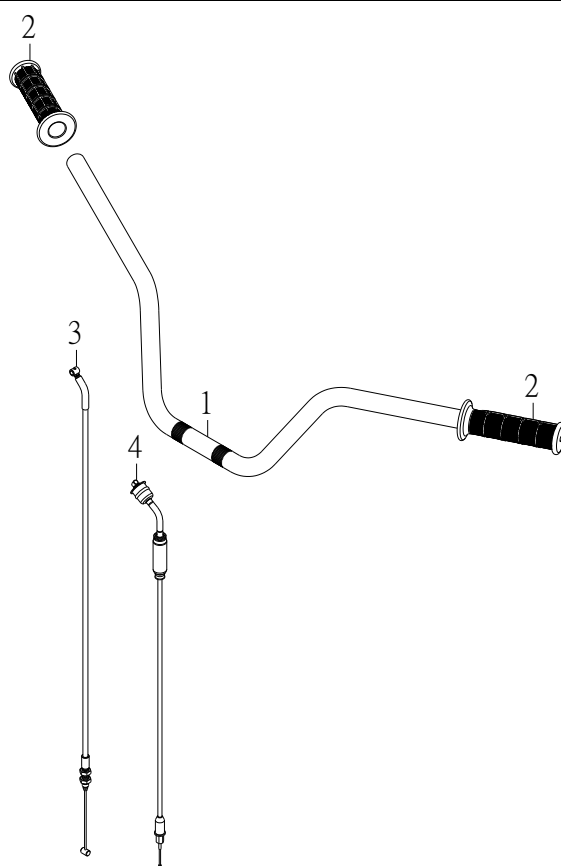


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	46110-MAX-01	HANDLEBAR	把手整體	1	for hand guard
	46110-MBX-00	HANDLEBAR	把手整體	1	
2	46240-MAX-00	GRIP	握把	2	
3	61340-DL9-00	CABLE, HANDBRAKE	手剎車鋼索	1	
4	61620-ML8-00	CABLE, THROTTLE	節流鋼索	1	

 FRONT COVER 前蓋

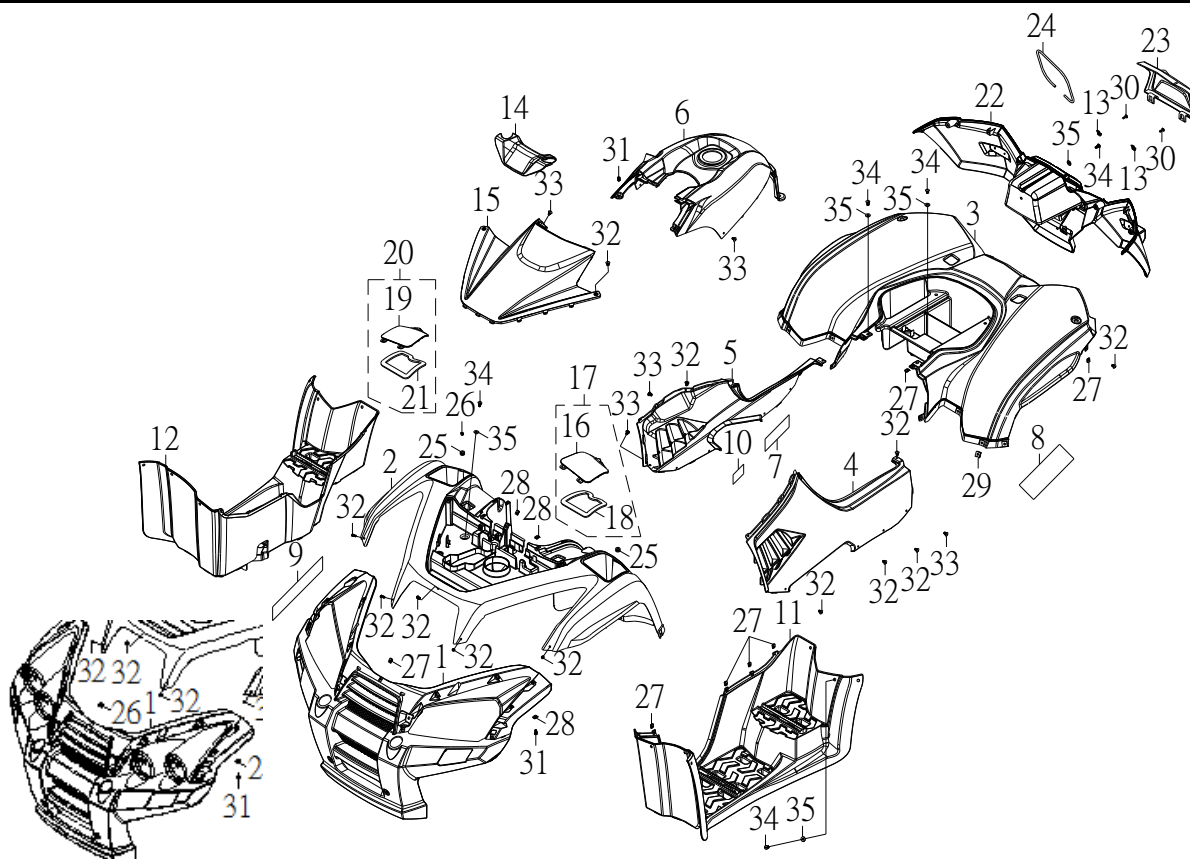


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	51121-JOW-00	SHIELD COVER, FRONT	1	
	51121-JOW-01	SHIELD COVER, FRONT ELIPSE LIGHT	1	
2	51161-MAX-00	COVER, FRONT	1	color code
3	51171-MAX-01	COVER, SIDE	1	color code
4	51172-ML8-00	SIDE COVER L	1	color code
5	51173-MAL-00	SIDE COVER R	1	color code
6	51532-ML8-00	COVER, TOP	1	color code
7	52846-BLK-00	INSULATION PAPER	3	
8	52846-ML8-01	INSULATION PAPER	1	
9	52846-ML8-02	INSULATION PAPER	1	
10	52846-SK9-00	INSULATION PAPER	3	
11	53235-ML8-00	MUDGUARD L FLOOR	1	
12	53245-MAL-00	MUDGUARD R FLOOR	1	
13	53396-NAF-00	HINGE	2	
14	55213-MAX-00	PROTECTOR, HANDLEBAR	1	
15	57330-MAX-00	LID, FRONT COVER	1	color code
16	57331-MAX-00	LID, TOOL BOX L	±	color code
17	57331-MAX-00A	LID COMP, TOOL BOX L	1	color code
18	57332-MAX-00	SEAL LID	±	
19	57336-MAX-00	LID, TOOL BOX R	±	color code
20	57336-MAX-00A	LID COMP, TOOL BOX R	1	color code
21	57337-MAX-00	SEAL LID	±	
22	57820-DA9-00	BAGGAGE COMPARTMENT	1	

 FRONT COVER 前蓋

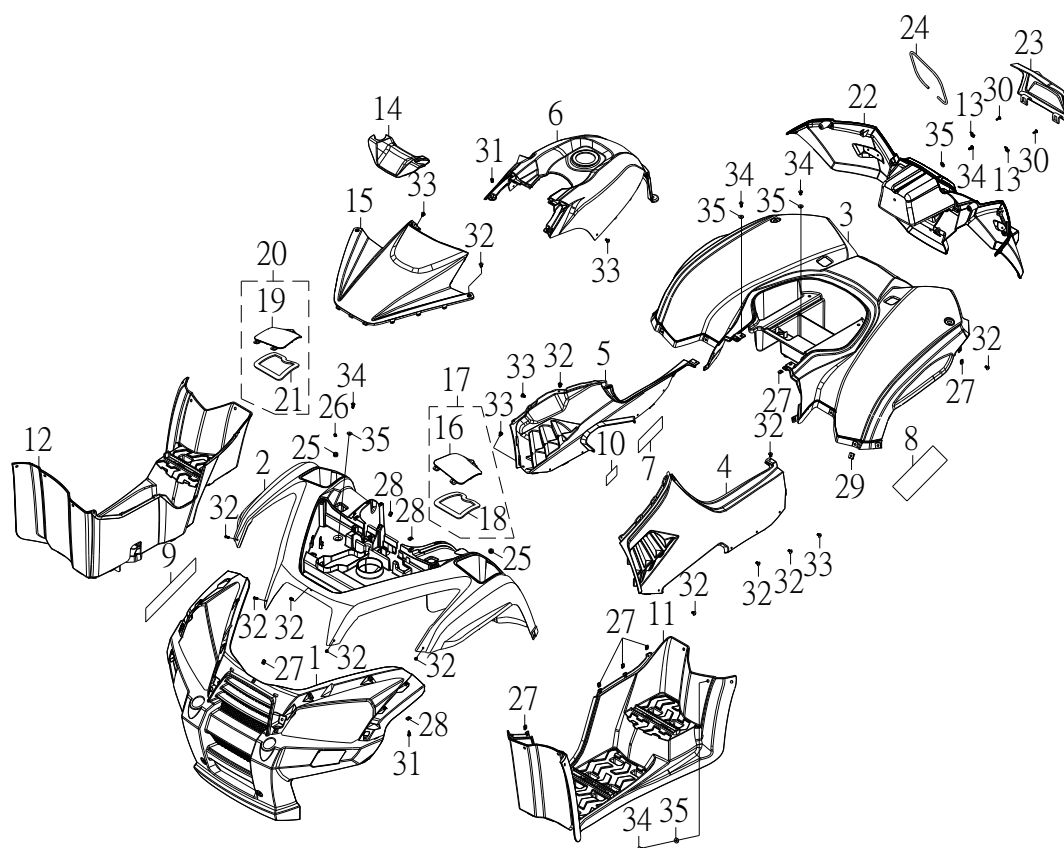


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
	57820-JOW-00	BAGGAGE COMPARTMENT	後置物箱	1	
23	57830-JOW-00	COVER, BAGGAGE COMPARTMENT	後置物箱蓋	1	color code
24	57842-JOW-00	SEAL, BAGGAGE COMPARTMENT	後置物箱封圈	1	
25	93580-81810	GROMMET	前置物箱蓋套環	2	
26	94312-078066	HOLE PLUG	扣式塞頭	2	
27	95101-041015-B	NUT, SPRING	U型板螺帽	28	
28	95101-05012	NUT, SPRING	U型板螺帽	9	
29	95101-061820-C	NUT, SPRING	U型板螺帽	12	
30	96110-41218-K	SCREW, TAPPING	自攻螺絲	2	
31	96112-51216-G	SCREW, TAPPING	自攻螺絲	8	
32	96318-04012-G	SCREW, PAN HEAD	十字孔頭螺絲	19	
33	96318-04016-G	SCREW, PAN HEAD	十字孔頭螺絲	9	
34	96318-06015-G	SCREW, PAN HEAD	十字孔頭螺絲	28	
35	97321-061825-G	WASHER, FLANGE	凸緣墊圈	28	

 SEAT 座墊

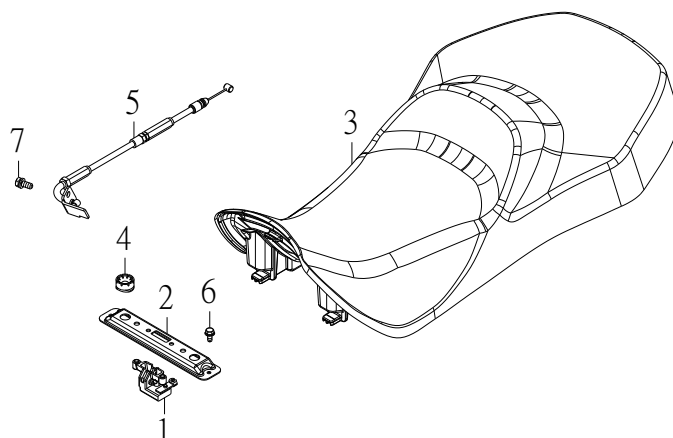


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	52710-MAX-00	CATCH COMP, SEAT	座墊扣勾組	1	
2	52721-MAX-00	SEAT HOLDER	座墊支撐座	1	
3	52730-MAL-00	SEAT ASSY	座墊總成	1	
	52730-MAL-01	SEAT ASSY	座墊總成	±	
	52730-MAL-02	SINGLE SEAT ASSY	單人座墊總成	±	
4	52735-KHB-00	RUBBER REAR FENDER	座墊後減震墊	2	
5	61220-MAL-00	CABLE, SEAT LOCK	座墊鎖鋼索	1	
6	96414-06012-B	BOLT, FLANGE	凸緣螺栓	4	
7	96613-05012-B	BOLT, HEXAGON WITH WASHER	六角十字穴螺栓附墊圈	1	

 REAR CARRIER 後架

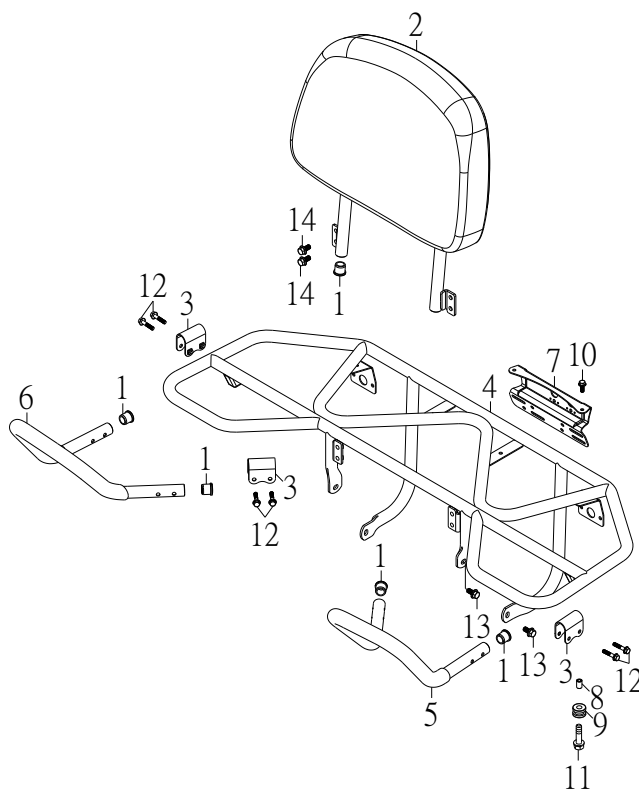


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	41154-JOW-00	PLUG, SPECIAL SHAPE	管塞	6	
2	52750-MAL-00	BACKREST COMP	後靠背架組	1	
	52750-MAL-01	BACKREST COMP	後靠背架組	1	
3	52850-MAL-0010	HOLDER	扶手固定板	4	
4	52850-DA9-00	CARRIER, REAR	後架	1	
5	52851-MAL-00	ARMREST L	後座左扶手	1	
6	52853-MAL-00	ARMREST R	後座右扶手	1	
7	55751-TL9-00	BRACKET, LICENSE	牌照板	1	
8	93510-061010	COLLAR	牌照板軸環	2	
9	93580-102212	GROMMET	牌照板套環	2	
10	96214-06020-B	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	2	
11	96218-06020-G	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	2	
12	96414-06035-G	BOLT, FLANGE	凸緣螺栓	8	
13	96414-08016-B	BOLT, FLANGE	凸緣螺栓	4	
14	96414-08016-G	BOLT, FLANGE	凸緣螺栓	4	
	55776-DA9-00		速度限制牌底板	1	
	96411-06012-B	BOLT, FLANGE	凸緣螺栓	2	
	97201-061820-B	WASHER, PLATE	平面墊圈	2	

 STICK SHIFT 排檔裝置

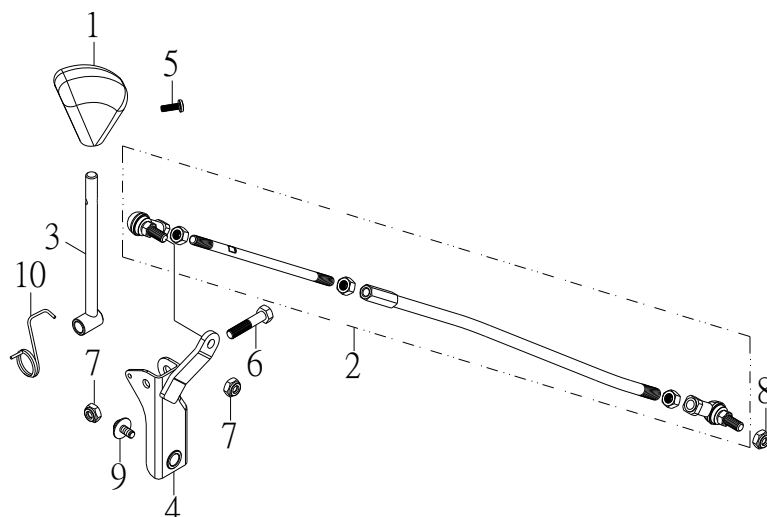


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	42869-QUA-01	COVER CHANGE HANDLE	排檔頭	1	
2	53203-ML8-00A	GEAR SHIFT LEVER	變速連桿總成	1	
3	53211-MAX-00	ROD SHIFT	排檔桿	1	
4	53215-ML8-00	ARM SHIFT	排檔臂	1	
5	94706-05016-K	BOLT	排檔頭固定螺栓	1	
6	94716-08039-B	BOLT	後緩衝器固定軸	1	
7	95311-081308-B	NUT, NYLON	尼龍螺帽	2	
8	95311-101710-B	NUT, NYLON	尼龍螺帽	1	
9	96218-06012-B	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	1	
10	97508-221880-B	SPRING, TORSION	扭轉彈簧	1	

 STAND FOOTREST 腳踏桿

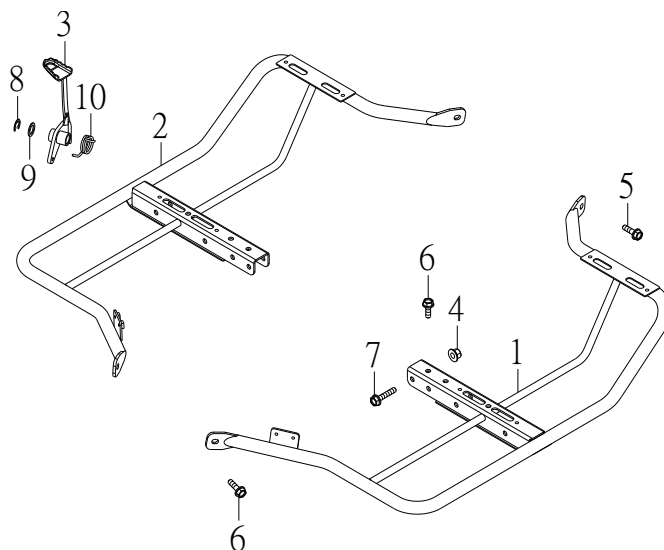


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	53231-MAL-00	FOOTREST L	左腳踏桿	1	
2	53241-MAL-00	FOOTREST R	右腳踏桿	1	
3	53261-ML8-00	PEDAL, BRAKE	剎車踏板	1	
4	95401-081208-B	NUT, FLANGE	凸緣螺帽	4	
5	96414-08014-B	BOLT, FLANGE	凸緣螺栓	2	
6	96414-08016-B	BOLT, FLANGE	凸緣螺栓	4	
7	96414-08050-B	BOLT, FLANGE	凸緣螺栓	4	
8	97011-12010-B	CIRCLIP	E形扣環	1	
9	97201-152620-B	WASHER, PLANE	平面墊圈	1	
10	97508-3224300-B	SPRING, TORSION	剎車踏板扭轉彈簧	1	

 GUARD 車架底板

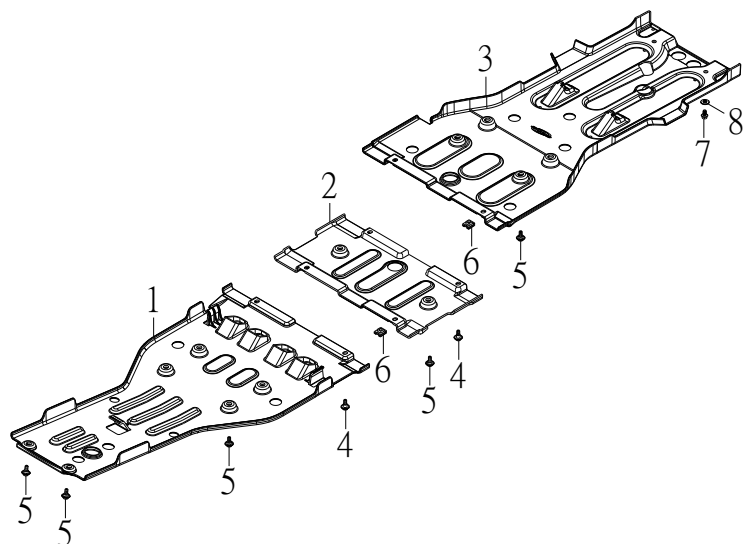

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	53384-ML8-00	FRONT GUARD	車架底板前	1	
2	53385-MAL-00	MIDDLE GUARD	車架底板中	1	
3	53386-DA9-00	REAR GUARD	車架底板後	1	
4	94708-06017-G	BOLT	車架底板固定螺栓	4	
5	94710-06016-G	BOLT	車架底板固定螺栓	8	
6	95101-061325-D	NUT, SPRING	U型板螺帽	4	
7	96414-06012-B	BOLT, FLANGE	凸緣螺栓	2	
8	97321-061825-G	WASHER, FLANGE	凸緣墊圈	2	

 HEADLIGHT 前燈

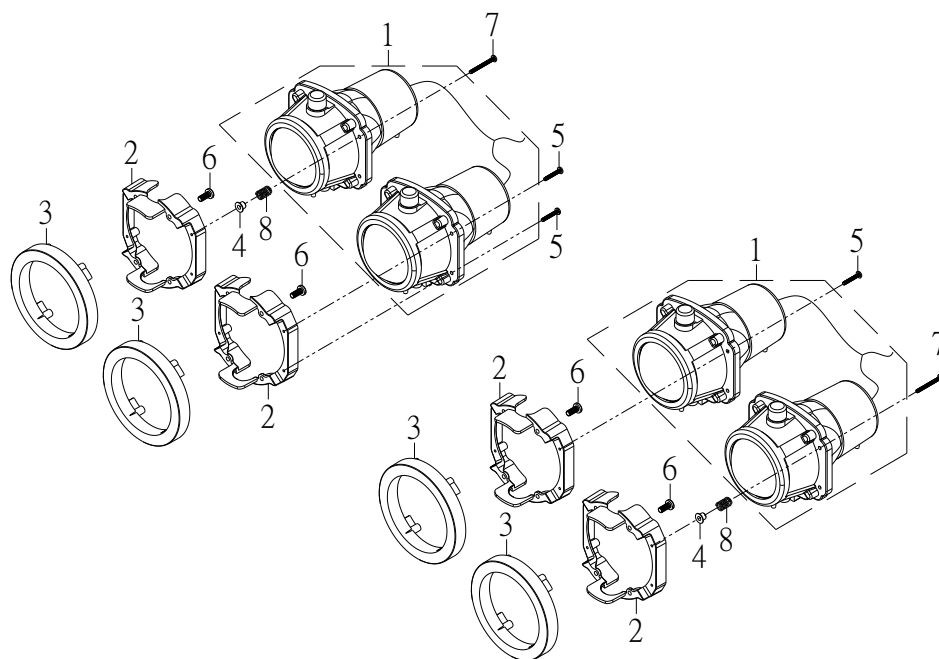


NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	55300-MAL-00	HEAD LIGHT ASSY	2	前燈總成
	55300-MAL-01	HEAD-LIGHT ASSY	2	前燈總成
2	55315-MAL-00	HOLDER, HEAD LIGHT	4	前燈支座
3	55325-MAL-00	COVER, HEAD LIGHT HOLDER	4	前燈飾蓋
4	93530-040605-B	COLLAR	8	前燈軸環
5	96110-32024-C	SCREW, TAPPING	8	自攻螺絲
6	96110-41616-C	SCREW, TAPPING	16	自攻螺絲
7	96112-32520-C	SCREW, TAPPING	8	自攻螺絲
8	97501-0909014-B	SPRING, COMPRESSION	8	壓縮彈簧

2017.03.28


53384-DA9-00A

 HEADLIGHT 前燈

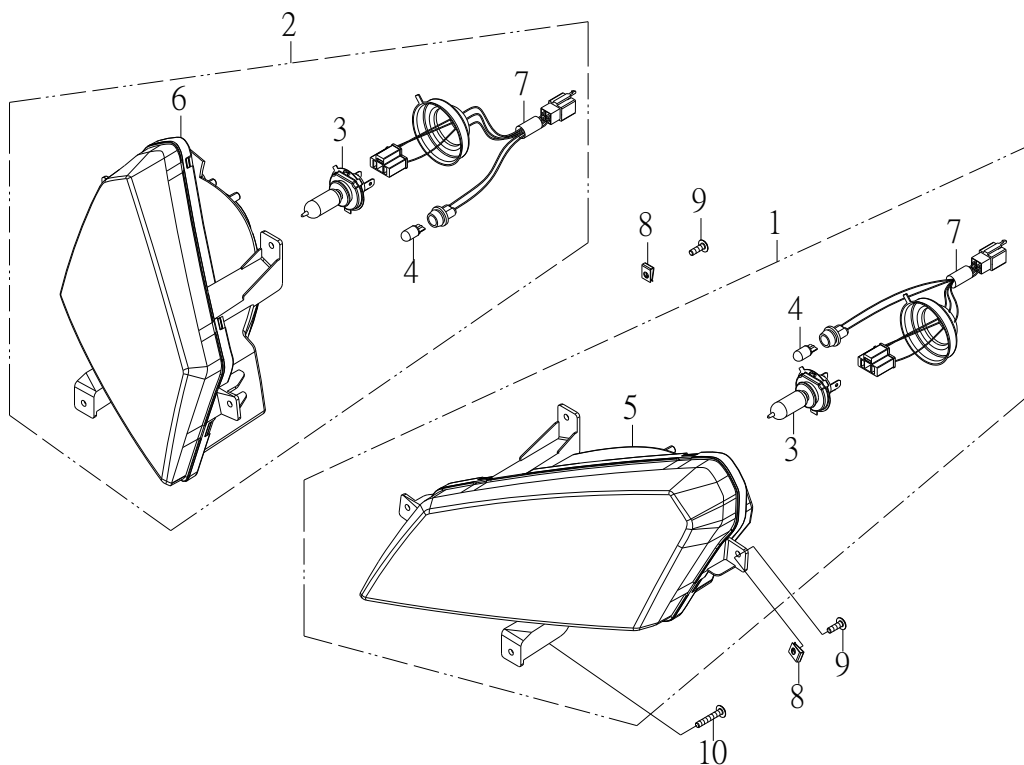


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	55300-MAX-00L	HEAD LIGHT ASSY	左前燈組	1	
2	55300-MAX-00R	HEAD LIGHT ASSY	右前燈組	1	
3	55314-CEW-00	BULB, HEAD LIGHT	前燈燈泡	2	
4	55316-NGF-00	BULB, POSITION LAMP	位置燈燈泡	2	
5	55320-JOW-00L	LENS ASSY	左前燈單元總成	1	
6	55320-JOW-00R	LENS ASSY	右前燈單元總成	1	
7	55340-MAX-00	SOCKET CORD ASSY	燈座總成	2	
8	95101-05012	NUT, SPRING	U型板螺帽	6	
9	96112-51216-G	SCREW, TAPPING	自攻螺絲	6	
10	96112-52016-K	SCREW, TAPPING	自攻螺絲	2	

 FLASHER 方向燈

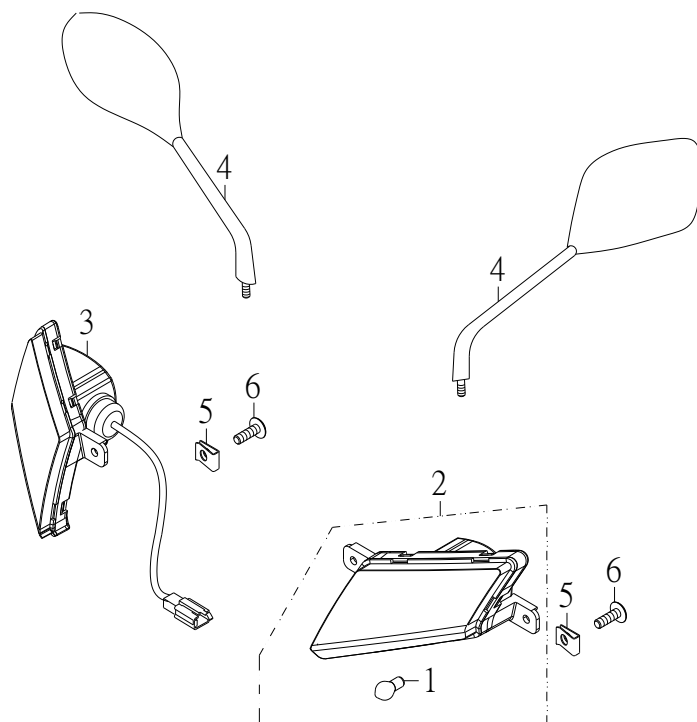


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	55311-JOW-00	BULB FLASHER	方向燈泡	2	
2	55350-MAX-00	WINKER ASSY, L FRONT	前方向燈組左	1	
3	55360-MAX-00	WINKER ASSY, R FRONT	前方向燈組右	1	
4	56270-ROA-00	MIRROR ASSY, BACK	後照鏡組	1	
5	95101-05012	NUT, SPRING	U型板螺帽	4	
6	96112-51616-G	SCREW, TAPPING	自攻螺絲	2	

 DAYTIME RUNNING LAMP 日行燈

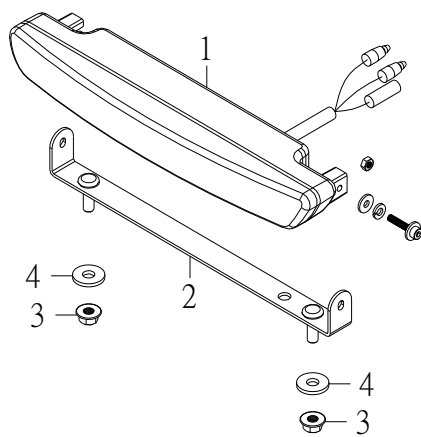


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	55391-MAX-00	DAYTIME RUNNING LAMP 日行燈燈體	1	
2	55393-MAX-00	BRACKET, DAYTIME RUNNING LAM 日行燈支架	1	
3	95401-050805-B	NUT, FLANGE 凸緣螺帽	2	
4	97201-051610-B	WASHER, PLATE 平面墊圈	2	

 SPEEDOMETER 速度錶

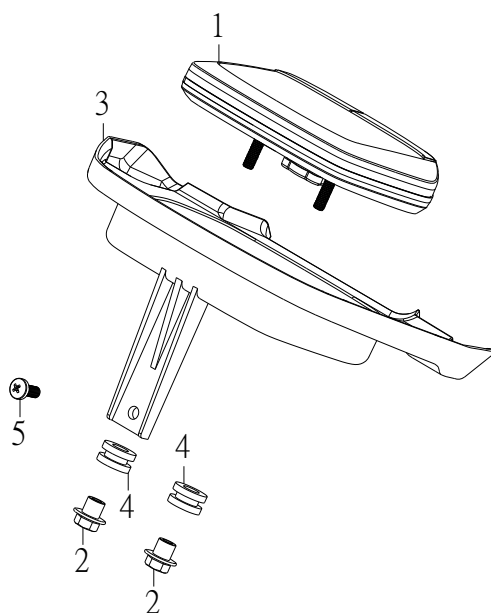


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	55510-DA9-00	SPEEDOMETER ASSY	速度表總成	1	
2	55515-CBW-00	NUT	速度表螺帽	2	
3	55516-MAX-00	HOLDER, SPEEDOMETER	速度表固定座	1	
4	93580-81609	GROMMET	速度表套環	2	
5	96112-51216-G	SCREW, TAPPING	自攻螺絲	1	

 INDICATOR LIGHT 指示燈

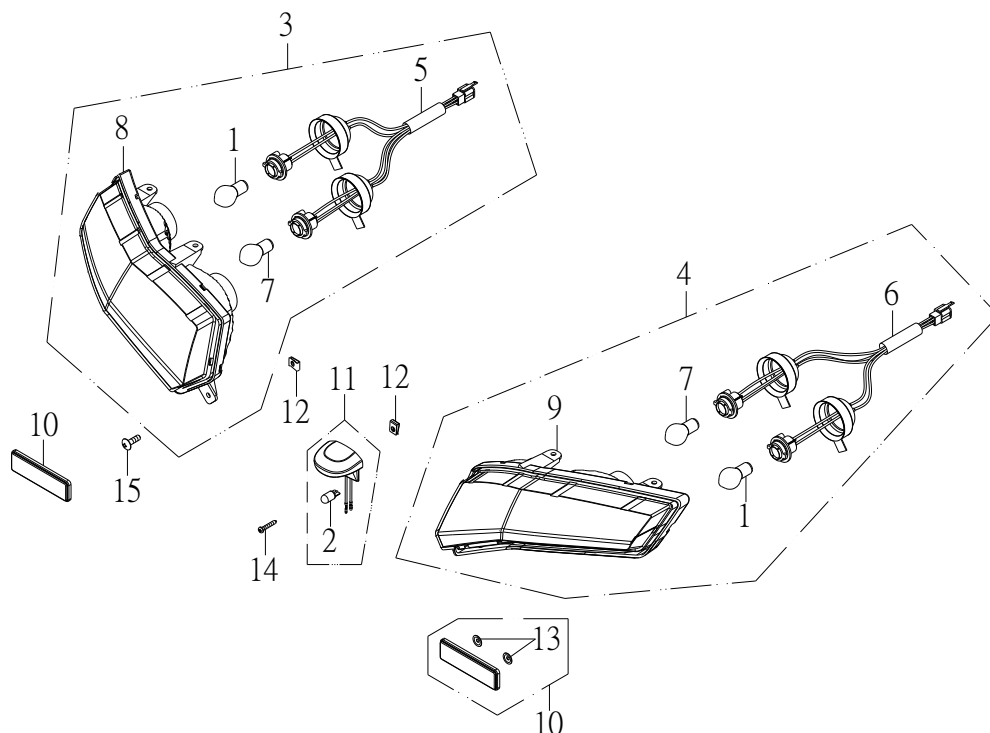


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	55311-JOW-00	BULB FLASHER	方向燈泡	2	
2	55316-NGF-00	BULB, POSITION LAMP	位置燈燈泡	1	
3	55700-MAX-00L	INDICATOR LIGHT L	左指示燈組	1	
4	55700-MAX-00R	INDICATOR LIGHT R	右指示燈組	1	
5	55713-MAX-00L	WIRE, GUIDING LIGHTS L	左指示燈配線組	1	
6	55713-MAX-00R	WIRE, GUIDING LIGHTS R	右指示燈配線組	1	
7	55714-PAF-00	BULB, TAIL LIGHT	後剎車燈泡	2	
8	55720-JOW-00L	LENS ASSY L	左指示燈單元總成	1	
9	55720-JOW-00R	LENS ASSY R	右指示燈單元總成	1	
10	55722-JOW-00	REFLECTOR	反射片	2	
11	55740-MLS-00	LICENSE LIGHT	牌照燈組	1	
12	95201-050804-B	NUT, HEXAGON	六角螺帽	1	
13	95111-051404-K	NUT, STOPPER	快速螺帽	4	
14	96310-05014-B	SCREW, PAN HEAD	十字孔頭螺絲	1	
15	96112-51216-G	SCREW, TAPPING	自攻螺絲	10	
	55722-SAF-00	REFLECTOR	反射片	2	
	55724-DA9-00L	HOLDER L, REFLECTOR	側反射片固定座左	1	
	55724-DA9-00R	HOLDER R, REFLECTOR	側反射片固定座右	1	

 WIRE HARNESS 主電路配線

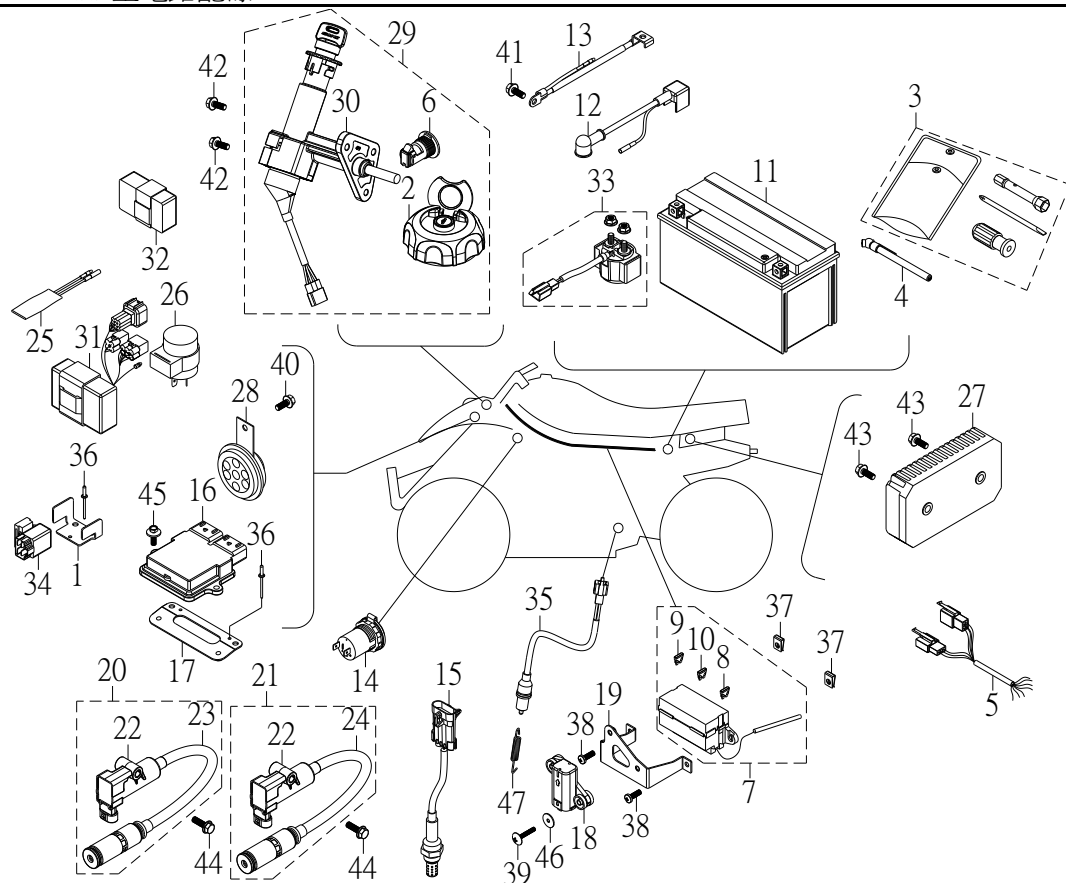


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	41144-MAX-00	STAY, RELAY	繼電器座	1	
2	43102-MAX-01	CAP ASSY	汽油箱蓋總成	1	
3	56100-MAX-01	TOOL SET	工具包	1	
4	56190-RAM-00	GAUGE, AIR	胎壓計	1	
5	56226-MAX-02	POWER CORD, TRAILER SOCKET	拖車插座電源線	1	
6	57851-MAX-00	LOCK	後置物箱鎖	1	
7	61120-DL9-00	WIRE, HARNESS	主配線總成	1	
8	61151-MAX-01	FUSE	保險絲	4	
9	61151-MAX-02	FUSE	保險絲	3	
10	61151-MAX-04	FUSE	保險絲	3	
11	62100-MAX-00	BATTERY ASSY	蓄電池總成	1	
	62100-MAX-01	BATTERY ASSY	蓄電池總成	1	
12	62110-MAX-00	CABLE, BATTERY	蓄電池導線	1	
13	62120-MAL-00	CABLE, EARTH	蓄電池接地線	1	
14	62150-MAX-00	AUXILIARY DC JACK	12V電源插座	1	
15	62230-ML8-00	OXYGEN-SENSOR	含氧感測器	2	
16	62250-DA9-00	ECM	引擎控制模組	1	
17	62256-MAX-00	STAY, ECM	ECM固定座	1	
18	62260-MAX-01	SWITCH, BANK ANGLE	傾倒開關	1	
19	62266-MAX-01	STAY, BANK ANGLE SWITCH	傾倒開關固定座	1	
20	62310-ML8-00F	IGNITION COIL ASSY	點火線圈總成前	1	
21	62310-ML8-00R	IGNITION COIL ASSY	點火線圈總成後	1	

 WIRE HARNESS 主電路配線

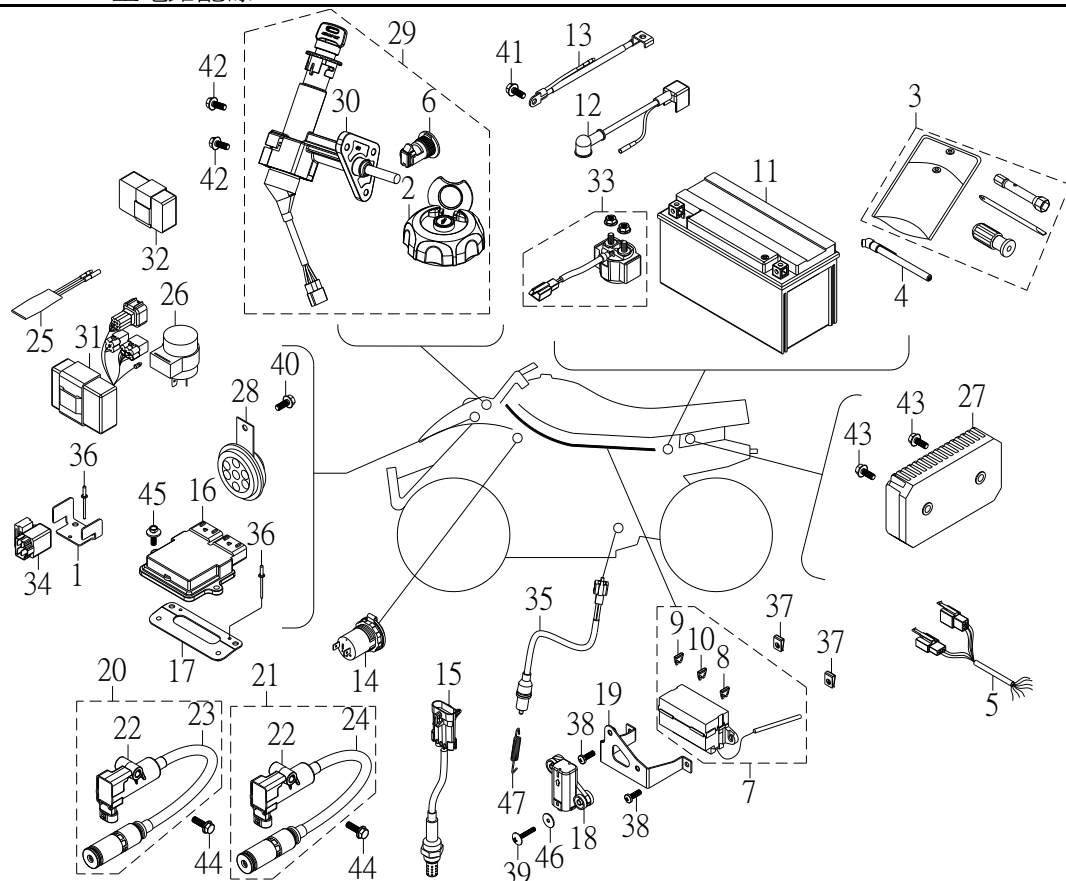


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
22	62311-ML8-00	IGNITION COIL	2	點火線圈
23	62320-ML8-00F	PLUG CAP ASSY	1	火星塞蓋總成前
24	62320-ML8-00R	PLUG CAP ASSY	1	火星塞蓋總成後
25	62345-MAX-00	DIODE	1	單向二極體
26	62350-NAF-01	FLASHER RELAY ASSEMBLY	1	方向警報斷續器總成
27	62360-ML8-00	RECTIFIER & REGULATOR COMP	1	整流穩壓器
28	62370-NAF-00	HORN	1	喇叭
29	62500-MAX-01	KEY SET	1	鎖組
30	62501-MAX-00	MAIN SWITCH ASSY	1	主開關舵鎖組
31	62530-MAX-00I	GEAR POSITION SWITCH	1	檔位控制器
32	62535-DA9-00	SOLENOID VALVE CONTROLLER	1	電磁閥控制器
33	62550-MAX-00	STARTER RELAY SWITCH COMP	1	起動開關組
34	62550-SK2-00	STARTER RELAY SWITCH COMP	3	起動開關組
35	62980-CHP-00	SWITCH ASSY, REAR STOP	1	剎車燈後置開關
36	94320-32096	RIVET	4	拉釘
37	95101-05012	NUT, SPRING	2	U型板螺帽
38	96112-51616-G	SCREW, TAPPING	2	自攻螺絲
39	96318-04022-G	SCREW, PAN HEAD	2	十字孔頭螺絲
40	96414-06010-B	BOLT, FLANGE	1	凸緣螺栓
41	96414-06012-B	BOLT, FLANGE	1	凸緣螺栓
42	96414-06016-B	BOLT, FLANGE	3	凸緣螺栓
43	96414-06030-K	BOLT, FLANGE	2	凸緣螺栓

 WIRE HARNESS 主電路配線

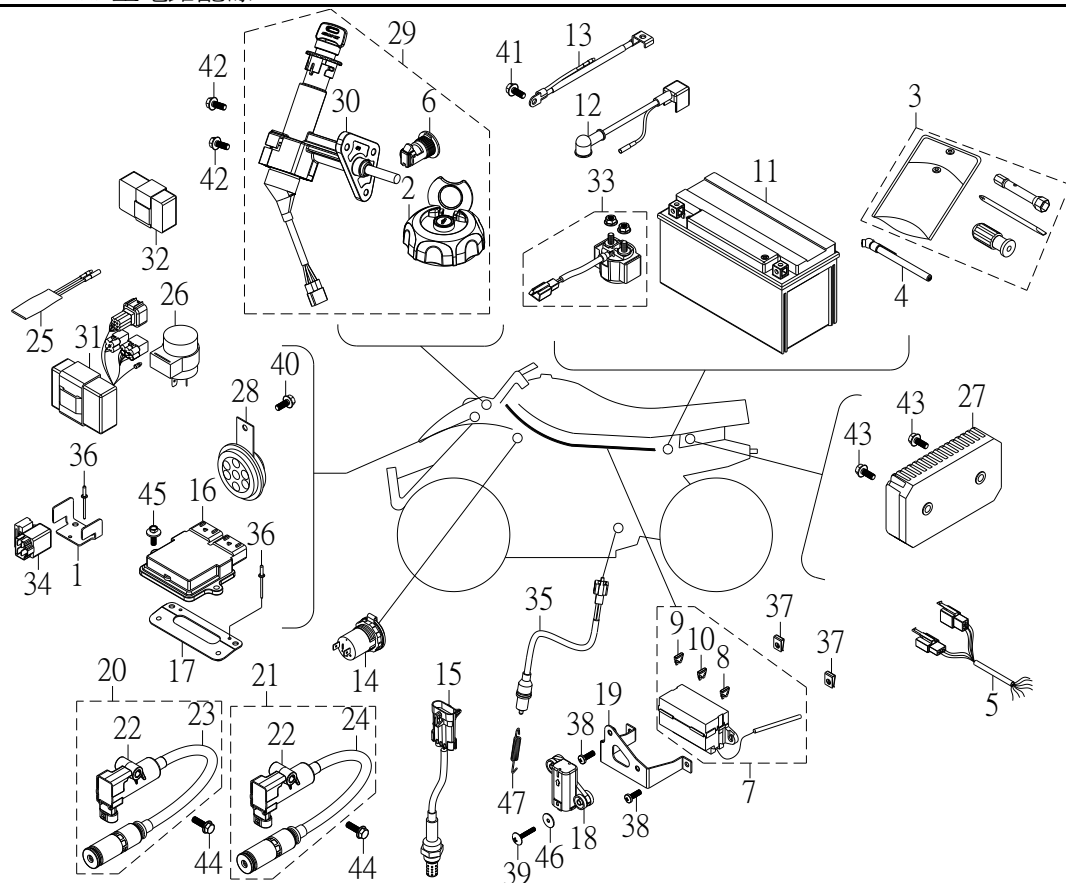


NO.	PARTS NO.	PARTS NAME	QTY	NOTE
項目	零件號碼	零件名稱	用量	備註
44	96414-06035-B	BOLT, FLANGE	2	
45	96616-05016-K	BOLT, HEXAGON WITH WASHER	2	
46	97201-041610-G	WASHER, PLATE	2	
47	97506-12080-B	SPRING, STOP SWITCH	1	

 HANDLE SWITCH, LEVER 把手開關、拉桿

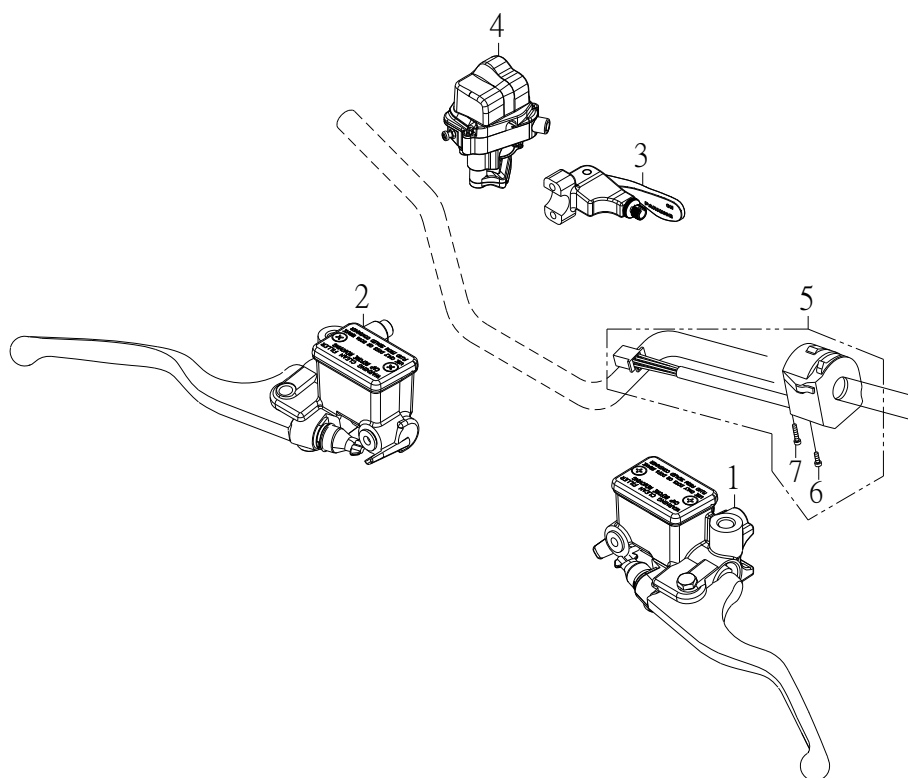


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	4587L-DA9-00	MASTER CYLINDER SUB ASSY L	左主缸總成	1	
2	4587R-MAX-00	MASTER CYLINDER SUB ASSY R	右主缸總成	1	
3	62910-CGV-00	LEVER ASSY, HANDLE	駐車拉桿組	1	
4	62920-DA9-00	THROTTLE ASSY	節流開關控制座	1	
5	62930-MAX-01	HANDLE SWITCH ASSY L	左把手開關總成	1	
6	96310-05030-G	SCREW, PAN HEAD	十字孔頭螺絲	1	
7	96310-05040-G	SCREW, PAN HEAD	十字孔頭螺絲	1	

 LOCK SWITCH LOCK開關裝置

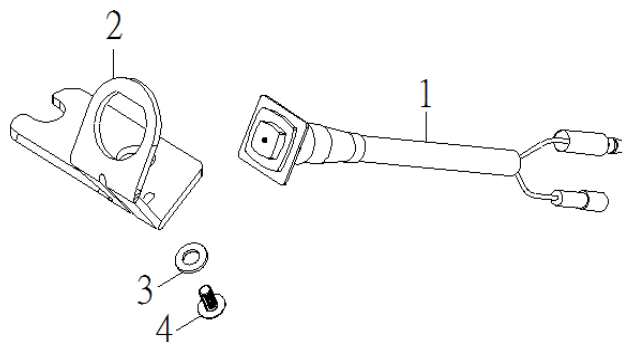


NO.	PARTS NO.	PARTS NAME		Q'TY	NOTE
項目	零件號碼	零件名稱		用量	備註
1	62596-DA9-00	LOCK SWITCH	LOCK按鈕開關	1	
2	62597-CBW-00	SWITCH HOLDER	O/R按鈕座	1	
3	96310-03006-B	SCREW, PAN HEAD	十字孔頭螺絲	2	
4	97201-041210-C	WASHER, PLATE	平面墊圈	2	

 HANDLE PROTECTOR 把手護蓋 (Accessory)

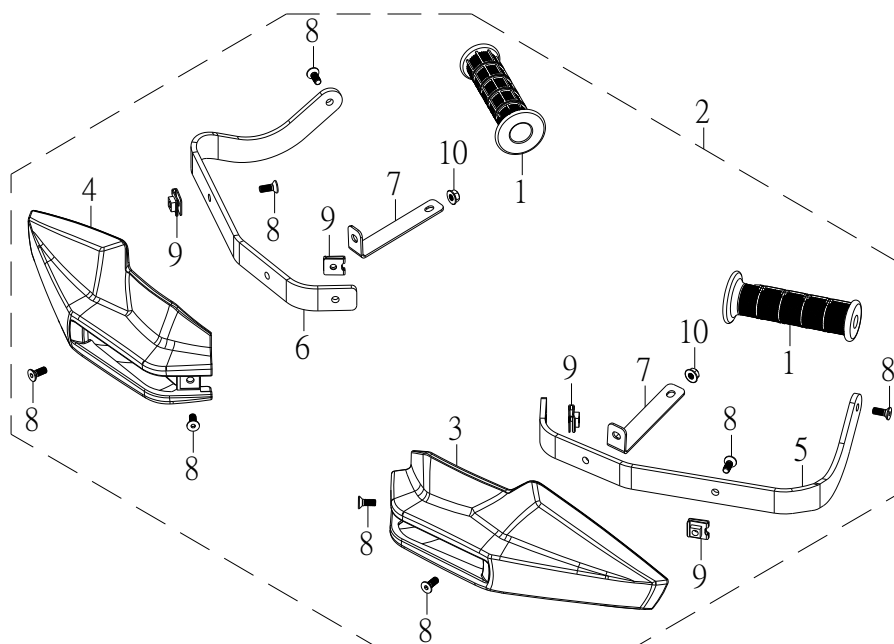


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	46240-MBX-00	GRIP	握把	2	
2	46250-MBX-00	PROTECTOR COMP, HANDLE	把手護蓋組	1	
3	46252-MBX-00	PROTECTOR L, HANDLE	左把手護蓋	1	
4	46253-MBX-00	PROTECTOR R, HANDLE	右把手護蓋	1	
5	46257-MBX-00	HOLDER, HANDLE PROTECTOR L	左把手護蓋座	1	
6	46258-MBX-00	HOLDER, HANDLE PROTECTOR R	右把手護蓋座	1	
7	46259-MBX-00	BRACKET, HANDLE PROTECTOR	把手護蓋支座	2	
8	94713-06016	BOLT, FLAT HEAD	內六角埋頭螺栓	8	
9	95101-061820-C	NUT, SPRING	U型板螺帽	4	
10	95401-061006-B	NUT, FLANGE	凸緣螺帽	2	

 MUDGUARD 前下擋泥板 (Accessory)

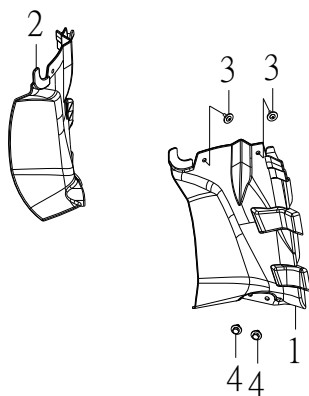


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	51552-MAX-00	MUDGUARD FRONT L	左前下擋泥板	1	
2	51553-MAX-00	MUDGUARD FRONT R	右前下擋泥板	1	
3	94310-070140	CLINCH BOLT	旋轉式鉚釘	4	
4	96218-06016-B	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	4	

 PROTECTOR 下護蓋

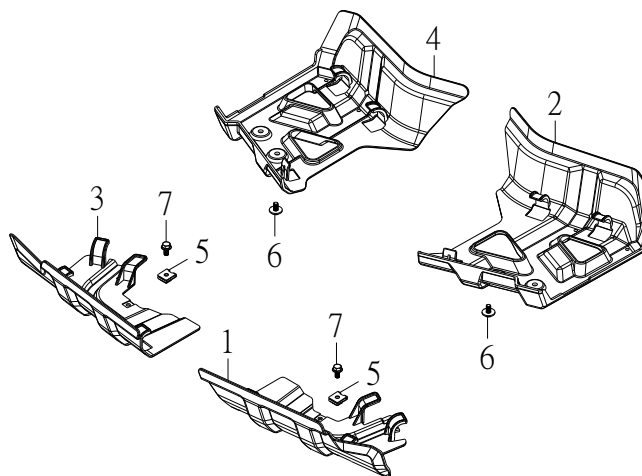


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	53382-MAX-00	PROTECTOR FRONT L	左前下護蓋	1	
2	53383-DA9-00	PROTECTOR REAR L	左後下護蓋	1	
3	53392-MAX-00	PROTECTOR FRONT R	右前下護蓋	1	
4	53393-DA9-00	PROTECTOR REAR R	右後下護蓋	1	
5	95101-061820-C	NUT, SPRING	U型板螺帽	2	
6	96218-06012-B	BOLT, HEXAGON WITH WASHER	六角螺栓附墊圈	2	
7	96414-06012-B	BOLT, FLANGE	凸緣螺栓	2	

 WINCH 絞盤 (Accesso 3000LB

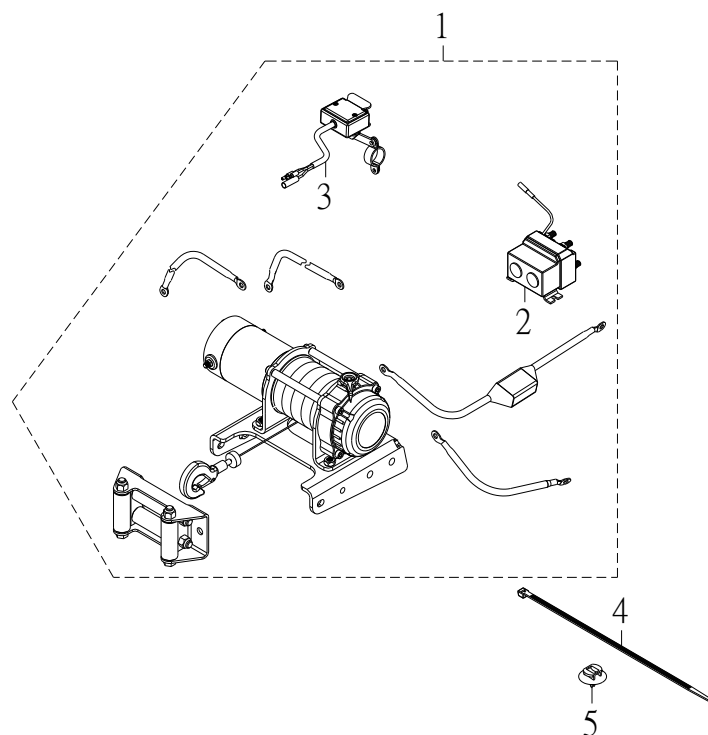


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	56200-MAL-00	WINCH ASSY	絞盤總成	1	
2	56203-MAX-00	CONTROL RELAY UNIT	電控組	1	
3	56204-MAX-00	CONTROL SWITCH	控制開關	1	
4	61135-NAF-00	BAND, CORD	束帶	1	
5	94313-076073	PUSH TIE MOUNT	插銷式固定座	1	

 WINCH 絞盤 (Accesso 2000LB

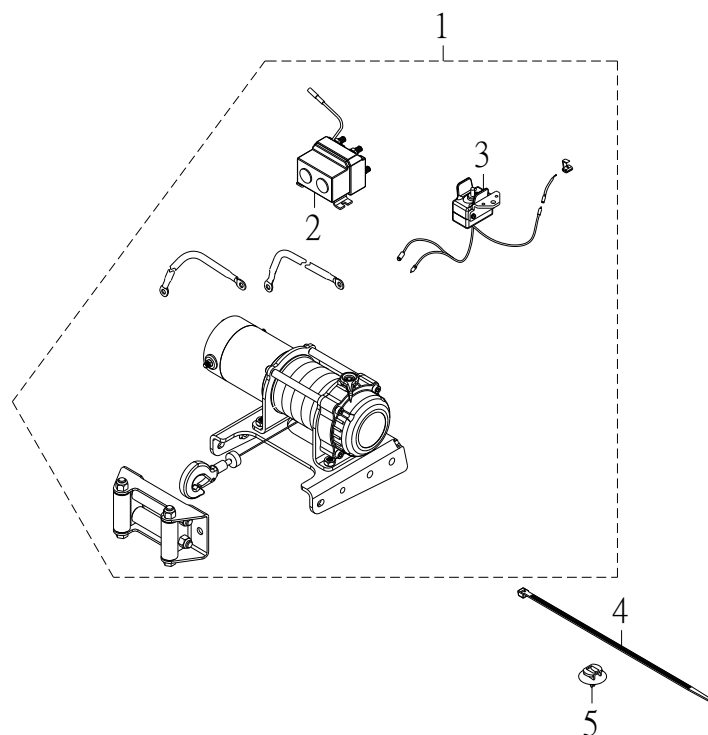


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	56200-JPE-02	WINCH ASSY	絞盤總成	1	
2	56203-JPE-02	CONTROL RELAY UNIT	電控組	1	
3	56204-JPE-02	CONTROL SWITCH	控制開關	1	
4	61135-NAF-00	BAND, CORD	束帶	1	
5	94313-076073	PUSH TIE MOUNT	插銷式固定座	1	

 TRAILER 拖車裝置

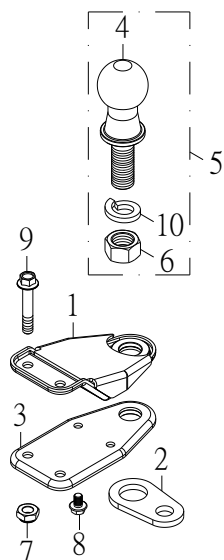

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	56211-MAX-00	STAY BRACKET UP	托架固定板 上	1	
2	56214-DA9-00	STAY BRACKET UP	第二拖架板	1	
3	56216-MAX-00	STAY BRACKET DOWN	托架固定板 下	1	
4	56221-DA9-01	BRACKET CENTER	托架軸心	1	
5	56221-DA9-01A	BRACKET CENTER COMP	托架軸心組	1	
6	95201-223218-R	NUT, HEXAGON	六角螺帽	1	
7	95311-101710-B	NUT, NYLON	尼龍螺帽	2	
8	96414-08016-B	BOLT, FLANGE	凸緣螺栓	2	
9	96414-10055-B	BOLT, FLANGE	凸緣螺栓	2	
10	97301-223656-B	WASHER, SPRING	彈簧墊圈	1	

 TRAILER SOCKET KIT 拖車電源插座

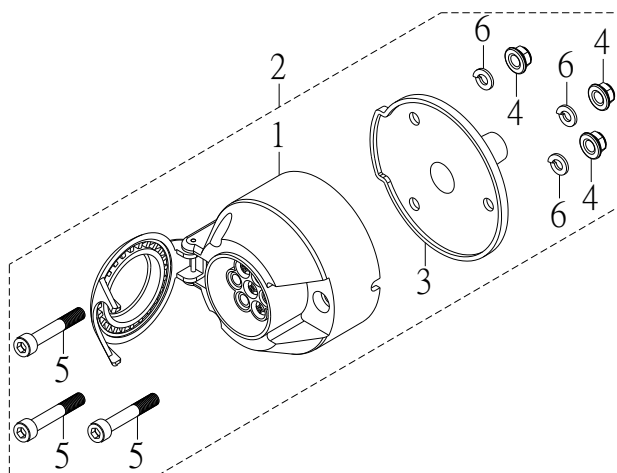

NO.	PARTS NO.	PARTS NAME	Q'TY	NOTE
項目	零件號碼	零件名稱	用量	備註
1	56225-MAX-00	TRAILER SOCKET	1	拖車電源插座
2	56225-MAX-00A	TRAILER SOCKET KIT	1	拖車電源插座組
3	56227-MAX-00	DUST COVER	1	電源線防塵套
4	95401-050805-B	NUT, FLANGE	3	凸緣螺帽
5	96510-05035-K	BOLT, SOCKET	3	六角承窩螺栓
6	97301-050810-B	WASHER, SPRING	3	彈簧墊圈

2012.04.19

56225-MAX-00A

NOTE: 1) parts no. will be updated promptly by SMC, if necessary.
 2) please select your suitable parts as model you have.
 3) strongly recommend to re-confrim parts with sales department.
 4) please remark the color if necessary.