


####

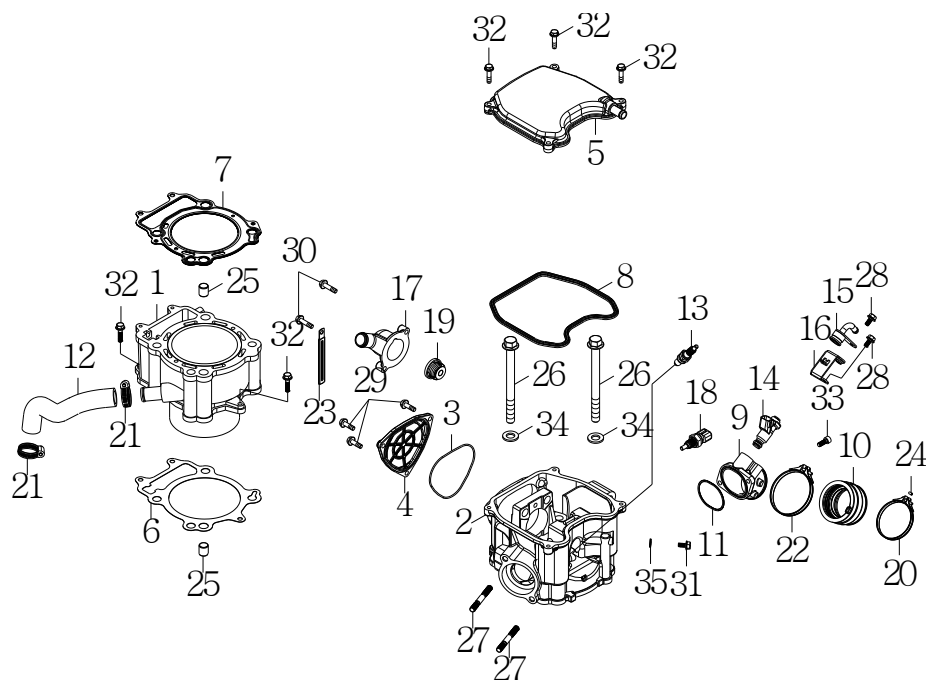

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	11111-MAX-00	CYLINDER COMP	1	汽缸
2	11121-MAX-00I	HEAD COMP, CYLINDER	1	汽缸頭
3	11123-MAX-00	GASKET, SIDE COVER	1	缸頭側蓋墊圈
4	11124-MAX-00	SIDE COVER, CYLINDER HEAD	1	缸頭側蓋
5	11141-MAX-01	CYLINDER HEAD COVER	1	汽缸頭蓋
6	11151-MAX-01	GASKET, CYLINDER	1	汽缸墊片
7	11181-MAX-00	GASKET, CYLINDER HEAD	1	汽缸頭墊片
8	11191-MAX-00	GASKET, HEAD COVER	1	汽缸頭蓋墊圈
9	13551-MAX-01I	ALUMINUM SEAT, INTAKE PIPE	1	進氣歧管鋁座
10	13552-MAX-01	CONNECTING PIPE	1	進氣歧管橡膠接管
11	13561-MAX-01	SEAL, INTAKE PIPE	1	進氣歧管墊圈
12	43426-MAX-00	HOSE, WATER PUMP EX	1	水泵出水管
13	62210-MAX-00	PLUG, SPARK	1	火星塞
14	62240-MAX-00	INJECTOR	1	噴油器
15	62246-MAX-00	INJECTOR JOINT	1	噴油器接頭
16	62248-MAX-00	INJECTOR HOLDER	1	噴油器固定座
17	62732-MAX-00	THERMOSTAT COVER	1	節溫器蓋
18	62740-MAX-00	THERMO SENSOR	1	引擎溫度傳感器
19	62745-MAX-00	THERMOSTAT	1	節溫器
20	90261-80060	CLIP	1	管夾
21	90281-090032-C	CLIP	2	斑馬式管夾
22	90281-090070	CLIP	1	斑馬式管夾

#BEZUG!


#BEZUG!

This exploded view diagram illustrates the components of a water pump assembly. The parts are numbered as follows:

- 1**: Main pump housing
- 2**: Internal pump body
- 3**: Fan cover
- 4**: Fan blade
- 5**: Access plate
- 6**: Gasket for the main housing
- 7**: Gasket for the access plate
- 8**: Oil seal
- 9**: Pulley
- 10**: Pulley nut
- 11**: Pulley washer
- 12**: Water inlet pipe
- 13**: Bolt for the pump body
- 14**: Bolt for the pulley
- 15**: Bolt for the fan cover
- 16**: Bolt for the fan cover
- 17**: Bolt for the fan cover
- 18**: Bolt for the pump body
- 19**: Bolt for the fan cover
- 20**: Bolt for the fan cover
- 21**: Bolt for the water inlet pipe
- 22**: Bolt for the pulley
- 23**: Bolt for the fan cover
- 24**: Bolt for the fan cover
- 25**: Bolt for the main housing
- 26**: Bolt for the pump body
- 27**: Bolt for the pump body
- 28**: Bolt for the fan cover
- 29**: Bolt for the fan cover
- 30**: Bolt for the fan cover
- 31**: Bolt for the pump body
- 32**: Bolt for the main housing
- 33**: Bolt for the fan cover
- 34**: Bolt for the pump body
- 35**: Bolt for the pump body


#BEZUG!

CRANKSHAFT, PISTON 曲軸、活塞

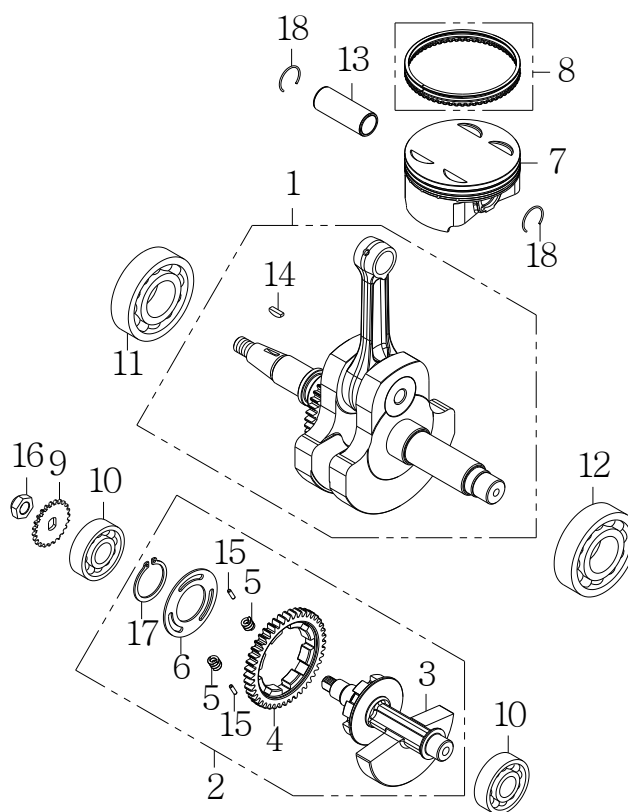


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	11400-MAX-02	CRANKSHAFT COMP	曲軸總成	1	
2	11500-MAX-02	BALANCER SHAFT COMP	平衡軸總成	1	
3	11510-MAX-02A	BALANCER COMP	平衡軸組	1	
4	11521-MAX-01	DRIVEN GEAR, BALANCER	平衡軸被動齒輪	1	
5	11526-MAX-01	SPRING, DRIVEN GEAR	平衡軸減震彈簧	8	
6	11528-MAX-00	WASHER, BALANCER	平衡軸墊圈	1	
7	11631-MAX-01	PISTON SET	活塞	1	
8	11636-MAX-00	RING SET, PISTON	活塞環組	1	
9	13178-MAX-00	OIL PUMP DRIVING WHEEL	機油泵驅動齒輪	1	
10	93320-205215	BALL BEARING	滾珠軸承	2	
11	9332T-358021TJ3	BALL BEARING	滾珠軸承	1	
12	9332T-358021TJ4	BALL BEARING	滾珠軸承	1	
13	93510-142365	PIN, PISTON	活塞銷	1	
14	94420-05022	KEY, WOODRUFF	半圓鍵	1	
15	94510-60010	PIN, DOWEL	滾針	4	
16	95211-121910-B	LOCK NUT	六角制止螺帽	1	
17	97010-35015-K	CIRCLIP	C形扣環	1	
18	97050-14027	CIRCLIP, PISTON PIN	活塞銷止動環	2	

WATER PUMP 水泵

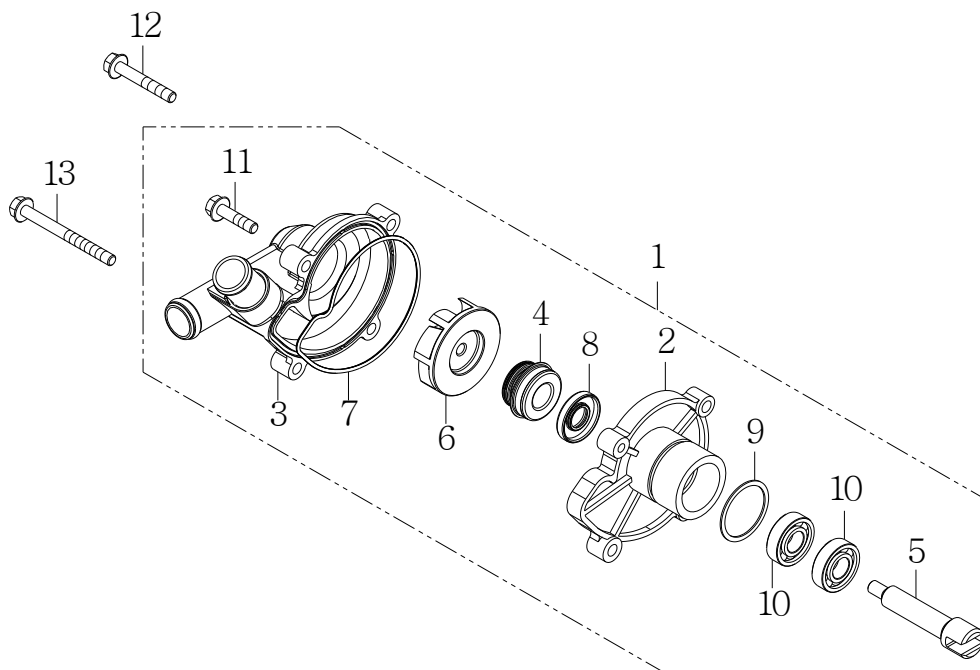


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	13001-MAX-00	WATER PUMP COMP	水泵總成	1	
2	13011-MAX-00	WATER PUMP HULL	水泵本體	1	
3	13012-MAX-00	WATER PUMP COVER COMP	水泵蓋組	1	
4	13018-MAX-00A	WATER SEAL COMP	水封組	1	
5	13021-MAX-00	WATER PUMP SHAFT	水泵軸	1	
6	13024-MAX-00	FAN	水泵葉片	1	
7	13051-MAX-00	SEAL, PUMP COVER	水泵蓋密封圈	1	
8	9311V-12285	OIL SEAL	油封	1	
9	9321V-19340	O-RING	護油圈	1	
10	93320-122808	BALL BEARING	滾珠軸承	2	
11	96411-06025-B	BOLT, FLANGE	凸緣螺栓	2	
12	96412-06040-B	BOLT, FLANGE	凸緣螺栓	1	
13	96412-06070-B	BOLT, FLANGE	凸緣螺栓	1	

OIL PUMP 機油泵

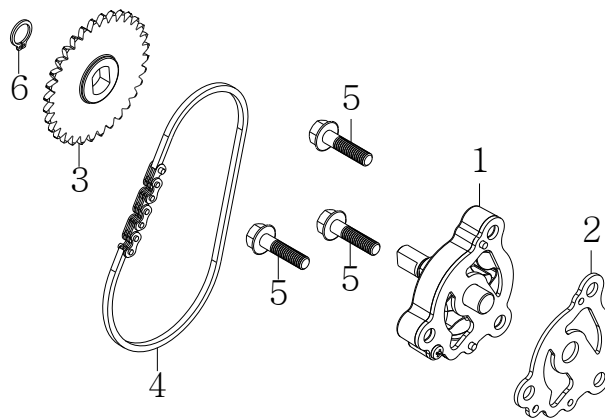


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	13100-MAX-00	PUMP ASSY, OIL	機油泵總成	1	
2	13101-MAX-00	WASHER, OIL PUMP	機油泵墊片	1	
3	13124-MAX-00	SPROCKET, OIL PUMP DRIVEN	機油泵被動鏈輪	1	
4	13131-MAX-00	CHAIN, OIL PUMP	機油泵驅動鏈條	1	
5	96411-06025-B	BOLT, FLANGE	凸緣螺栓	3	
6	97010-10010-K	CIRCLIP	C形扣環	1	

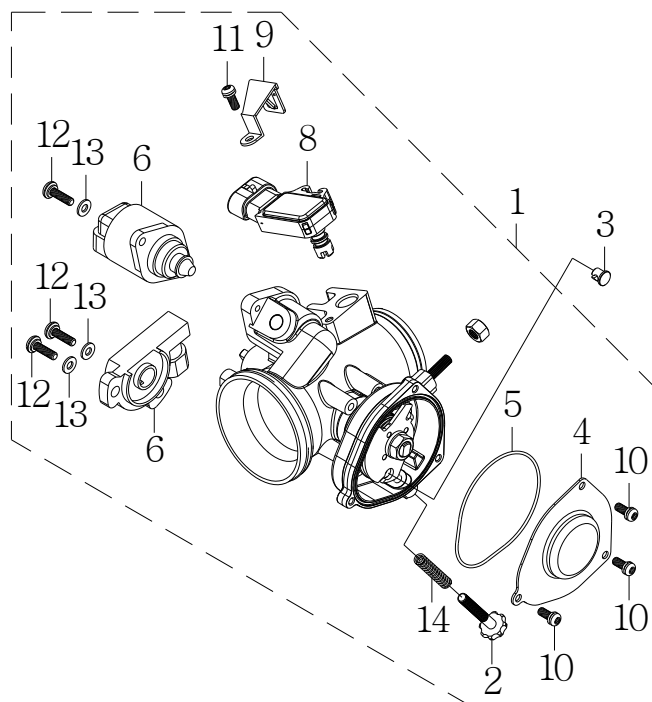


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	13201-MAX-03	THROTTLE VALVE	節氣閥總成	1	
2	13203-MAX-03	CABLE, ADJUSTING	怠速調整螺絲	1	
3	13261-MAX-00	CABLE GUIDE	鋼索導塊	1	
4	13276-MAX-03	COVER	節流閥蓋	1	
5	13296-MAX-03	SEAL	節流閥蓋封圈	1	
6	62270-MAX-00	IACV	步進電機	1	
7	62280-MAX-00	TPS	節氣門位置傳感器	1	
8	62290-MAX-00	MAPMAT SENSOR	進氣溫度壓力傳感器	1	
9	62296-MAX-00	FASTENER, MAPMAT SENSOR	進氣傳感器固定座	1	
10	96310-04008-B	SCREW, PAN HEAD	十字孔頭螺絲	3	
11	96311-04010-C	PAN HEAD SCREW WITH SPRING WASHER	十字孔頭螺絲附彈墊	1	
12	96311-04015-C	PAN HEAD SCREW WITH SPRING WASHER	十字孔頭螺絲附彈墊	4	
13	97201-041010-B	WASHER, PLATE	平面墊圈	4	
14	97501-1009022-B	SPRING	怠速調整彈簧	1	

OIL CATCH BOX 集油室

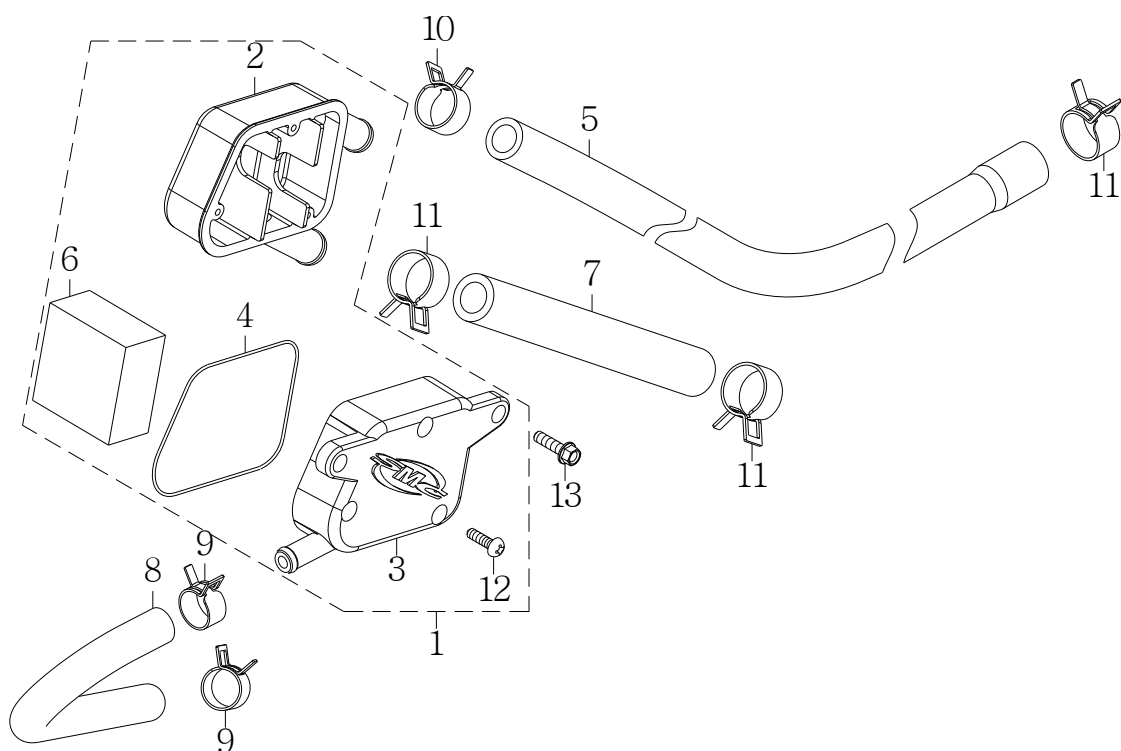


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	13420-MAX-00	OIL CATCH ASSY	1	集油室總成
2	13421-JOW-00	BOX OIL CATCH	1	集油室箱
3	13422-JOW-00	COVER OIL CATCH	1	集油室蓋
4	13423-JOW-00	SEAL OIL CATCH	1	集油室封圈
5	13424-MAL-00	BREATHER TUBE	1	集油室通氣管
6	13427-MAX-00	FILTER OIL CATCH	1	集油濾清海綿
7	15172-MAL-00	HOSE, BREATH	1	變速箱蓋通氣管
8	15276-MAL-00	HOSE, BREATH	1	右蓋通氣管
9	90220-06130-D	CLAMP	2	板型管夾
10	90220-10140-D	CLAMP	1	板型管夾
11	90220-10160-C	CLAMP	3	板型管夾
12	96110-31224-K	SCREW, TAPPING	3	自攻螺絲
13	96411-06016-B	BOLT, FLANGE	2	凸緣螺栓

CAMSHAFT, VALVE 凸輪軸、閥門

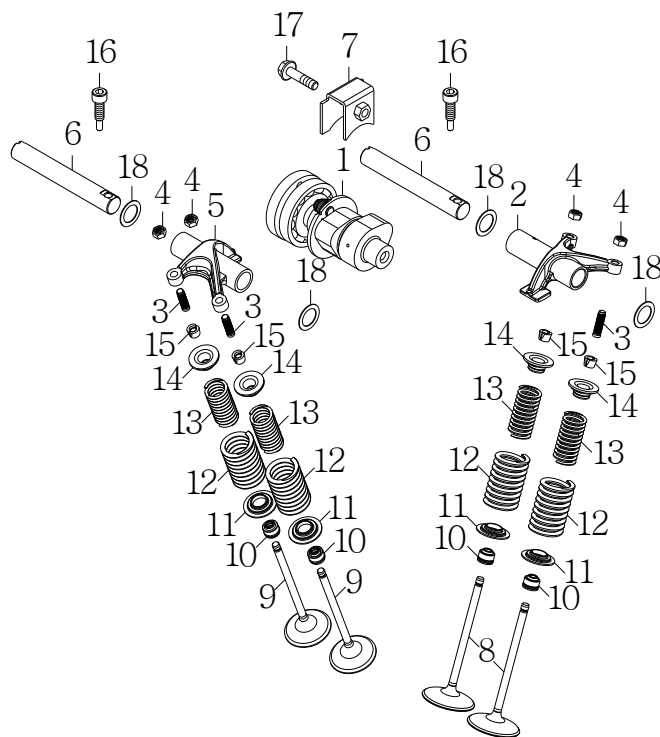


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		QTY 用量	NOTE 備註
1	14100-MAX-00	CAMSHAFT COMP	凸輪軸組件	1	
2	14431-MAX-00	ROCKER ARM, IN	進氣搖臂	1	
3	14436-MAX-01	SCREW, TAPPET ADJUSTING	挺桿調整螺絲	4	
4	14437-MAX-01	NUT, TAPPET ADJUSTING	挺桿調整螺帽	4	
5	14441-MAX-00	ROCKER ARM, EX	排氣搖臂	1	
6	14450-MAX-00	SHAFT, ROCKER ARM	搖臂軸	2	
7	14451-MAX-00	PLATE, ROCKER SHAFT	搖臂軸擋板	1	
8	14711-MAX-00	VALVE, IN	進氣閥門	2	
9	14721-MAX-00	VALVE, EX	排氣閥門	2	
10	14731-MAX-00	SEAL, VALVE STEM	閥門徑封	4	
11	14741-MAX-00	SPRING SEAT	閥彈簧座	4	
12	14751-MAX-00	SPRING, VALVE OUTER	閥門外彈簧	4	
13	14761-MAX-00	SPRING, VALVE INNER	閥門內彈簧	4	
14	14771-MAX-00	RETAINER, VALVE SPRING	閥彈簧蓋	4	
15	14781-GAT-00	COTTER, VALVE	閥門鎖扣	8	
16	94706-06025-B	BOLT	搖臂軸螺栓	2	
17	96411-06025-B	BOLT, FLANGE	凸緣螺栓	1	
18	97201-131905	WASHER, PLATE	平面墊圈	4	

CAM CHAIN, TENSIONER 內鏈條、拉力桿

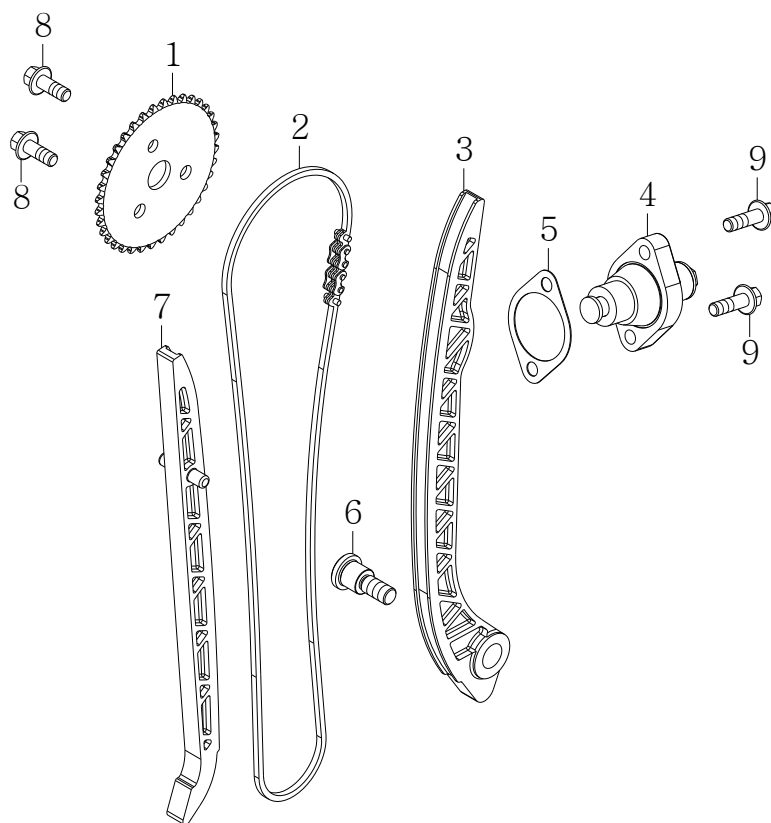


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	14111-MAX-00	SPROCKET, CAMSHAFT	凸輪軸鏈輪	1	
2	14501-MAX-00	CHAIN, CAM	凸輪軸內鏈條	1	
3	14510-MAX-00	TENSIONER, CAM CHAIN	鏈條拉力桿	1	
4	14520-MAX-00	LIFTER ASSY, TENSIONER	鏈條調整器	1	
5	14523-MAX-00	GASKET, TENSIONER LIFTER	鏈條調整器墊片	1	
6	14531-MAX-00	PIVOT, CAM CHAIN TENSIONER	拉力桿螺絲	1	
7	14560-MAX-00	GUIDE COMP, CAM CHAIN	鏈條導件	1	
8	94714-06012-K	BOLT, FLANGE	凸輪軸鏈輪螺栓	3	
9	96411-06020-B	BOLT, FLANGE	凸緣螺栓	2	

CRANKCASE 曲軸箱

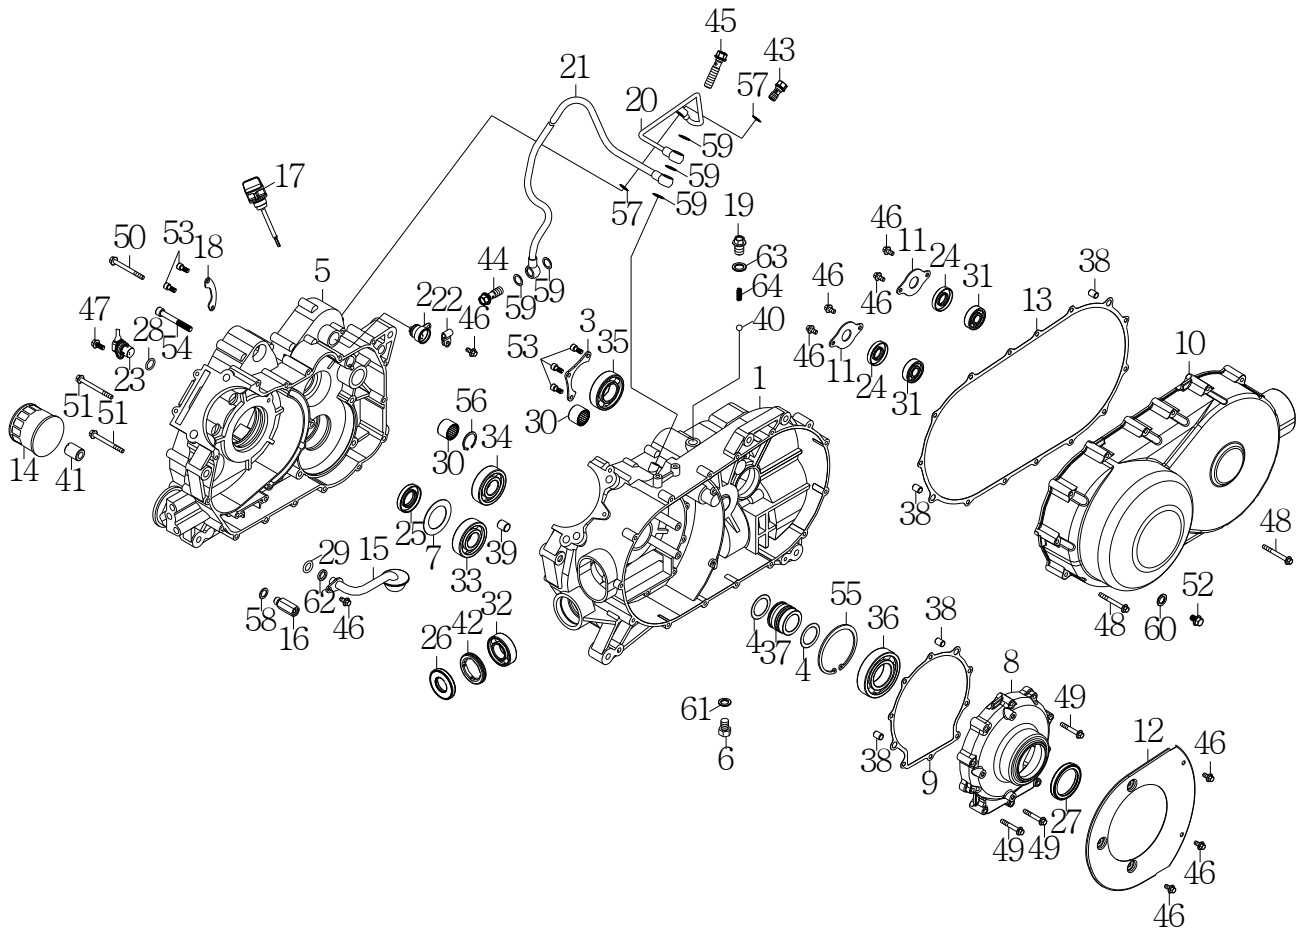


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	15111-MAX-00	LEFT CRANKCASE COMP	1	左曲軸箱組
2	15130-MAX-00	SELECTOR SWITCH	1	檔位開關組
3	15174-MAX-00	PLATE, BEARING COVER	1	軸承壓板
4	15175-MAX-00	SEAL	2	密封環
5	15211-MAX-00	RIGHT CRANKCASE COMP	1	右曲軸箱組
6	15223-MAX-00	BOLT ASSY DRAIN PLUG	1	洩油螺栓
7	15228-MAX-00	SEPARATOR	1	油封擋片
8	15321-MAX-00	COVER, CLUTCH	1	離合器蓋
9	15353-MAX-00	GASKET, CLUTCH COVER	1	離合器蓋墊片
10	15411-MAX-00	COVER, CVT	1	CVT側蓋
11	15428-MAX-00	PLATE, BEARING COVER	2	油封固定板
12	15431-MAX-00	PLATE-CVT COOLING FAN	1	冷卻風扇隔板
13	15481-MAX-00	GASKET, CVT COVER	1	CVT蓋墊片
14	15533-MAX-00	OIL FILTER ASSY	1	機油過濾器
15	15536-MAX-01	SCREW, OIL FILTER	1	機油濾網
16	15556-MAX-00	RELIEF VALVE ASSY	1	釋壓閥
17	15561-MAX-01	GAUGE OIL LEVEL ASSY	1	量油尺組
18	24221-MAX-00	RETAINER PLATE, DRUM	1	變速筒壓板
19	24228-MAX-01	BOLT, FLANGE	1	換檔定位螺栓
20	43322-MAX-00	OIL DELIVERY PIPE 1	1	機油管1
21	43324-MAX-00	OIL DELIVERY PIPE 2	1	機油管2
22	43327-MAX-00	CLAMP, OIL DELIVERY PIPE 1	1	機油管1承座

CRANKCASE 曲軸箱

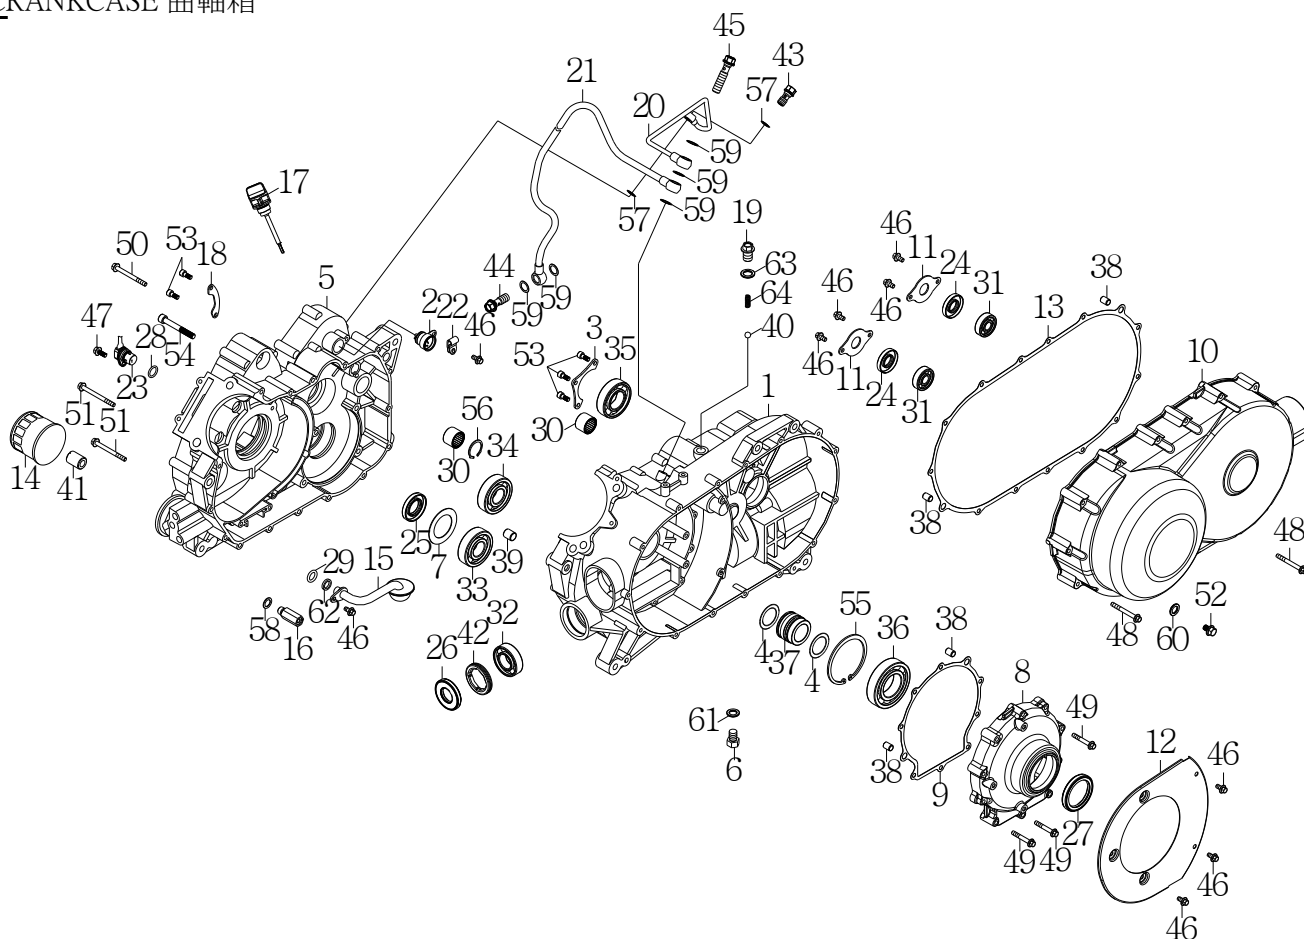


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
23	61520-CGV-00	VELOCITY SENSOR	速度感應器	1	
24	93110-17407	OIL SEAL	油封	2	
25	9311V-25455	OIL SEAL	油封	1	
26	9311V-35578	OIL SEAL	油封	1	
27	9311V-48628	OIL SEAL	油封	1	
28	9321V-25150	O-RING	護油圈	1	
29	9321V-35125	O-RING	護油圈	1	
30	93310-2230200	NEEDLE BEARING	滾針軸承	2	
31	93320-174012BBL	BALL BEARING	滾珠軸承	2	
32	93320-255215	BALL BEARING	滾珠軸承	1	
33	93320-256217	BALL BEARING	滾珠軸承	1	
34	93320-256217U	BALL BEARING	滾珠軸承	1	
35	93320-306216	BALL BEARING	滾珠軸承	1	
36	93320-4080183	BALL BEARING	滾珠軸承	1	
37	93510-304834	COLLAR, CARRIER	離心離合器軸環	1	
38	94410-10014	PIN, DOWEL	定位銷	4	
39	94410-14020	PIN, DOWEL	定位銷	2	
40	94520-09500	BALL	鋼珠	1	
41	94710-20027-C	SCREW, OIL FILTER	機油濾清器螺栓	1	
42	94710-55005-B	BEARING RETAINER	軸承栓塞	1	
43	94716-10022-G	BOLT, UNION	接合螺栓	1	
44	94716-14028-B	BOLT, UNION	油管螺栓	1	

CRANKCASE 曲軸箱

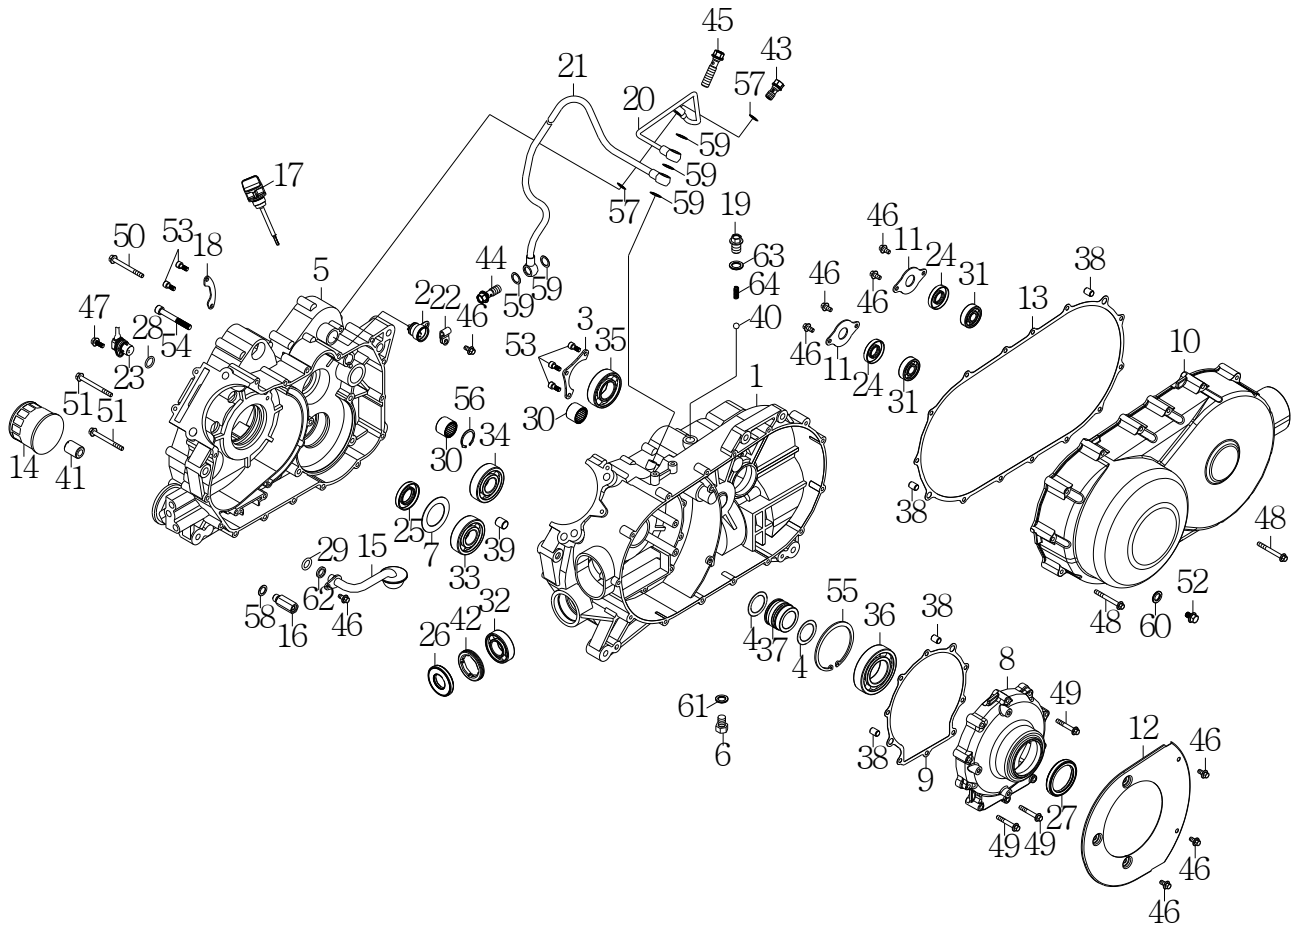


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
45	94716-14050-B	BOLT, UNION	1	油管螺栓
46	96411-06012-B	BOLT, FLANGE	11	凸緣螺栓
47	96411-06016-B	BOLT, FLANGE	1	凸緣螺栓
48	96411-06055-B	BOLT, FLANGE	15	凸緣螺栓
49	96412-06040-B	BOLT, FLANGE	10	凸緣螺栓
50	96412-06065-B	BOLT, FLANGE	10	凸緣螺栓
51	96412-06070-B	BOLT, FLANGE	2	凸緣螺栓
52	96414-08012-B	BOLT, FLANGE	1	凸緣螺栓
53	96510-06016-B	BOLT, SOCKET	5	六角承窩螺栓
54	96510-08065-B	BOLT, SOCKET	5	六角承窩螺栓
55	97012-80025-K	CIRCLIP	1	C形內扣環
56	97013-30012-K	CIRCLIP	1	同心內扣環
57	97230-101512	WASHER, COPPER	2	銅墊圈
58	97230-121810	WASHER, COPPER	1	銅墊圈
59	97230-142015	WASHER, COPPER	5	銅墊圈
60	97231-081620	WASHER, ALUMINUM	1	鋁墊圈
61	97231-122020	WASHER, ALUMINUM	1	鋁墊圈
62	97231-131830	WASHER, ALUMINUM	1	鋁墊圈
63	97231-142210	WASHER, ALUMINUM	1	鋁墊圈
64	97501-1008023	SPRING, COMPRESSION	1	定檔位彈簧

RIGHT CRANKCASE COVER 右曲軸箱蓋

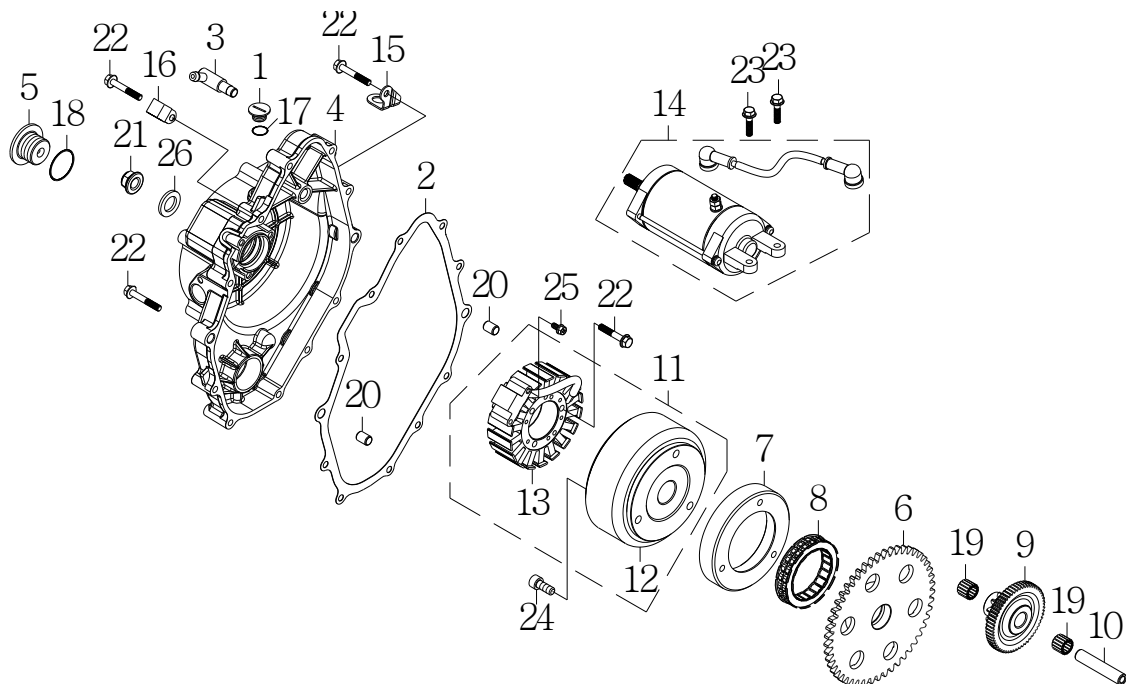


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	12655-ROA-00	CAP, A.C.G	1	A.C.G蓋
2	15221-MAX-00	GASKET, R CRANKCASE COVER	1	右曲軸箱蓋墊片
3	15271-MAX-00	BREATHER	1	通氣管接頭
4	15511-MAX-01	COVER, R CRANKCASE COMP	1	右曲軸箱蓋
5	15533-GAT-00	CAP, TAPPET ADJUSTING HOLE	1	濾油網螺帽蓋
6	23524-MAX-01	STARTING CLUTCH GEAR COMP	1	起動輪組件
7	23574-MAX-00	CLUTCH OUTER RACE	1	起動離合器外環
8	23575-MAX-00	ONEWAY CLUTCH	1	起動離合器
9	23612-MAX-01	START REDUCTION GEAR	1	起動減速齒輪
10	23663-MAX-00	SHAFT, REDUCTION GEAR	1	起動減速齒輪軸
11	35500-MAX-00I	GENERATOR ASSEMBLY	1	發電機總成
12	35550-MAX-00I	FLYWHEEL COMP	1	轉子總成
13	35560-MAX-00	STATOR COMP	1	發電機座總成
14	35800-MAX-00	MOTOR ASSY, STARTER	1	起動馬達總成
15	41147-MAX-00	BRACKET, BRAKE SWITCH	1	剎車開關托架
16	43329-MAX-00	CLAMP, OIL DELIVERY PIPE	1	機油管2承座
17	93210-25138	O-RING	1	護油圈
18	9321V-35300	O-RING	1	護油圈
19	93310-1216158	NEEDLE BEARING	2	滾針軸承
20	94410-10014	PIN, DOWEL	2	定位銷
21	95401-142114-B	NUT, FLANGE	1	凸緣螺帽
22	96412-06040-B	BOLT, FLANGE	14	凸緣螺栓

RIGHT CRANKCASE COVER 右曲軸箱蓋

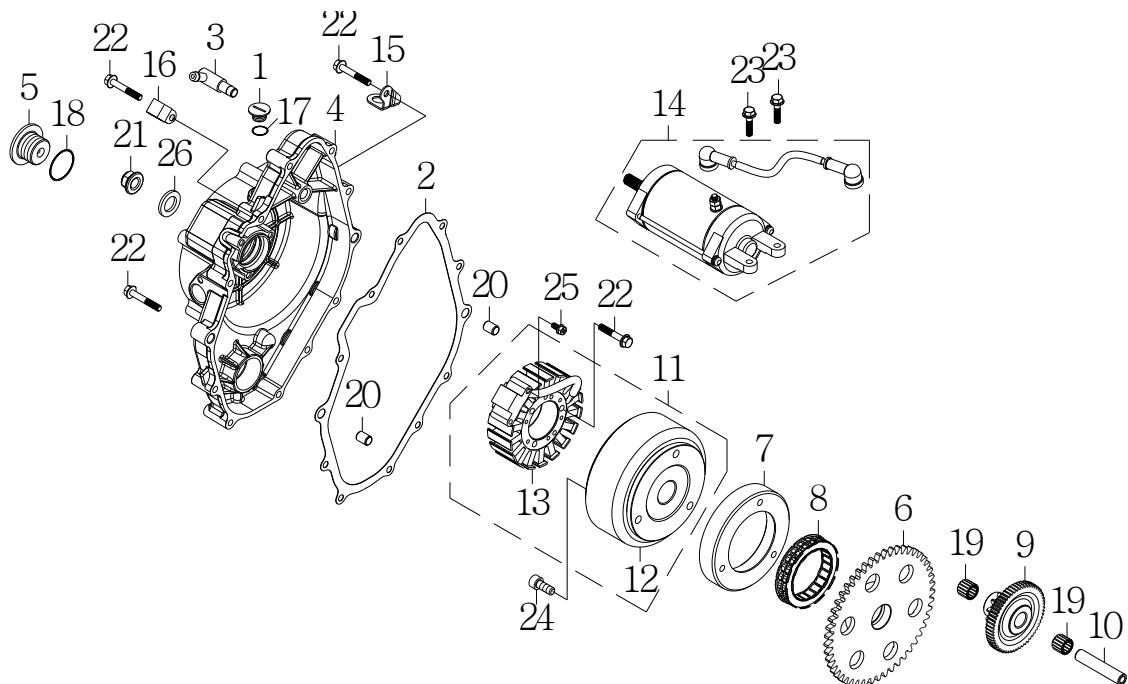


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	QTY 用量	NOTE 備註
23	96414-06020-B	BOLT, FLANGE	2	凸緣螺栓
24	96510-08023-B	BOLT, SOCKET	3	六角承窩螺栓
25	96612-05012-B	BOLT, HEXAGON WITH WASHER	2	六角十字穴螺栓附墊圈
26	97201-143040	WASHER, PLATE	1	平面墊圈

GEAR SHIFT 變速機構

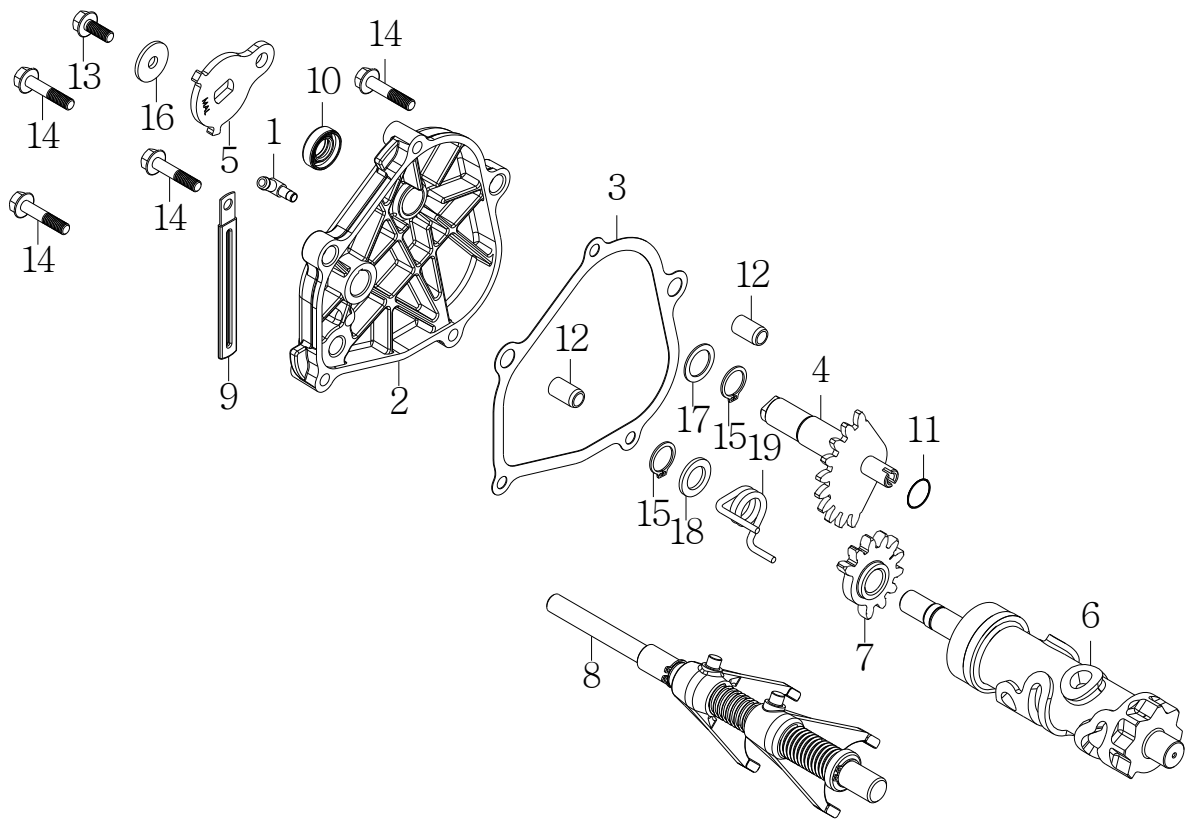


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	11146-JOW-01	BREATHER	1	通風管接頭
2	15311-MAX-01	COVER, GEARBOX	1	變速箱蓋
3	15351-MAX-00	GASKET, GEARBOX COVER	1	變速箱蓋墊片
4	24201-MAX-00	MANUAL SHIFT SPINDLE COMP	1	變速桿組
5	24206-MAX-01	SHIFT LEVER	1	變速拉桿
6	24220-MAX-00	GEAR SHIFT, DRUM	1	齒輪變速筒
7	24226-MAX-00	DRIVEN GEAR, DRUM	1	變速筒齒輪
8	24230-MAX-00	FORK SHIFT COMP	1	變速叉軸組
9	91112-10100-B	FOLDER	1	導線軟勾
10	93110-15257	OIL SEAL	1	油封
11	93210-16100	O-RING	1	護油圈
12	94410-10014	PIN, DOWEL	2	定位銷
13	96414-06016-B	BOLT, FLANGE	1	凸緣螺栓
14	96414-06032-B	BOLT, FLANGE	5	凸緣螺栓
15	97010-15010-K	CIRCLIP	2	C形扣環
16	97201-062220-B	WASHER, PLATE	1	平面墊圈
17	97201-152110-K	WASHER, PLATE	1	平面墊圈
18	97201-152420	SPACER, RETURN SPRING	1	回復彈簧墊塊
19	97510-321652	SHIFT DRIVE SPRING	1	換檔驅動彈簧

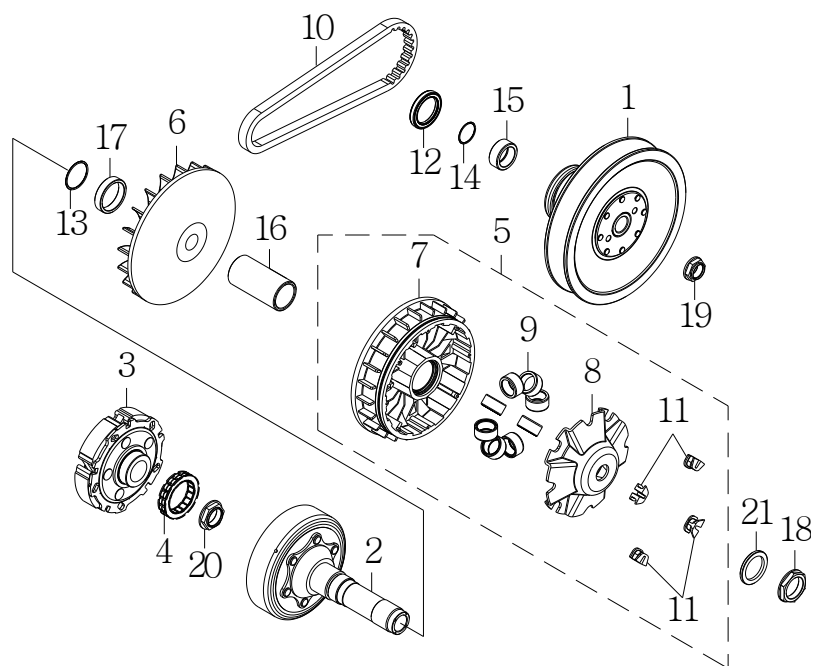


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	Q'TY 用量	NOTE 備註
1	25602-MAX-00	DRIVEN SHEAVE ASSY	1	副槽輪總成
2	25610-MBX-00A	CLUTCH HOUSING COMP	1	離合器環軸組
3	25620-MBX-00	CLUTCH CARRIER ASSY	1	離心離合器總成
4	25635-MAX-00	ONE-WAY CLUTCH, ENGINE BRAKE	1	引擎剎車單向離合器
5	25700-MAX-00	PRIMARY SHEAVE ASSY	1	主滑動槽輪總成
6	25711-MAX-00	SHEAVE, PRIMARY FIXED	1	主固定槽輪
7	25720-MAX-00	PRIMARY SHEAVE COMP	1	主滑動槽輪整體
8	25723-MAX-00	CAM PLATE	1	凸輪板
9	25732-MAX-00	WEIGHT ROLLER	8	重錘滾子
10	25741-MAX-00	BELT, CVT	1	皮帶
	25741-MAX-01	BELT, CVT	1	皮帶
11	25753-MAX-00	SLIDER	4	滑件
12	9311V-38527	SEAL	1	油封
13	9321V-19364	O-RING	1	護油圈
14	9321V-24274	O-RING	1	護油圈
15	93510-283815	COLLAR, SLIDE	1	主驅動軸軸套
16	93510-344285	COLLAR, SLIDE	1	主滑動槽輪襯套
17	93510-404811	COLLAR, CLUTCH HOUSING	1	離合器環軸軸套
18	95401-323909-B	NUT, PLATE	1	凸輪板螺帽
19	95411-202712-B	NUT	1	副槽輪螺帽
20	95411-253211-B	NUT, CLUTCH CARRIER ASSY	1	離心離合器螺帽
21	97201-344740-B	WASHER, PLATE	1	平面墊圈

TRANSMISSION SYSTEM 傳動系統

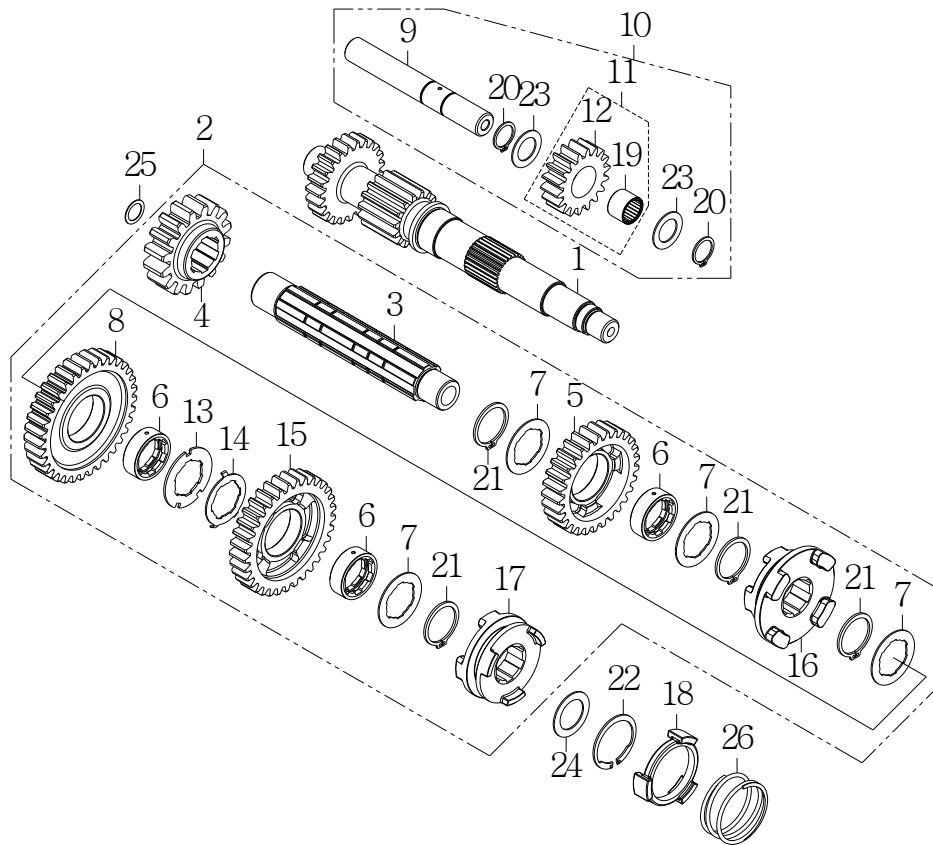


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	26111-MAX-01	GEAR, PRIMARY DRIVE	主驅動軸	1	
2	26410-MAX-02	MAIN AXLE COMP	惰輪軸總成	1	
3	26411-MAX-021A	AXLE IDLE ASSY	惰輪軸組	1	
4	26411-MAX-022	GEAR, IDLE	惰輪軸齒輪	1	
5	26412-MAX-02	GEAR, HIGH	高檔位齒輪	1	
6	26412-MAX-022	BUSHING	軸套	3	
7	26413-MAX-00	WASHER, SPLINE	齒輪墊圈	4	
8	26414-MAX-02	GEAR, LOW	低檔位齒輪	1	
9	26415-MAX-00	AXLE, IDLE GEAR	倒檔惰齒輪軸	1	
10	26415-MAX-00A	IDLE GEAR AXLE ASSY	倒檔惰齒輪軸總成	1	
11	26416-MAX-00	REVERSE IDLE GEAR COMP	倒檔惰齒輪組	1	
12	26416-MAX-001	IDLE GEAR, REVERSE	倒檔惰齒輪	1	
13	26423-MAX-00	WASHER, SPLINE	齒輪墊圈	1	
14	26424-MAX-00	WASHER, LOCK	制止墊圈	1	
15	26426-MAX-02	GEAR, REVERSE	倒檔齒輪	1	
16	26430-MAX-01	CLUTCH DOG, HIGH-LOW	高低檔離合齒	1	
17	26440-MAX-01	CLUTCH DOG, REVERSE-PARK	倒檔、停車檔離合齒	1	
18	26450-MAX-00	GEAR, PARK	停車檔位齒輪	1	
19	93310-1723160	NEEDLE BEARING	滾針軸承	1	
20	97010-17010-K	CIRCLIP	C形扣環	2	
21	97010-28015	CIRCLIP	C形扣環	4	
22	97014-40018-K	CIRCLIP	同心外扣環	1	

TRANSMISSION SYSTEM 傳動系統

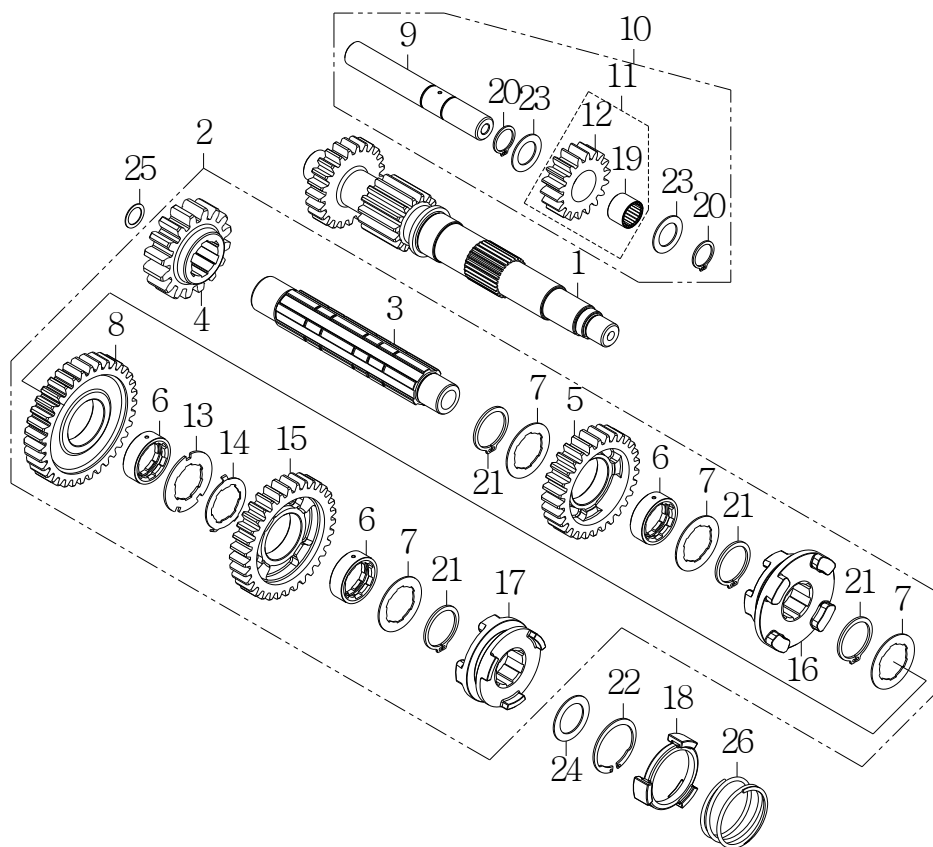


NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱	QTY 用量	NOTE 備註
23	97201-172710	WASHER, PLATE	2	平面墊圈
24	97201-223310	WASHER, PLATE	1	平面墊圈
25	97201-253810	WASHER, PLATE	1	平面墊圈
26	97501-2646018	SPRING, COMPRESSION	1	壓縮彈簧

OUTPUT SHAFT 傳輸軸

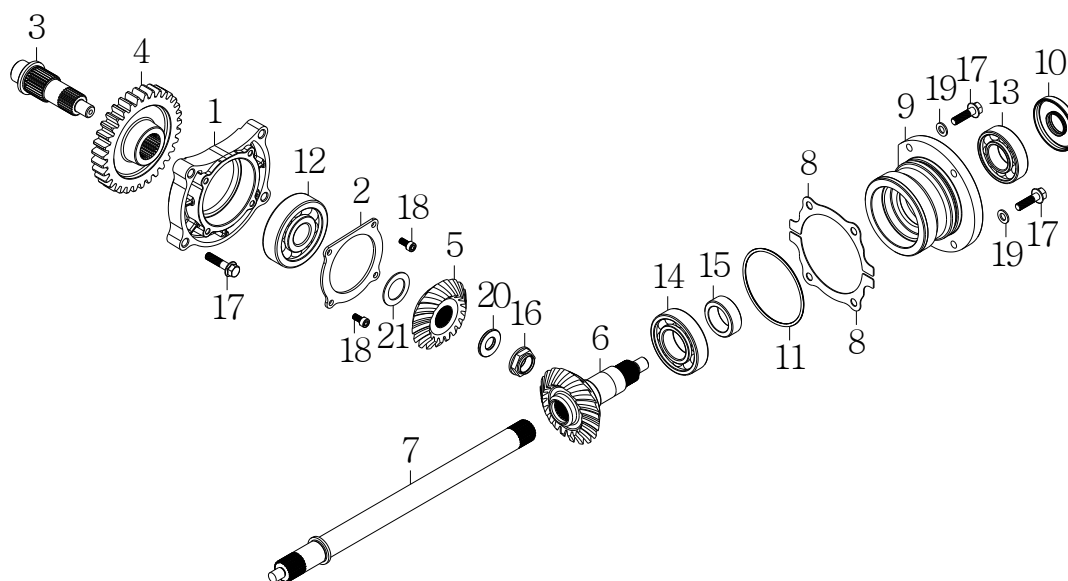

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
1	15371-MAX-00	HOUSING, BEVEL BEARING	傳動軸軸承座	1	
2	15374-MAX-00	RETAINER, BEVEL BEARING	軸承壓板	1	
3	26421-MAX-01	DRIVEN SHAFT	傳動軸	1	
4	26422-MAX-01	DRIVEN GEAR	傳動軸齒輪	1	
5	26460-MAX-00	BEVEL GEAR, DRIVE	驅動傘齒輪	1	
6	26470-MAX-00	BEVEL GEAR, DRIVEN	傳動斜齒輪	1	
7	26471-MAX-00	OUTPUT SHAFT	傳輸軸	1	
8	26473-MAX-00A	SHIM, BEVEL GEAR	傳動斜齒輪填隙片	2	
	26473-MAX-00B	SHIM, BEVEL GEAR	傳動斜齒輪填隙片	2	
	26473-MAX-00C	SHIM, BEVEL GEAR	傳動斜齒輪填隙片	2	
	26473-MAX-00D	SHIM, BEVEL GEAR	傳動斜齒輪填隙片	2	
	26473-MAX-00E	SHIM, BEVEL GEAR	傳動斜齒輪填隙片	2	
9	26476-MAX-00	HOUSING, OUTPUT SHAFT	傳輸軸殼	1	
10	9311V-40628	SEAL	油封	1	
11	9321V-31860	O-RING	護油圈	1	
12	93320-258021	BALL BEARING	滾珠軸承	1	
13	93320-306216	BALL BEARING	滾珠軸承	1	
14	93320-357217	BALL BEARING	滾珠軸承	1	
15	93510-304325	COLLAR	傳輸軸殼隔管	1	
16	95411-202712-B	NUT	副槽輪螺帽	1	
17	96414-08035-B	BOLT, FLANGE	凸緣螺栓	8	
18	96510-06016-B	BOLT, SOCKET	六角承窩螺栓	4	

OUTPUT SHAFT 傳輸軸

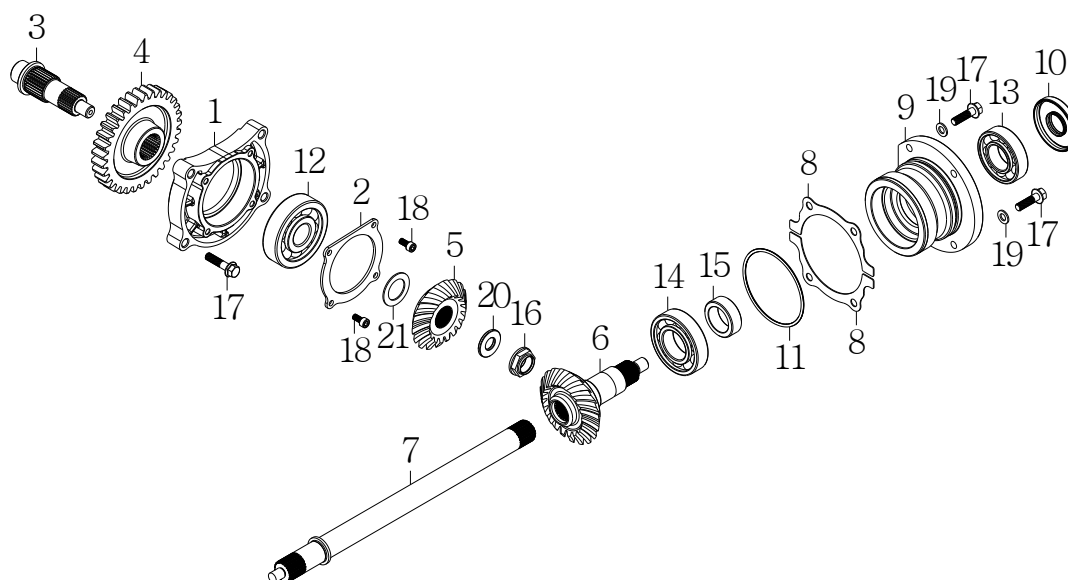

NO. 項目	PARTS NO. 零件號碼	PARTS NAME 零件名稱		Q'TY 用量	NOTE 備註
19	97201-081823-B	WASHER, PLATE	平面墊圈	4	
20	97201-203230-B	WASHER, PLATE	平面墊圈	1	
21	97201-253913	SHIM, DRIVE BEVEL GEAR	驅動傘齒輪填隙片	1	
	97201-253914	SHIM, DRIVE BEVEL GEAR	驅動傘齒輪填隙片	1	
	97201-253915	SHIM, DRIVE BEVEL GEAR	驅動傘齒輪填隙片	1	
	97201-253916	SHIM, DRIVE BEVEL GEAR	驅動傘齒輪填隙片	1	
	97201-253917	SHIM, DRIVE BEVEL GEAR	驅動傘齒輪填隙片	1	

2011.03.31

26471-MAX-00B

NOTE: 1) parts no. will be updated promptly by SMC, if necessary.
2) please select your suitable parts as model you have.
3) strongly recommend to re-confir parts with sales department.
4) please remark the color if necessary.